

Kinetix 3 Component Servo Drives

Catalog Numbers 2071-AP0, 2071-AP1, 2071-AP2, 2071-AP4, 2071-AP8, 2071-A10, 2071-A15



Important User Information

Solid-state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls (publication [SGL-1.1](#) available from your local Rockwell Automation sales office or online at <http://www.rockwellautomation.com/literature/>) describes some important differences between solid-state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid-state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



WARNING: Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence



SHOCK HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



BURN HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.

IMPORTANT Identifies information that is critical for successful application and understanding of the product.

Allen-Bradley, Kinetix, LDC-Series, LDL-Series, MicroLogix, MP-Series, Rockwell Automation, Rockwell Software, RSLogix 500, RSLogix 5000, TechConnect, and TL-Series are trademarks of Rockwell Automation, Inc.
Trademarks not belonging to Rockwell Automation are property of their respective companies.

Preface	About This Publication.....7
	Who Should Use This Manual.....7
	Conventions Used in This Manual.....7
	Additional Resources.....8
	Chapter 1
Start	Introduction.....9
	About the Kinetix 3 Drive System.....10
	Catalog Number Explanation.....12
	Agency Compliance.....12
	CE Requirements.....12
	Chapter 2
Installing the Kinetix 3 Drive System	Introduction.....13
	System Design Guidelines.....13
	System Mounting Requirements.....13
	Fuse Selection.....14
	Sizing the Enclosure.....15
	Minimum Clearance Requirements.....16
	Electrical Noise Reduction.....17
	Bonding Drives.....17
	Bonding Multiple Subpanels.....19
	Establishing Noise Zones.....20
	Cable Categories for Kinetix 3 Drive Components.....21
	Noise Reduction Guidelines for Drive Accessories.....21
	Mount Your Kinetix 3 Drive.....22
	Chapter 3
Kinetix 3 Drive Connector Data	Introduction.....23
	Kinetix 3 Drive Connectors and Indicators.....24
	I/O (IOD) Connector Pinout.....26
	Motor Feedback (MF) Connector Pinout.....27
	Input Power Connector Pinout.....28
	Shunt Resistor Connector Pinout.....28
	Motor Power Connector Pinout.....28
	Motor Feedback Specifications.....29
	Motor Feedback Specifications.....30
	Feedback Power Supply.....33
	Control Signal Specifications.....34
	Digital Inputs.....34
	Digital Outputs.....37
	Analog Inputs.....40
	Analog Outputs.....41
	Serial Interface Connection.....43

Connecting the Kinetix 3 Drive	Chapter 4	
	Introduction	45
	Understanding Basic Wiring Requirements.....	45
	Building Your Own Cables	46
	Routing Power and Signal Wiring.....	46
	Determining Your Type of Input Power	47
	Three-phase Power Wired to Three-phase Drives.....	47
	Single-phase Power Wired to Single-phase Drives.....	49
	Isolation Transformer in Grounded Power Configurations.....	49
	Three-phase Power Wired to Single-phase Drives.....	50
	Grounding Your Kinetix 3 Drive	51
	Grounding Your System to the Subpanel	51
	Power Wiring Requirements	53
	Shunt Resistor Power Wiring Requirement	54
	Wiring Guidelines.....	54
	Wiring the Kinetix 3 Drive Connectors	55
	Wire the Input Power (IPD) and Motor Power (MP) Connectors	55
	Shunt Resistor.....	61
	Apply the Motor Cable Shield Clamp	62
	Feedback and I/O Cable Connections.....	63
	Flying-lead Feedback Cable Pin-outs	64
	Wiring the I/O Connector	66
	Wiring the Feedback Connector.....	67
	Connecting Premolded Motor Feedback Cables.....	67
	Wiring the Feedback Breakout Board.....	68
	Serial Communication Cable Connections	70
Configure and Start Up the Kinetix 3 Drive	Chapter 5	
	Introduction	73
	Keypad Input	73
	Status Display/Operation Mode	75
	Download Ultraware Software.....	78
	Configuring the Communication Port	78
	Configure Your Kinetix 3 Drive for RS-232 Communication with Personal Computer	79
	Configure Your Kinetix 3 Drive for RS-485 Communication with MicroLogix Controller.....	80
	Apply Power to Your Kinetix 3 Drive	82
	Detect Your Kinetix 3 Drive.....	83
	Understanding the Workspace and Drive Branches.....	84
	Select a Motor.....	87
	Tune Your Motor	88
	Configure Displayed Units	90
	Test Your Motor (non-indexing move).....	91
	Test Your Motor (indexing move).....	92

Maintaining and Troubleshooting Your Kinetix 3 Servo Drive	Chapter 6	
	Introduction.....	95
	Safety Precautions.....	95
	Maintaining Your Kinetix 3 Drive.....	96
	General Troubleshooting.....	96
	Overtravel Condition.....	96
	Fault Codes.....	97
	Warning Messages.....	97
	Error Displays.....	98
Specifications and Dimensions	Appendix A	
	Introduction.....	103
	Kinetix 3 Drive Power Specifications	104
	Fuse/Contactor Specifications	105
	Power Dissipation Specifications	106
	General Specifications	106
	Maximum Feedback Cable Lengths	106
	Weight Specifications.....	107
	Certifications	107
	Environmental Specifications.....	107
	AC Line Filter Specifications.....	108
	Replacement Battery Specifications	108
	Product Dimensions.....	109
Interconnect Diagrams	Appendix B	
	Introduction.....	111
	Interconnect Diagram Notes.....	112
	Power Wiring Examples	113
	Kinetix 3 Drive/Rotary Motor Wiring Examples.....	114
	Kinetix 3 Drive/Linear Motor and Actuator Wiring Examples ..	115
	Kinetix 3 Drive/Micrologix Controller Wiring Examples	117
	Motor Brake Currents	118
	Index	

Notes:

About This Publication

This manual provides detailed installation instructions for mounting, wiring, and troubleshooting your Kinetix 3 drive, and system integration for your drive/motor combination with a MicroLogix controller.

Who Should Use This Manual

This manual is intended for engineers or technicians directly involved in the installation and wiring of the Kinetix 3 drive and programmers directly involved in operation, field maintenance, and integration of the Kinetix 3 drive.

If you do not have a basic understanding of the Kinetix 3 drive, contact your local Rockwell Automation sales representative for information on available training courses.

Conventions Used in This Manual

The conventions starting below are used throughout this manual.

- Bulleted lists such as this one provide information, not procedural steps
- Numbered lists provide sequential steps or hierarchical information

Additional Resources

These documents contain additional information concerning related Rockwell Automation products.

Resource	Description
Kinetix 3 Component Servo Drive Installation Instructions, publication 2071-IN001	Information on installing your Kinetix 3 drive system.
Kinetix 3 I/O Breakout Board Installation Instructions, publication 2071-IN002	Information on installing and wiring the Kinetix 3 I/O breakout board.
Kinetix 3 Feedback Breakout Board Installation Instructions, publication 2071-IN003	Information on installing and wiring the Kinetix 3 feedback breakout board.
Serial Communication Cables Installation Instructions, publication 2090-IN019	Information on installing and schematics for the serial communication cables used with Kinetix 3 drive.
MicroLogix 1100 Programmable Controllers User Manual, publication 1763-UM001	Information on how to install, wire, and troubleshoot your controller.
MicroLogix 1400 Programmable Controllers User Manual, publication 1766-UM001	Information on how to install, wire, and troubleshoot your controller.
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	Provides general guidelines for installing a Rockwell Automation industrial system.
Kinetix 3 Component Servo Drive Serial Host Command Reference Manual, publication 2071-RM001	Information on the serial communication commands, both ASCII and ModBus-RTU, for interfacing a motion controller with the Kinetix 3 drive.
Ultraware Software User Manual, publication 2098-UM001	Information on Ultraware software used to configure and operate Kinetix 3 drives, or when designing, testing or running C language programs or cam tables on these drives.
Product Certifications website, http://www.ab.com	Provides declarations of conformity, certificates, and other certification details.
System Design for Control of Electrical Noise Reference Manual, publication GMC-RM001	Information, examples, and techniques designed to minimize system failures caused by electrical noise.
Kinetix Motion Control Selection Guide, publication GMC-SG001	Specifications, motor/servo-drive system combinations, and accessories for Kinetix motion control products.
Motion Analyzer CD, download at http://www.ab.com/motion/software/analyzer_download.html	Drive and motor sizing with application analysis software.
Rockwell Automation Configuration and Selection Tools, website http://www.ab.com/e-tools	Online product selection and system configuration tools, including AutoCAD (DXF) drawings.
Rockwell Automation Product Certification, website http://www.rockwellautomation.com/products/certification	For declarations of conformity (DoC) currently available from Rockwell Automation.
National Electrical Code, published by the National Fire Protection Association of Boston, MA	An article on wire sizes and types for grounding electrical equipment.
Rockwell Automation Industrial Automation Glossary, publication AG-7.1	A glossary of industrial automation terms and abbreviations.

You can view or download publications at <http://www.rockwellautomation.com/literature>. To order paper copies of technical documentation, contact your local Rockwell Automation distributor or sales representative.

Start

Introduction

Use this chapter to become familiar with the Kinetix 3 drive components. This chapter also reviews design and installation requirements for Kinetix 3 drive systems.

Topic	Page
Introduction	9
About the Kinetix 3 Drive System	10
Agency Compliance	12

About the Kinetix 3 Drive System

The Kinetix 3 component servo drive is designed to provide a solution for applications with output power requirements between 0.6...9.9A rms (50...1500 W).

Table 1 - Kinetix 3 Drive System Overview

Kinetix 3 System Component	Cat. No.	Description
Kinetix 3 component servo drive	2071-Axxx	Kinetix 3 component servo drives are available with 230V AC input power.
AC line filters	2090-XXLF-TC316 and 2090-XXLF-TC116	2090-XXLF-TC316 three-phase or 2090-XXLF-TC116 single-phase AC line filters are required to meet CE and available for use in 230V systems.
Limited I/O adaptor board	2071-TBIO	24-pin breakout board. Use with the Kinetix 3 drives (IOD connector) or for control interface connections it accesses 24 of the 50 pins of the I/O connector.
Motor feedback adaptor board	2071-TBMF	20-pin breakout board. Use with the Kinetix 3 drives (MF connector) or for motor feedback connections.
Ultraware software	2098-UWCPRG	Kinetix 3 drives are configured by using Ultraware Version 1.80 or higher.
3.6V Battery	Customer supplied	3.6 Volt lithium battery necessary for absolute positioning with the TL-Series motors.
Rotary servo motors	TL-Series	TL-Series motors are available for use with the Kinetix 3 drive. Important: Other motors can be used with a Kinetix 3 drive, as long as they include incremental encoder feedback and Hall signals).
Linear actuators	MP-Series and TL-Series	Compatible actuators include MP-Series direct drive 230V integrated linear stages and TL-Series electric cylinders.
Linear motors	LDC-Series and LDL-Series	Compatible linear motors include LDC-Series and LDL-Series 230V linear motors.
Cables	TL-Series motor power, feedback, and brake cables	Motor power, feedback, and brake cables include quick connect/quick-release connectors at the motor. Power and brake cables have flying leads on the drive end and connectors that connect to servo motors. Standard feedback cables have angled, molded connectors on the drive end and connectors that connect to servo motors. Drive mounted connector kits are also available.
MicroLogix 1100/1200/1400/1500 platforms	1763-L16xxx 1766-L32xxx 1762-L24xxx 1762-L40xxx, 1764-24xxx 1764-28xxx	MicroLogix 1100 and 1400 programmable logic controllers with Modbus-RTU allow simple PLC-based motion solutions with the Kinetix 3 drive. In addition MicroLogix 1200 and 1500 programmable logic controllers with pulse train outputs (PTO) can be used.
RSLogix 500 software	9324-RL0300ENE	RSLogix 500 provides support for programming, commissioning, and maintaining the SLC 500 and MicroLogix controller families.
Serial communication cables	2090-CCMPCDS-23AAxx 2090-CCMCNDS-48AAxx 2090-CCMDSDS-48AAxx	Serial communication cables provide an interface between your system components by using RS-232 or RS-485 protocols.

Figure 1 - Typical Configuration - Kinetix 3 Servo Drive System


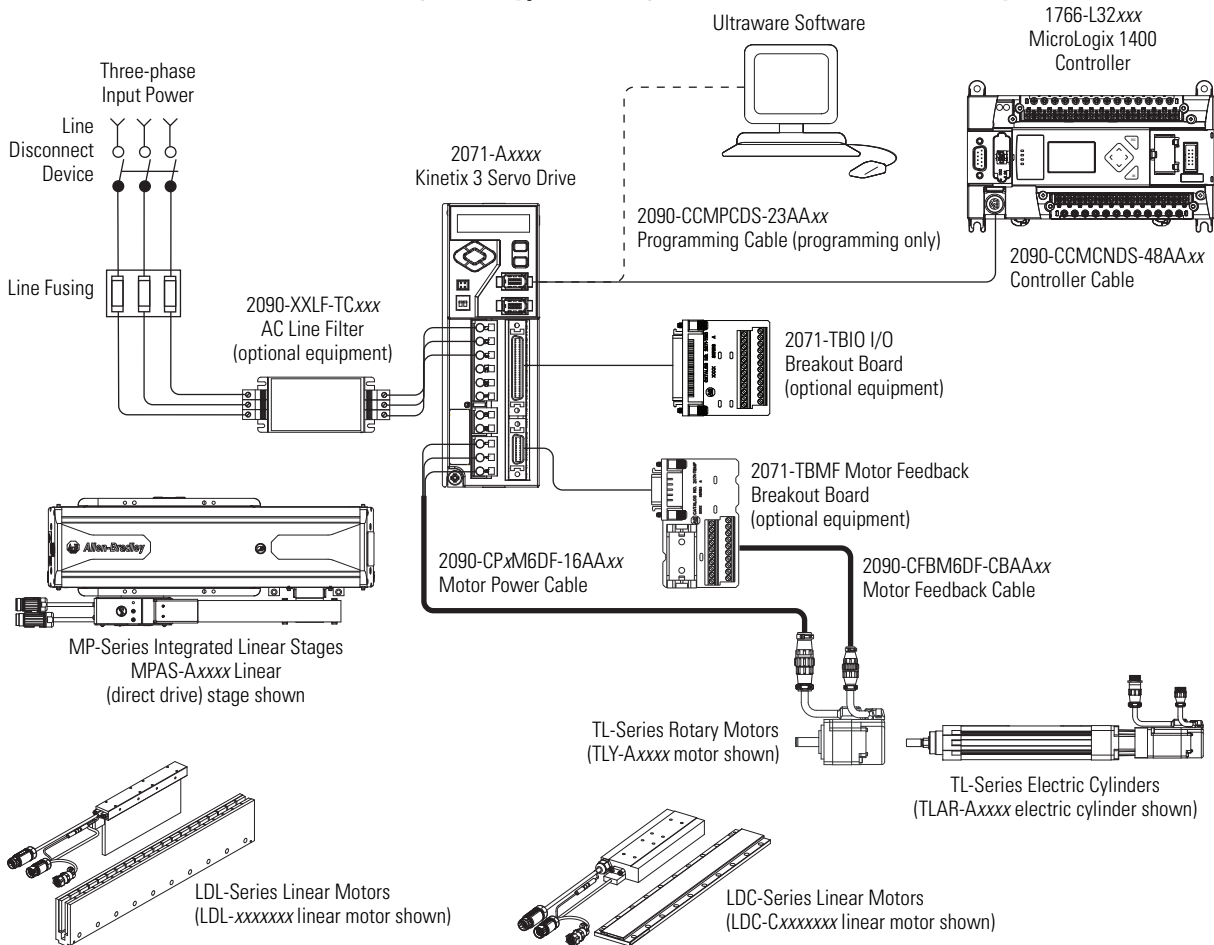


Figure 2 - Typical Configuration - Kinetix 3 Servo Drive System (alternate configurations)

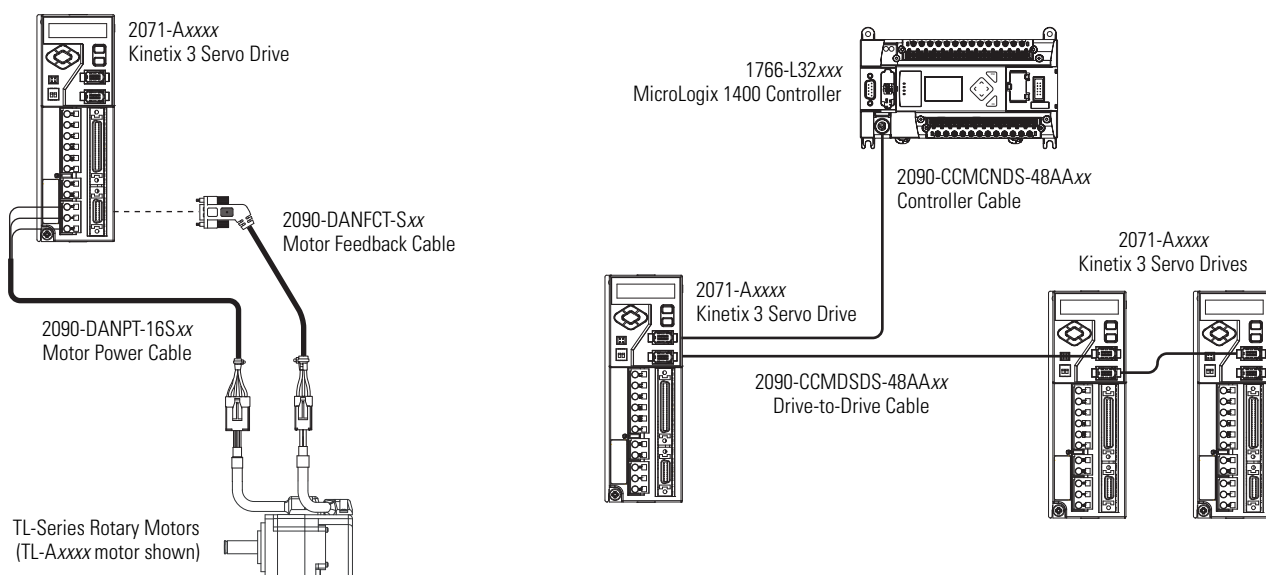

Catalog Number Explanation

Kinetix 3 drive catalog numbers and descriptions are listed in the table.

Table 2 - Kinetix 3 Drive Catalog Numbers

Cat. No.	Component Servo Drives
2071-AP0	Kinetix 3, 230V AC, 1 Ø, 0.6 A
2071-AP1	Kinetix 3, 230V AC, 1 Ø, 1.1 A
2071-AP2	Kinetix 3, 230V AC, 1 Ø, 1.7 A
2071-AP4	Kinetix 3, 230V AC, 1 Ø, 3.3 A
2071-AP8	Kinetix 3, 230V AC, 1 or 3 Ø, 5.0 A
2071-A10	Kinetix 3, 230V AC, 3 Ø, 7.0 A
2071-A15	Kinetix 3, 230V AC, 3 Ø, 9.9 A

Agency Compliance

If this product is installed within the European Union and has the CE mark, the following regulations apply.



ATTENTION: Meeting CE requires a grounded system, and the method of grounding the AC line filter and drive must match. Failure to do this renders the filter ineffective and may cause damage to the filter. For grounding examples, refer to [Grounding Your Kinetix 3 Drive](#) on [page 51](#).

For more information on electrical noise reduction, refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#).

CE Requirements

To meet CE requirements, these requirements apply:

- Install an AC line filter (catalog number 2090-XXLF-TCxxx) as close to the drive as possible.
- Use 2090 series motor power cables and terminate the cable shields to the drive or subpanel.
- Use 2090 series motor feedback cables and properly terminate the feedback cable shield. Drive-to-motor feedback cables must not exceed 30 m (98.4 ft). Drive-to-motor power cables must not exceed 30 m (98.4 ft).
- Install the Kinetix 3 system inside an enclosure. Run input power wiring in conduit (grounded to the enclosure) outside of the enclosure. Separate signal and power cables.
- Segregate input power wiring and motor power cables from control wiring and motor feedback cables. Use shielded cable for power wiring and provide a grounded 360° clamp termination.

Refer to [Appendix B](#) on [page 113](#) for interconnect diagrams, including input power wiring and drive/motor interconnect diagrams.

Installing the Kinetix 3 Drive System

Introduction

This chapter describes system installation guidelines used in preparation for mounting your Kinetix 3 drive components.

Topic	Page
Introduction	13
System Design Guidelines	13
Electrical Noise Reduction	17
Mount Your Kinetix 3 Drive	22



ATTENTION: Plan the installation of your system so that you can perform all cutting, drilling, tapping, and welding with the system removed from the enclosure. Because the system is of the open type construction, be careful to keep any metal debris from falling into it. Metal debris or other foreign matter can become lodged in the circuitry, which can result in damage to components.

System Design Guidelines

Use the information in this section when designing your enclosure and planning to mount your system components on the panel.

For on-line product selection and system configuration tools, including AutoCAD (DXF) drawings of the product, refer to <http://www.ab.com/e-tools>.

System Mounting Requirements

- To comply with UL and CE requirements, the Kinetix 3 system must be enclosed in a grounded conductive enclosure offering protection as defined in standard EN 60529 (IEC 529) to IP55 such that they are not accessible to an operator or unskilled person. A NEMA 4X enclosure exceeds these requirements providing protection to IP66.
- The panel you install inside the enclosure for mounting your system components must be on a flat, rigid, vertical surface that will not be subjected to shock, vibration, moisture, oil mist, dust, or corrosive vapors.
- Size the drive enclosure so as not to exceed the maximum ambient temperature rating. Consider heat dissipation specifications for all drive components.

- Segregate input power wiring and motor power cables from control wiring and motor feedback cables. Use shielded cable for power wiring and provide a grounded 360° clamp termination.
- Use high-frequency (HF) bonding techniques to connect the enclosure, machine frame, and motor housing, and to provide a low-impedance return path for high-frequency (HF) energy and reduce electrical noise.
- Use 2090 series motor feedback cables or use connector kits and properly terminate the feedback cable shield. Drive-to-motor feedback cables must not exceed 30 m (98.4 ft). Drive-to-motor power cables must not exceed 30 m (98.4 ft).

IMPORTANT System performance was tested at these cable length specifications. These limitations are also a CE requirement.

Refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#), to better understand the concept of electrical noise reduction.

Fuse Selection

The Kinetix 3 drives use internal solid-state motor short-circuit protection and, when protected by suitable branch circuit protection, are rated for use on a circuit capable of delivering up to 100,000 A. Fuses or circuit breakers, with adequate withstand and interrupt ratings, as defined in NEC or applicable local codes, are permitted.

Refer to [Fuse/Contactor Specifications on page 105](#) for recommended fuses.

Refer to [Kinetix 3 Drive Power Specifications on page 104](#) for input current and inrush current specifications for your Kinetix 3 drive.

Sizing the Enclosure

With no active method of heat dissipation (such as fans or air conditioning) either of these approximate equations can be used.

Metric	Standard English
$A = \frac{0.38Q}{1.8T-1.1}$	$A = \frac{4.08Q}{T-1.1}$
Where T is temperature difference between inside air and outside ambient (°C), Q is heat generated in enclosure (Watts), and A is enclosure surface area (m ²). The exterior surface of all six sides of an enclosure is calculated as	Where T is temperature difference between inside air and outside ambient (°F), Q is heat generated in enclosure (Watts), and A is enclosure surface area (ft ²). The exterior surface of all six sides of an enclosure is calculated as
$A = 2dw + 2dh + 2wh$	$A = (2dw + 2dh + 2wh) / 144$
Where d (depth), w (width), and h (height) are in meters.	Where d (depth), w (width), and h (height) are in inches.

If the maximum ambient rating of the Kinetix 3 system is 50 °C (122 °F) and if the maximum environmental temperature is 30 °C (86 °F) then Q=416 and T=20 in the equation below.

$$A = \frac{0.38(416)}{1.8(20) - 1.1} \sim 4.5 \text{ m}^2$$

In this example, the enclosure must have an exterior surface of 4.53 m². If any portion of the enclosure is not able to transfer heat, it should not be included in the calculation.

Because the minimum cabinet depth to house the 230V drive (selected for this example) is 200 mm (7.9 in.), then the cabinet needs to be approximately 2000 mm (high) x 850 mm (wide) x 200 mm (deep).

$$2 \times (0.2 \times 0.85) + 2 \times (0.2 \times 2.0) + 2 \times (0.85 \times 2.0) = 4.54 \text{ m}^2$$

Because this cabinet size is considerably larger than what is necessary to house the system components, it may be more efficient to provide a means of cooling in a smaller cabinet. Contact your cabinet manufacturer for options available to cool your cabinet.

Minimum Clearance Requirements

This section provides information to assist you in sizing your cabinet and positioning your Kinetix 3 system components.


IMPORTANT Mount the module in an upright position as shown. Do not mount the module on its side.

[Figure 3](#) illustrates minimum clearance requirements for proper airflow and installation:

- Additional clearance is required depending on the accessory items installed.
- Additional clearance is required for the cables and wires connected to the front of the drive.
- An additional 150 mm (6.0 in.) is required when the drive is mounted adjacent to noise sensitive equipment or clean wireways.

Refer to [page 109](#) for Kinetix 3 drive dimensions

Figure 3 - Minimum Clearance Requirements

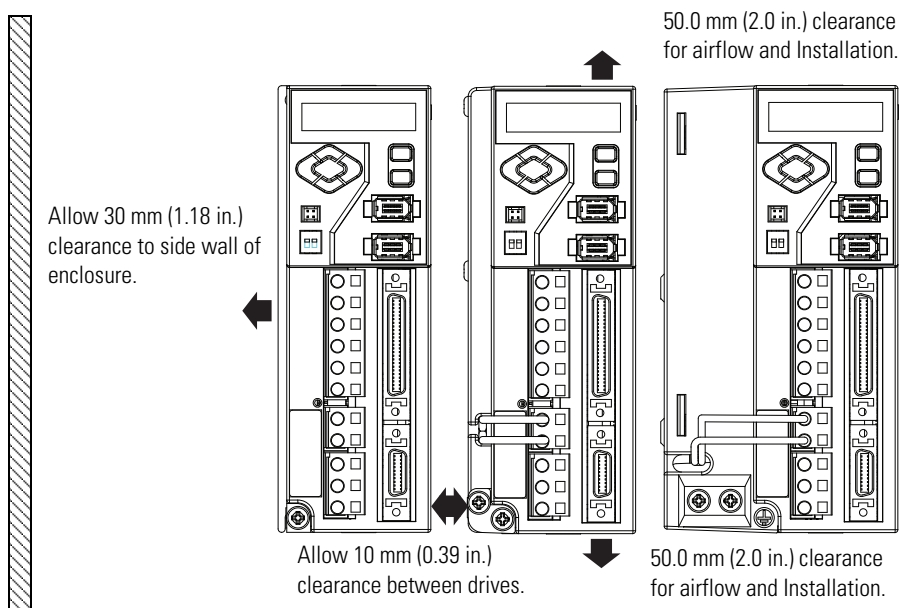

Refer to [page 106](#) for power dissipation specifications.

Electrical Noise Reduction

This section outlines best practices that minimize the possibility of noise-related failures as they apply specifically to Kinetix 3 system installations. For more information on the concept of high-frequency (HF) bonding, the ground plane principle, and electrical noise reduction, refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#).

Bonding Drives

Bonding is the practice of connecting metal chassis, assemblies, frames, shields, and enclosures to reduce the effects of electromagnetic interference (EMI).


Unless specified, most paints are not conductive and act as insulators. To achieve a good bond between drive and the subpanel, surfaces need to be paint-free or plated. Bonding metal surfaces creates a low-impedance return path for high-frequency energy

IMPORTANT To improve the bond between the drive and subpanel, construct your subpanel out of zinc plated (paint-free) steel.

Improper bonding of metal surfaces blocks the direct return path and allows high-frequency energy to travel elsewhere in the cabinet. Excessive high-frequency energy can effect the operation of other microprocessor controlled equipment.

The illustrations that follow show details of recommended bonding practices for painted panels, enclosures, and mounting brackets.


Figure 4 - Recommended Bonding Practices for Painted Panels

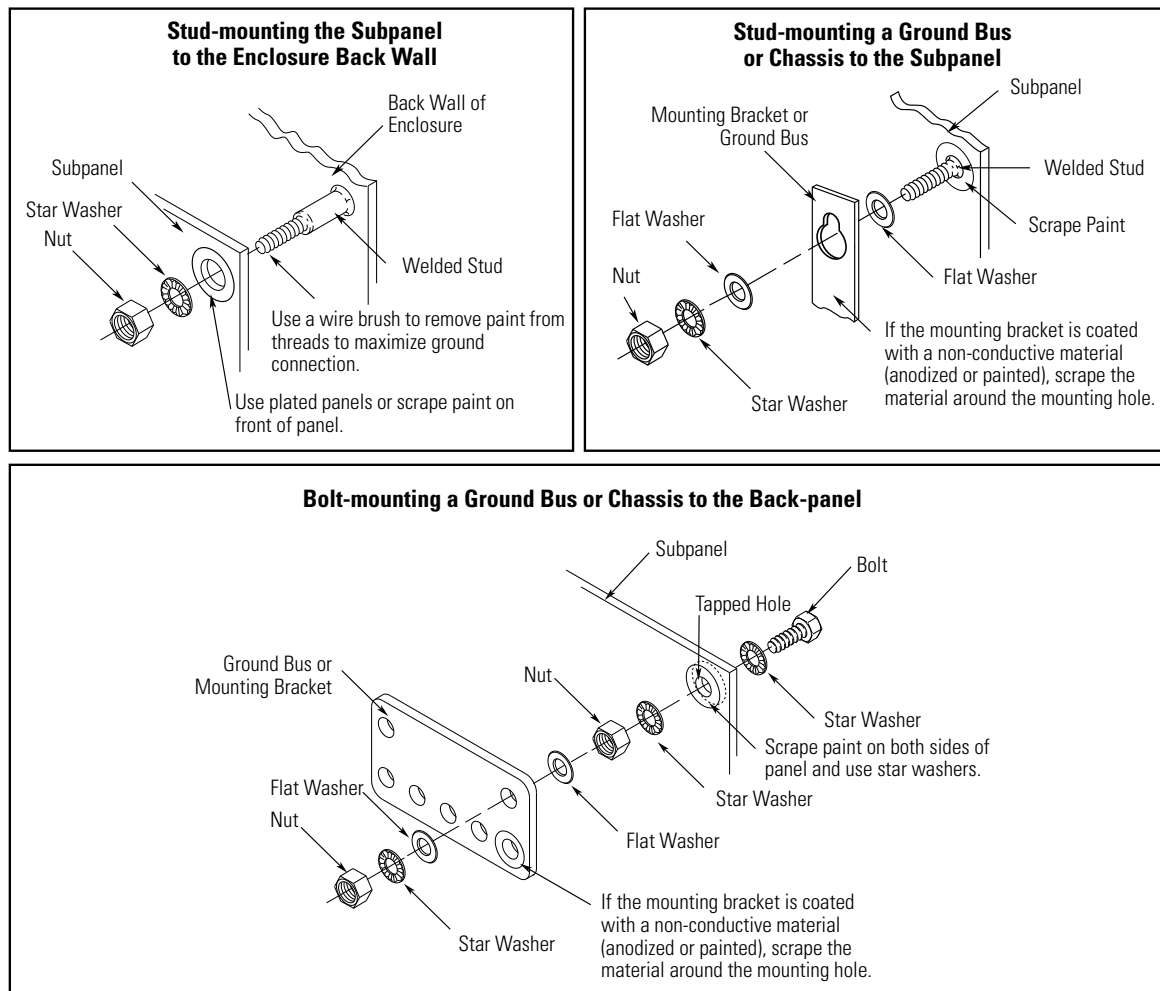

Bonding Multiple Subpanels

Bonding multiple subpanels creates a common low impedance exit path for the high frequency energy inside the cabinet. Subpanels that are not bonded together may not share a common low impedance path. This difference in impedance may affect networks and other devices that span multiple panels.

Figure 5 - Multiple Subpanels and Cabinet Recommendations

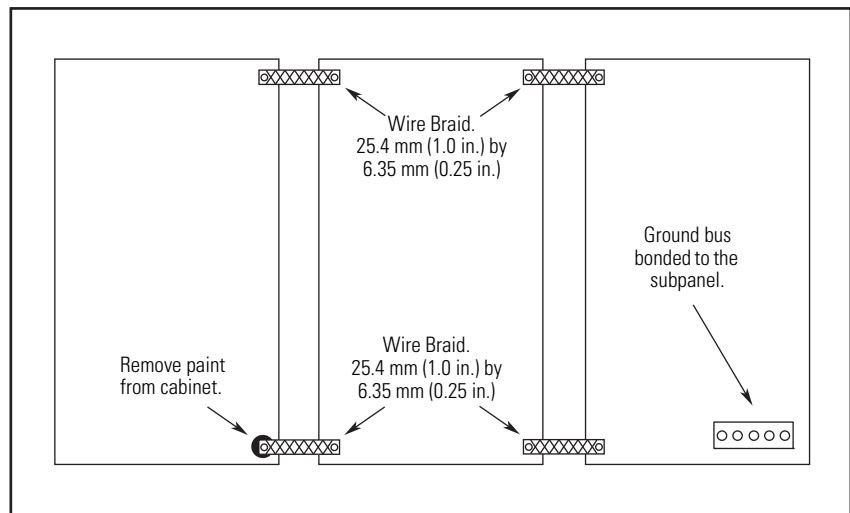


Establishing Noise Zones

When the several components such as AC line filter, contactors, circuit breaker, and transformer are used in the Kinetix 3 system, observe these guidelines when laying out your panel:

- The clean zone (C) is beneath the Kinetix 3 drives and includes the I/O wiring, feedback cable, serial communication cable, and DC filter (grey wire way).
- The dirty zone (D) is above the Kinetix 3 drives (black wire way) and includes the circuit breakers, transformer, 24V DC power supply, contactors, AC line filter, and motor power cables.
- The very dirty zone (VD) is limited to where the AC line (EMC) filter VAC output connects to the Kinetix 3 drives. Shielded cable is required only if the very dirty cables enter a wire way.

Figure 6 - Noise Zones for Installations With Bulletin 2090 AC Line Filter

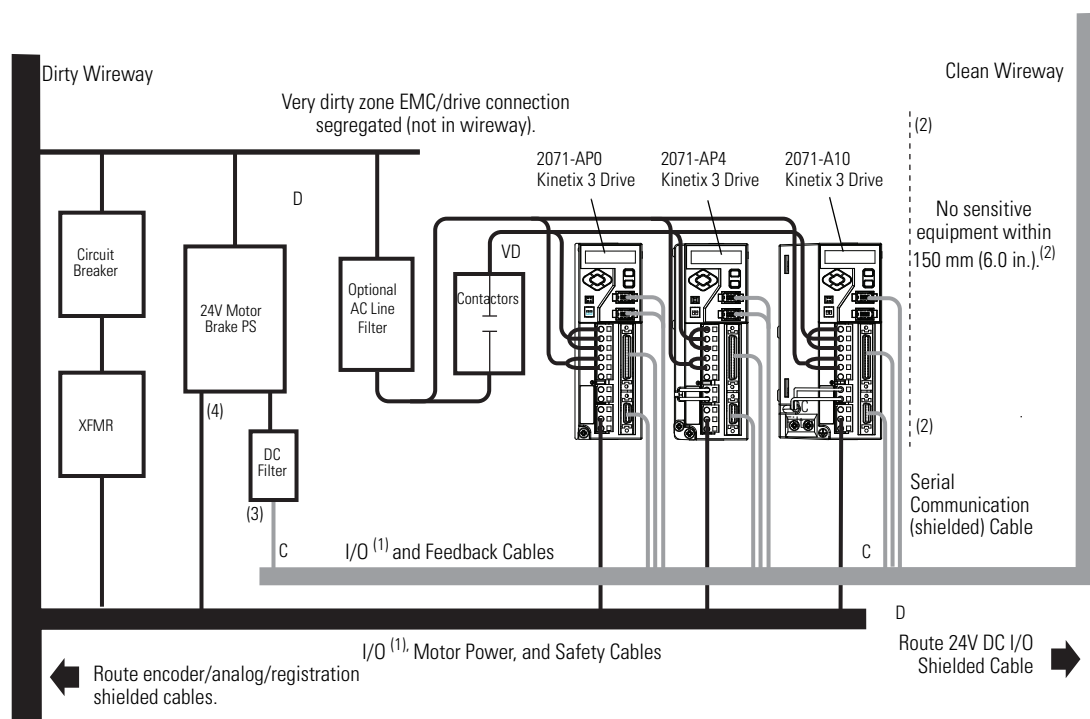

- (1) If drive system I/O cable contains dirty relay wires, route cable in dirty wireway.
- (2) For tight spaces use a grounded steel shield. For examples, refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#).
- (3) This is a clean 24V DC available for any device that may require it. The 24V enters the clean wireway and exits to the left.
- (4) This is a dirty 24V DC available for motor brakes and contactors. The 24V enters the dirty wireway and exits to the right.

Cable Categories for Kinetix 3 Drive Components

This table shows the zoning requirements of cables connecting to the Kinetix 3 drive components.

Table 3 - Kinetix 3 Drive Components

Wire/Cable	Connector	Zone			Method
		Very Dirty	Dirty	Clean	Shielded Cable
L1, L2, L3, L1C, L2C (unshielded cable)	IPD	X			
U, V, W (motor power)	MP		X		X
Motor feedback	MF			X	X
Analog outputs	IOD			X	X
Others			X		
Analog output	A.out			X	
Serial Communication	Comm0A Comm0B			X	X

Noise Reduction Guidelines for Drive Accessories

Refer to this section when mounting an AC line filter or shunt resistor module for guidelines designed to reduce system failures caused by excessive electrical noise.

AC Line Filters

Observe these guidelines when mounting your AC line filter:

- If using Bulletin 2090 ac line filter, mount the filter on the same panel as the Kinetix 3 drive and as close to drive as possible.
- Good HF bonding to the panel is critical. For painted panels, refer to the examples on [page 18](#).
- Segregate input and output wiring as far as possible.

Motor Brake

The brake is mounted inside the motor. How you connect to the drive depends on the motor series.

Refer to [Kinetix 3 Drive/Rotary Motor Wiring Examples](#) beginning on [page 114](#) for the interconnect diagram of your drive/motor combination.

Mount Your Kinetix 3 Drive

The procedures in this section assume you have prepared your panel and understand how to bond your system. For installation instructions regarding other equipment and accessories, refer to the instructions that came with each of the accessories for their specific requirements.



ATTENTION: This drive contains electrostatic discharge (ESD) sensitive parts and assemblies. You are required to follow static control precautions when you install, test, service, or repair this assembly. If you do not follow ESD control procedures, components can be damaged. If you are not familiar with static control procedures, refer to Allen-Bradley publication [8000-4.5.2](#), Guarding Against Electrostatic Damage or any other applicable ESD Protection Handbook.

Follow these steps to mount your Kinetix 3 drive.

1. Layout the position for the Kinetix 3 and accessories in the enclosure (refer to [Establishing Noise Zones on page 20](#) for panel layout recommendations).

Mounting hole dimensions for the Kinetix 3 are shown in [Appendix A](#).

2. Attach the Kinetix 3 drive to the cabinet, first using the upper mounting slots of the drive and then the lower.

The recommended mounting hardware is M4 (#6-32) steel machine screw torqued to 1.1 N•m (9.8 lb•in). Observe bonding techniques as described in [Bonding Drives on page 17](#).

IMPORTANT To improve the bond between the Kinetix 3 drive and subpanel, construct your subpanel out of zinc plated (paint-free) steel.

3. Tighten all mounting fasteners.

Kinetix 3 Drive Connector Data

Introduction


This chapter provides power, feedback, and I/O connector locations and signal descriptions for your Kinetix 3 drive.

Topic	Page
Introduction	23
Kinetix 3 Drive Connectors and Indicators	24
Motor Feedback Specifications	29
Control Signal Specifications	34

Kinetix 3 Drive Connectors and Indicators

Although the physical size of the higher current drives is larger, the location of the connectors and indicators is identical.

Figure 7 - Kinetix 3 Drive Connector and Indicators

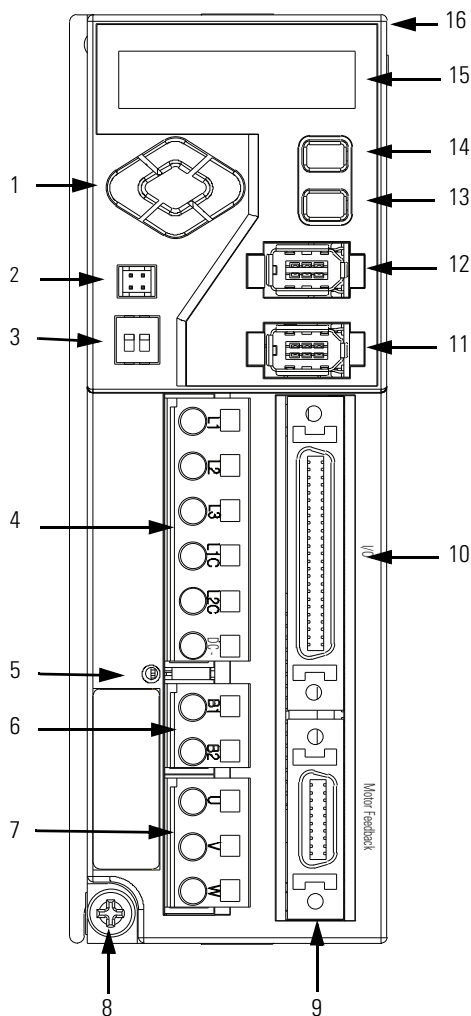

Item	Description
1	Left/right and up/down keys
2	Analog output (A.out) connector
3	RS-485 communication termination switch
4	Input power (IPD) connector
5	Main power indicator
6	Shunt resistor (BC) connector
7	Motor power (MP) connector
8	Ground lug ⁽¹⁾

Item	Description
9	Motor feedback (MF) connector
10	Input/output (IOD) connector
11	Serial interface (Comm0B) (down) port
12	Serial interface (Comm0A) (up) port
13	Enter key
14	Mode/set key
15	7-segment status indicator
16	2071-AP0 Kinetix 3 drive shown


(1) 2071-AP4 Kinetix 3 and larger drives have 2 ground screws.

Table 4 - Kinetix 3 Drive Connectors

Designator	Description	Connector
A.out	Analog output	4-pin connector header
IPD	AC and control power input	6-pin quick-connect terminal block
BC	Shunt power	2-pin quick-connect terminal block
MP	Motor power	3-pin quick-connect terminal block
CommOA	Serial interface up	6-pin IEEE 1394 connector
CommOB	Serial interface down	6-pin IEEE 1394 connector
IOD	I/O	50-pin mini-D connector
MF	Motor feedback	20-pin mini-D connector

Table 5 - Analog Output (A.out) Connector

A.out Pin	Description	Signal
1	Analog output #1	AOUT1
2	Analog output #1 ground	ACOM
3	Analog output #2	AOUT2
4	Analog output #2 ground	ACOM


Figure 8 - Pin Orientation for 4-pin Header (A.out) Connector

I/O (IOD) Connector Pinout

IOD Pin	Description	Signal
1	24V power supply input	24V COM
2	24V power supply input	24V COM
3	Digital input 1 (/SV-ON)	INPUT1
4	Digital input 2 (/P-OT)	INPUT2
5	Digital input 3 (/N-OT)	INPUT3
6	Digital input 4 (/P-CON)	INPUT4
7	Digital input 5 (A-RST)	INPUT5
8	Digital input 6 (/N-TL)	INPUT6
9	Digital input 7 (/P-TL)	INPUT7
10	ESTOP (default: disable)	ESTOP
11	Follower input A+	PLUS +
12	Follower input A-	PLUS -
13	Follower input B+	SIGN +
14	Follower input B-	SIGN -
15	High frequency pulse input A+	HF_PULS +
16	High frequency pulse input A-	HF_PULS -
17	Encoder z-pulse	Z-PULSE+
18	Encoder z-pulse	Z-PULSE-
19	Velocity command input+	VCMD+
20	Velocity command input-	VCMD-
21	Current command input+	ICMD+
22	Current command input-	ICMD-
23	High frequency pulse input B+	HF_SIGN +
24	High frequency pulse input B-	HF_SIGN -
25	O/C for sign of 24V level	24V_SIGN +

IOD Pin	Description	Signal
26	Digital input 8	INPUT8
27	Digital input 9	INPUT9
28	Digital input 10	INPUT10
29	Buffered encoder channel A+	AM+
30	Buffered encoder channel A-	AM-
31	Buffered encoder channel B+	BM+
32	Buffered encoder channel B-	BM-
33	Buffered encoder channel Z+	IM+
34	Buffered encoder channel Z-	IM-
35	Serial data of absolute encoder	PS+
36	Serial data of absolute encoder	PS-
37	Alarm output 1 Digital output4	FAULT1 OUTPUT4
38	Alarm output 2 Digital output5	FAULT2 OUTPUT5
39	Alarm output 3 Digital output6	FAULT3 OUTPUT6
40	Alarm output Digital outputs ground	FCOM OUT COM
41	Digital output 1 + (P_COM+)	OUTPUT1+
42	Digital output 1 - (P_COM-)	OUTPUT1-
43	Digital output 2 + (TG_ON+)	OUTPUT2+
44	Digital output 2 - (TG_ON-)	OUTPUT2-
45	Servo alarm +	FAULT+
46	Servo alarm -	FAULT-
47	Digital output 3 + (BK+)	OUTPUT3+
48	Digital output 3 - (BK-)	OUTPUT3-
49	O/C for pulse of 24V level	24V_PULS +
50	Reserved	—

Figure 9 - Pin Orientation for 50-pin I/O (IOD) Connector

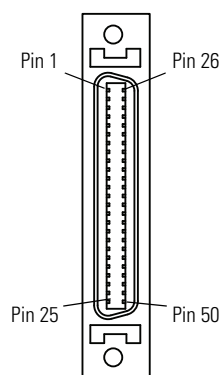

Motor Feedback (MF) Connector Pinout

MF Pin	Description	Signal	MF Pin	Description	Signal
1	Encoder power ground	ECOM	11	Reserved	—
2	Thermal sensor input ⁽¹⁾	TS	12	Reserved	—
3	A positive differential input	A+	13	Serial negative	SD-
4	A negative differential input	A-	14	Hall feedback S2	S2
5	B positive differential input	B+	15	Reserved	—
6	B negative differential input	B-	16	Hall feedback S3	S3
7	Index positive differential input	I+	17	Positive limit sensor input	LMT+
8	Index negative differential input	I-	18	BAT+ for motor side	—
9	Negative limit sensor input	LMT-	19	BAT- for motor side	—
10	Serial positive Hall feedback S1	SD+ S1	20	Encoder +5 input power	EPWR

(1) Not applicable unless motor has integrated thermal protection.

Figure 10 - Pin Orientation for 20-pin Motor Feedback (MF) Connector


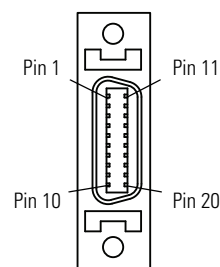


Table 6 - Serial Interface (Comm0A and Comm0B) Connector

Comm0A or Comm0B Pin	Description	Signal
1	RS-232 transmit	XMT
2	RS-232 receive	RCV
3	Reserved	—
4	+5V power ground	GND
5	RS-485 +	DX+
6	RS-485 -	DX-

Figure 11 - Pin Orientation for 6-pin Serial Interface (Comm0A and Comm0B) Connector

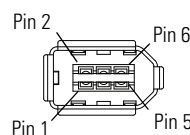

Input Power Connector Pinout

Table 7 - Input Power (IPD) Connector

IPD Pin	Description	Signal
L1	Main AC power	L1
L2	Main AC power	L2
L3	Main AC power	L3
L1C	L1C - Control power	L1C
L2C	L2C - Control power	L2C
DC	DC bus negative (not supported)	DC-

Shunt Resistor Connector Pinout

Table 8 - Shunt Resistor (BC) Connector

BC Pin	Description	Signal
B1	Shunt resistor + DC bus positive (not supported)	B1
B2	Shunt resistor -	B2

Motor Power Connector Pinout

Table 9 - Motor Power (MP) Connector

MP Pin	Description	Signal
U	Motor power U	U
V	Motor power V	V
W	Motor power W	W

Motor Feedback Specifications

The Kinetix 3 drive accepts motor feedback signals from these types of encoders with these general specifications.

Table 10 - Motor Feedback General Specifications

Attribute	Motor Feedback
Feedback device support	• Generic TTL incremental • Generic TTL incremental with Hall and thermistor sensors • 17-bit Serial
Power supply voltage (EPWR5V)	5.08...5.45V
Power supply current (EPWR5V)	300 mA, max
Thermostat	Single-ended, under 1.6 k Ω = no fault, over 3.2 k Ω = fault

Motor Feedback Specifications

The Kinetix 3 drives support multiple types of feedback devices by using the 20-pin (MF) motor feedback connector and sharing connector pins in many cases.

Table 11 - Motor Feedback Signals by Device Type

MF Pin	Generic TTL Incremental with Hall	Tamagawa 17-bit Serial
1	ECOMM	ECOMM
2	TS+ ⁽¹⁾	—
3	AM+	—
4	AM-	—
5	BM+	—
6	BM-	—
7	IM+	—
8	IM-	—
9	-LIMIT	—
10	S1	DATA+
11	—	—
12	—	—
13	—	DATA-
14	S2	—
15	—	—
16	S3	—
17	+LIMIT	—
18	—	BAT+
19	—	BAT-
20	EPWR	EPWR

(1) If thermal sensor is used.

This is the motor thermostat interface schematic. Although the thermostat signal is shown for all feedback types, some motors may not support this feature.

Figure 12 - Motor Thermostat Interface

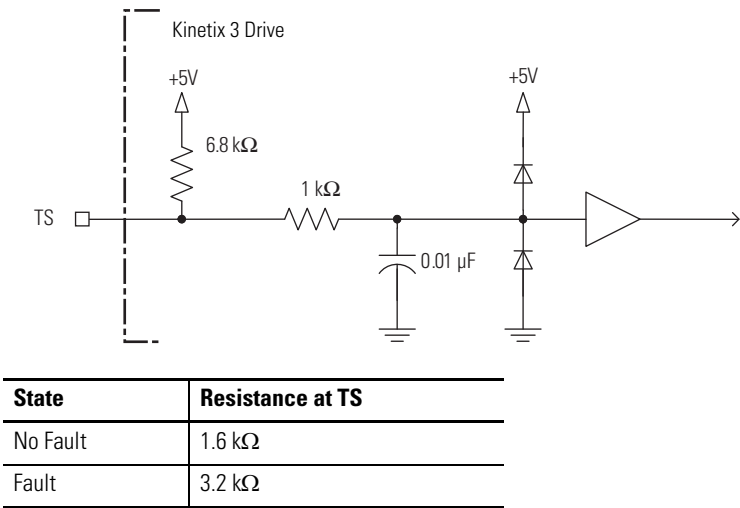


Table 12 - Generic TTL Incremental Specifications

Attribute	Value
TTL incremental encoder support	5V, differential A quad B
Quadrature interpolation	4 counts/square wave period
Differential input voltage (AM, BM, and IM)	0.5...2.5V
DC current draw (AM, BM, and IM)	30 mA, max
Input signal frequency ⁽¹⁾ (AM, BM, and IM)	3.5 MHz, max
Edge separation ⁽¹⁾ (AM and BM)	50 ns min., between any two edges
Hall inputs (S1, S2, and S3)	0.5...2.5V, Single-ended, TTL, open collector, or none

(1) Propagation time differences in cables will reduce the edge separation by 0.2 ns per meter. Both the propagation time differences and the edge separation may reduce the maximum attainable input signal frequency.

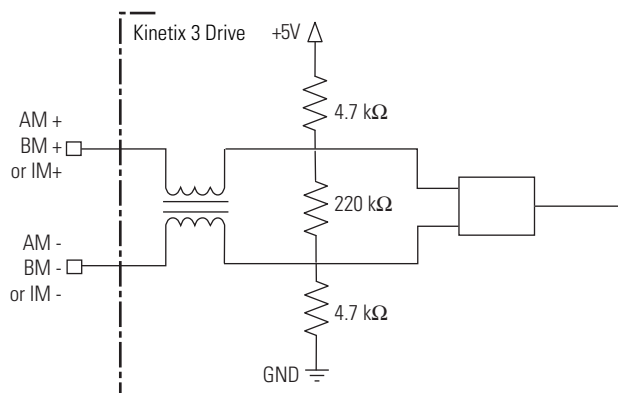
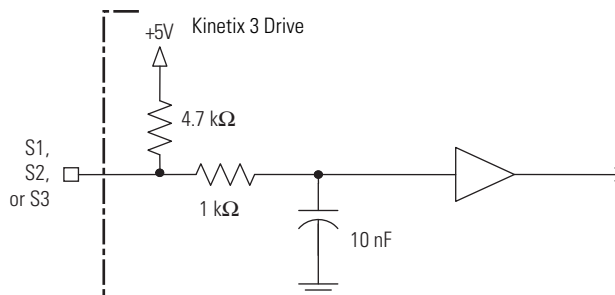
Figure 13 - Generic TTL Incremental, AM, BM and IM Signals**Figure 14 - Generic TTL Interface, S1, S2, or S3 Signals**

Table 13 - 17-Bit Serial Specifications

Attribute	Value
Memory support	Programmed with Allen-Bradley motor data
Differential input voltage	1.0...7.0V
Data communication	2.5 Mbps, 8 data bits, no parity
Battery	3.6V, located external to drive in breakout board


Feedback Power Supply

The Kinetix 3 drive generates +5V DC for motor feedback power. Short circuit protection and separate common mode filtering for each channel are included.

Table 14 - Motor Feedback Power Specifications

Attribute		Value
Signal		EPWR
Voltage	min	5.08
	nominal	5.25
	max	5.45
Current, mA	min	10
	max	300

Figure 15 - Pin Orientation for 20-pin Motor Feedback (MF) Connector

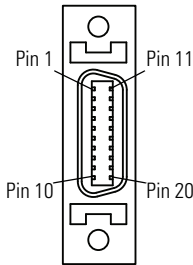

Control Signal Specifications

This section provides a description of the Kinetix 3 drive I/O (IOD) connector, analog output (A.out) connector, and serial interface (Comm0A and Comm0B) ports.

Digital Inputs

The Kinetix 3 drive contains 10 assignable digital inputs, INPUT1...INPUT10, sharing a common power supply, 24V COM. These functions can be associated with an assignable digital input:

- Alternate Gain Select
- Current Limit – Negative
- Current Limit – Positive
- Drive Enable
- Fault Reset
- Integrator Inhibit
- Operation Mode Override
- Overtravel – Negative
- Overtravel – Positive
- Pause Follower
- Position Strobe
- Velocity Direction
- Moving Enable
- Preset Select 1
- Preset Select 2
- Preset Select 3
- Reset Multiturn Data
- Zero Speed Clamp Enable
- Position Clear
- Analog Speed Command Enable
- 2nd Electronic Gear Bank Selection
- Home Sensor
- Start Homing
- Start Indexing
- Stop Homing
- Stop Indexing
- Pause Indexing
- Index Select 0
- Index Select 1
- Index Select 2
- Index Select 3
- Index Select 4

- Index Select 5
- Gain Bank Select

All digital inputs can be active low or active high and depend on wiring method. Active low, PNP, current sourcing - means connecting the input to the ground turns on the input. Active high, NPN, current sinking - means that connecting the input to the IO power turns on the input. This table lists specifications for the digital inputs.

The digital inputs are optically isolated and can be setup for PNP sourcing or NPN sinking. Electrical details are shown in [Table 15, Digital Input Specifications](#). The inputs can be set up for PNP sourcing or NPN sinking.

Figure 16 - Digital Inputs (PNP sourcing configuration)

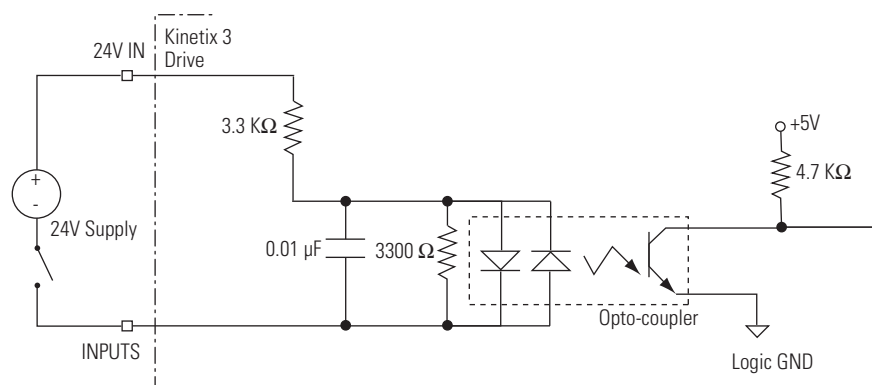


Figure 17 - Digital Inputs (NPN sinking configuration)

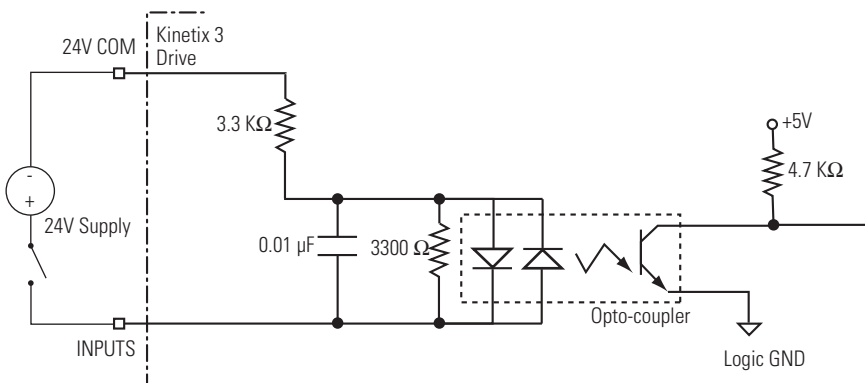


Table 15 - Digital Input Specifications

Parameter	Value
24V power supply	21.6...26.4V DC
On-state voltage range	14...26.4V DC
On-state current at min voltage	6.3 mA
On-state current at max voltage	7.71 mA
Off-state voltage, max	-1V
Off-state current, max	0 mA
Hardware delay, off to on	8.4 μs
Hardware delay, on to off	50.1 μs

Digital Outputs

There are three digital outputs, OUTPUT1...OUTPUT3 available on the IOD connector. Outputs are optically isolated open collector/emitter and are fully isolated from the drive circuits. Each output, OUTPUT1...OUTPUT3, can be assigned to one of these functions:

- Within Position Window
- Up to Speed
- Brake
- Within Speed Window
- Current Limited
- Velocity Limited
- Within Near Window
- Warning
- Absolute Position Valid
- Ready
- In Motion
- In Dwell
- Axis Homed
- Index Select 0 Output
- Index Select 1 Output
- Index Select 2 Output
- Index Select 3 Output
- Index Select 4 Output
- Index Select 5 Output
- End of Sequence

The fault outputs, FAULT1...FAULT3, can be reassigned through the parameter setting giving you three additional digital outputs, OUTPUT4...OUTPUT6.

The drive contains four alarm outputs. The four alarm outputs include the alarm signals FAULT+ and FAULT- and three bits of fault information, FAULT1...FAULT3.

When the alarm signal is active there is a fault. If the three alarm outputs are decoded they would indicate which of eight different fault types are active.

Table 16 - Fault Codes


Fault Group	Fault Code Output State			Possible Faults
	FAULT3	FAULT2	FAULT1	
0	ON	ON	ON	No Faults
1	ON	ON	OFF	E.005 IPM Fault E.054 Current Feedback Offset Fault E.057 PWM Hardware Fault E.079 Shunt Circuit Over Current Fault E.114 Motor Phase Over Current
2	ON	OFF	ON	E.004 Motor Over temperature Fault E.022 Motor Continuous Current Overload Fault E.023 Drive Overload Fault E.036 Drive Over temperature Fault E.075 Shunt Over load Protection Fault E.101 Motor Power Cable Open Fault E.102 Motor Instantaneous Current Overload Fault E.103 Motor Mismatch Fault
3	ON	OFF	OFF	E.028 Encoder Data Range Fault E.030 Encoder Cable Open Fault E.031 Encoder Data Parameter Fault E.083 Absolute Encoder Battery Fault E.084 Absolute Encoder Overspeed E.085 Absolute Multi-turn CountFault E.105 Encoder Type Mismatch Fault E.106 Encoder Communication Fault
4	OFF	ON	ON	E.009 Bus Undervoltage Fault E.010 Bus Overvoltage Fault E.037 AC Line Loss Fault
5	OFF	ON	OFF	E.018 Motor Overspeed Fault E.019 Excess Position Error Fault E.056 Watchdog Timeout Fault E.108 Position Command Frequency Fault E.112 Emergency Stop
6	OFF	OFF	ON	E.053 User Parameter Initialization Fault E.055 User Parameter Checksum Fault E.058 User Parameter Range Fault E.107 Serial Communication Fault E.113 Indexing Position Range Overflow
7	OFF	OFF	OFF	E.012 Home Search Failed E.027 Axis Not Homed E.060 Drive Initialization Fault E.100 Drive Setup Fault

Digital and fault outputs are grounded through FCOM/OUT COM.

All digital outputs are active low, current sinking.

Table 17 - Digital Output Signal Specifications


Parameter	Value
Output voltage range	0...50V DC
Output current rating @ 50 °C (122 °F)	50 mA
Minimum load current	0.1 mA
Maximum on-state voltage drop @ 50 mA	1.2mV DC
Hardware delay, off to on, max	2.36 ms
Hardware delay, on to off, max	310 ms

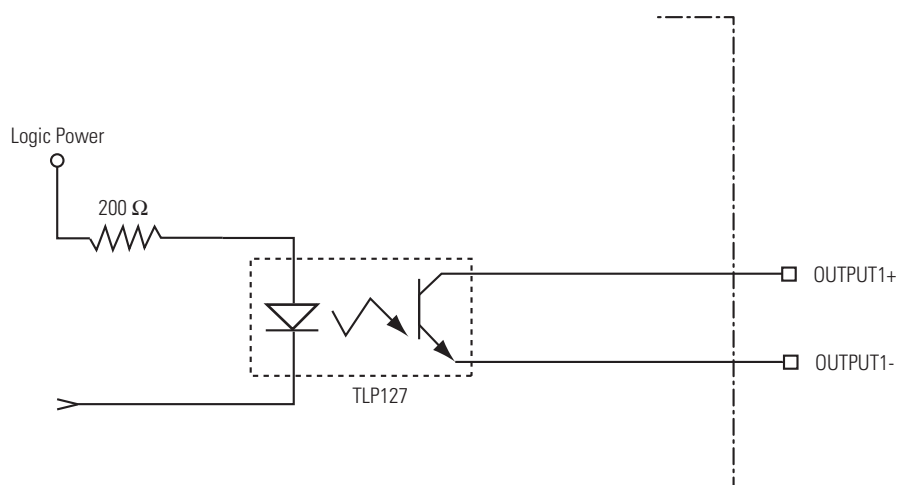Figure 18 - Digital Outputs

Analog Inputs

The Kinetix 3 has two single-ended analog inputs. One is dedicated as the command input for Analog Velocity mode, and the second is dedicated as the command input for Analog Current mode. [Figure 19](#) shows the configuration of the analog input.

Figure 19 - Analog Input Configuration

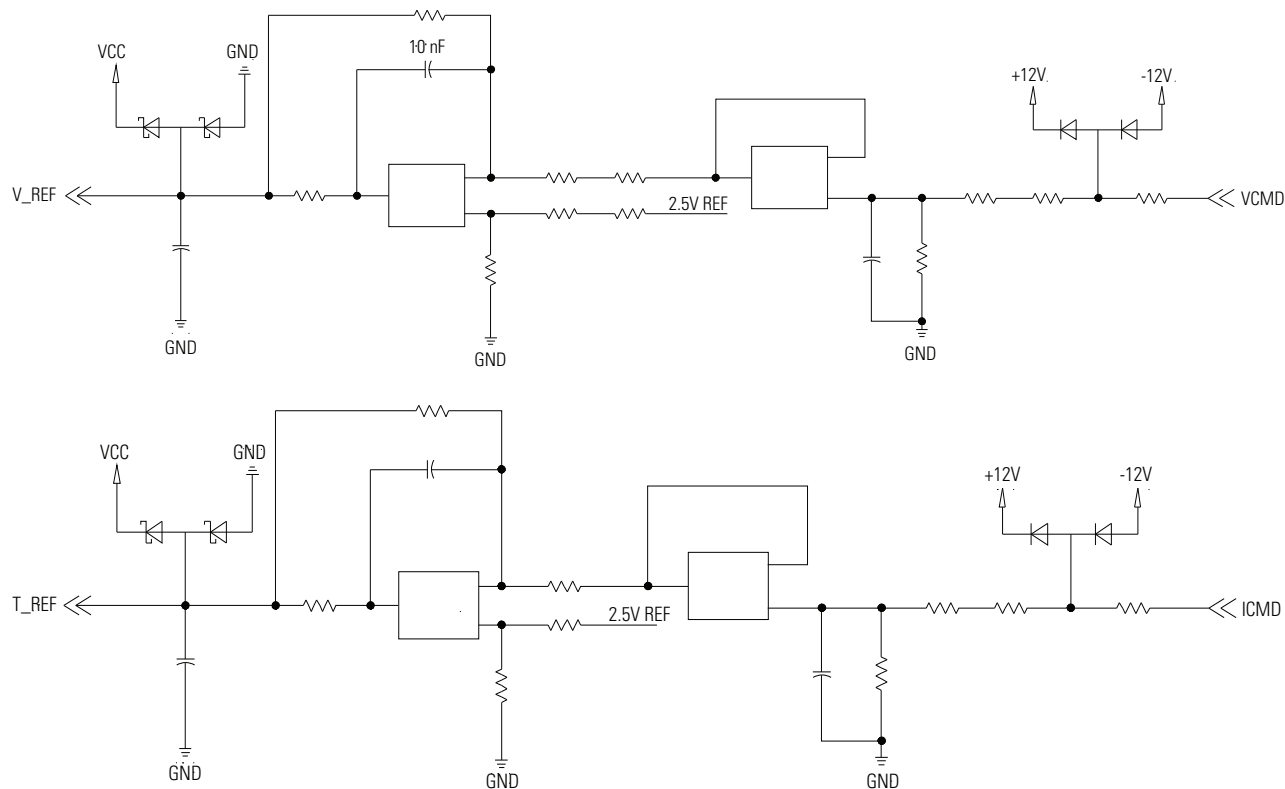

This table provides a description of the analog input specifications.

Parameter	Description	Minimum	Maximum
VCMD Resolution	Number of states that the input signal is divided into, [which is 2 ^(to the number of bits)].	16 bits	—
ICMD Resolution		12 bits	—
Input Impedance	Open circuit impedance measured between the positive (+) input and analog common.	10 kΩ	—
Input Signal Range	Voltage applied to the input	-10V	+10V


Analog Outputs

The Kinetix 3 contains two analog outputs (A.out) that can be configured through Ultraware software to represent internal drive variables. These variables can be assigned to an analog output:

- Motor Feedback Position
- Master Position
- Follower Position
- Position Error
- Position Command Count Frequency
- Velocity Command
- Velocity Feedback
- Velocity Error
- Current Command
- Current Feedback
- U Phase Current
- V Phase Current
- W Phase Current
- Commutation Angle
- Mechanical Angle
- Shunt Power Limit Ratio
- Instantaneous Shunt Power
- Drive Utilization
- Absolute Rotations
- Bus Voltage
- Velocity Command Offset
- Current Command Offset
- Motor Temperature
- Analog Command – Velocity
- Analog Command – Current

[Figure 20](#) shows the configuration of the analog outputs.

Figure 20 - Analog Output Configuration

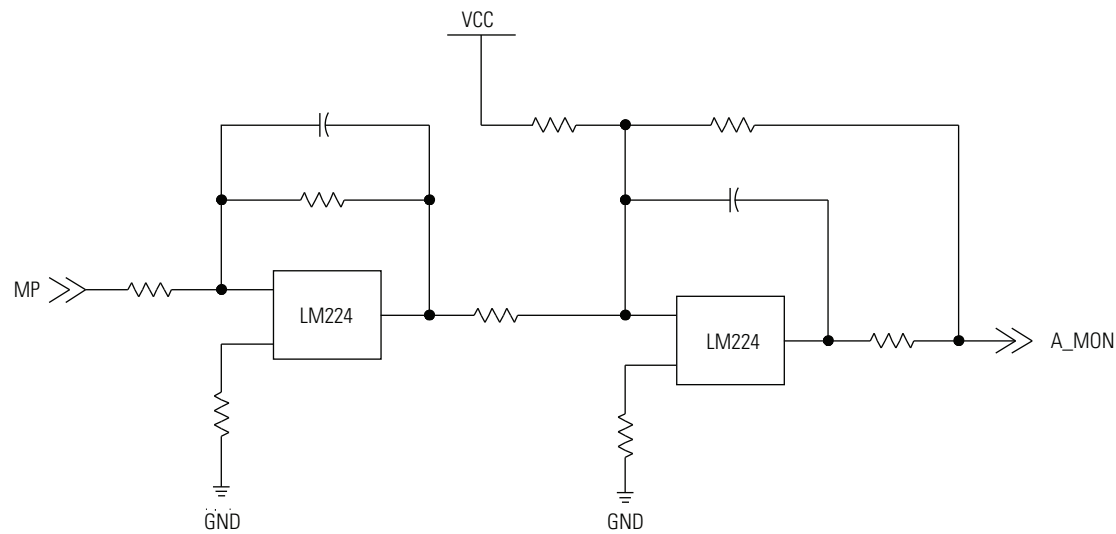

IMPORTANT Output values can vary during powerup until the specified power supply voltage is reached.

This table provides a description of the analog output specifications.

Parameter	Description	Minimum	Maximum
Resolution	Number of states that the output signal is divided into, which is 2 ^(to the number of bits) .	12 Bits	—
Output Current	Current capability of the output.	-10 mA	+10 mA
Output Signal Range	Range of the output voltage.	-10V	+10V

Serial Interface Connection

The IEEE-1394 connectors (Comm0A and Comm0B) are provided on the Kinetix 3 drive.

This table provides the drive's default serial port configuration. This configuration is used for communication between a drive and personal computer with Ultraware software.

Table 18 - RS-232 Serial Communication Specifications

Attribute	Value
Communication Protocol	RS-232
Baud	57,600
Data bits	8
Parity	None
Stop bit	1
Operator interface bit pattern	0005
Cabling	Catalog number 2090-CCMPCDS

This table provides the configuration is used for communication between a drive and programmable logic controller and drive-to-drive communications. You can change the serial communication protocol using front panel input keys.

Table 19 - RS-485 Serial Communication Specifications

Attribute	Value
Communication Protocol	RS-485
Baud	192,000
Data bits	8
Parity	None
Stop bit	1
Operator interface bit pattern	1102
Cabling	Catalog numbers 2090-CCMCNDS and 2090-CCMDSDS

Notes:

Connecting the Kinetix 3 Drive

Introduction

This chapter provides procedures for wiring your Kinetix 3 system components and making cable connections.

Topic	Page
Introduction	45
Understanding Basic Wiring Requirements	45
Grounding Your Kinetix 3 Drive	51
Power Wiring Requirements	53
Wiring Guidelines	54
Wiring the Kinetix 3 Drive Connectors	55
Apply the Motor Cable Shield Clamp	62
Feedback and I/O Cable Connections	63
Wiring the I/O Connector	66
Wiring the Feedback Connector	67
Serial Communication Cable Connections	70

Understanding Basic Wiring Requirements

This section contains basic wiring information for the Kinetix 3 drive.



ATTENTION: Plan the installation of your system so that you can perform all cutting, drilling, tapping, and welding with the system removed from the enclosure. Because the system is of the open type construction, be careful to keep any metal debris from falling into it. Metal debris or other foreign matter can become lodged in the circuitry, which can result in damage to components.



SHOCK HAZARD: To avoid hazard of electrical shock, perform all mounting and wiring of the Bulletin 2071 drive prior to applying power. Once power is applied, connector terminals may have voltage present even when not in use.

IMPORTANT

This section contains common PWM servo system wiring configurations, size, and practices that can be used in a majority of applications. National Electrical Code, local electrical codes, special operating temperatures, duty cycles, or system configurations take precedence over the values and methods provided.

Building Your Own Cables

IMPORTANT Factory-made cables are designed to minimize EMI and are recommended over hand-built cables to optimize system performance

- Connect the cable shield to the connector shells on both ends of the cable with a complete 360° connection.
- Use twisted pair cable whenever possible. Twist differential signals with each other and twist single-ended signals with the appropriate ground return.

Refer to the Kinetix Motion Control Selection Guide, publication [GMC-SG001](#), for low-profile connector kit, drive-end (mating) connector kit, and motor-end connector kit catalog numbers.

Routing Power and Signal Wiring

Be aware that when you route power and signal wiring on a machine or system, radiated noise from nearby relays, transformers, and other electronic drives can be induced into motor or encoder feedback signals, input/output communication, or other sensitive low voltage signals. This can cause system faults and communication anomalies.

Refer to [Electrical Noise Reduction](#) on [page 17](#) for examples of routing high and low voltage cables in wireways. Refer to the System Design for Control of Electrical Noise Reference Manual, publication [GMC-RM001](#), for more information.

Determining Your Type of Input Power


On the following pages are examples of typical single-phase and three-phase facility input power wired to single-phase and three-phase Kinetix 3 drives.

The Kinetix 3 drive is designed to operate in both ground and ungrounded environments. The grounded power configuration lets you ground your single-phase or three-phase power at a neutral point. The ungrounded power configuration does not allow for a neutral ground point.

Three-phase Power Wired to Three-phase Drives


These examples illustrate grounded three-phase power wired to three-phase Kinetix 3 drives when phase-to-phase voltage is within drive specifications. The ungrounded power configuration will not include the ground connection labeled as 'optional' in these figures.

Figure 21 - Three-phase Power Configuration (WYE Secondary)

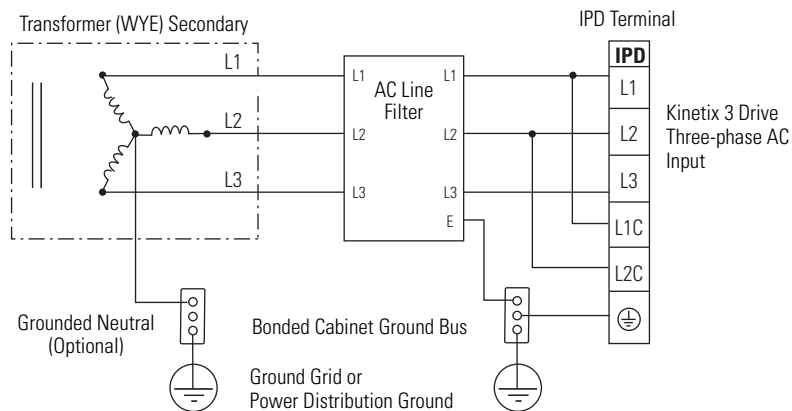


Feeder and branch short circuit protection is not illustrated.

Figure 22 - Three-phase Power Configuration (Delta secondary)

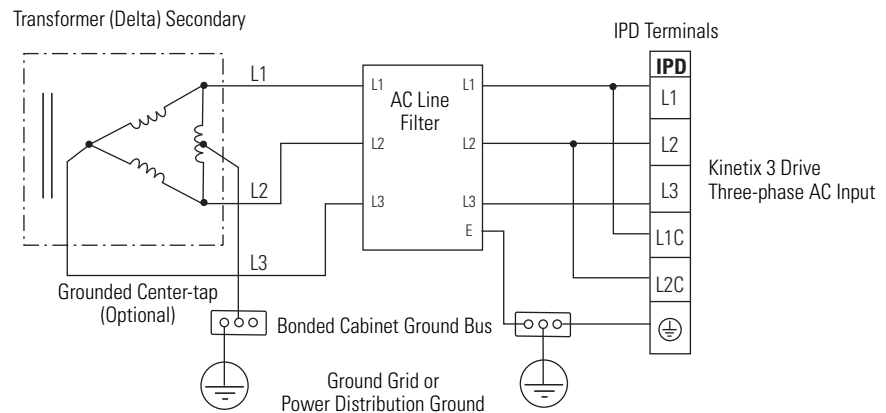

Feeder and branch short circuit protection is not illustrated.

Figure 23 - Three-phase Power Configuration (Delta secondary)

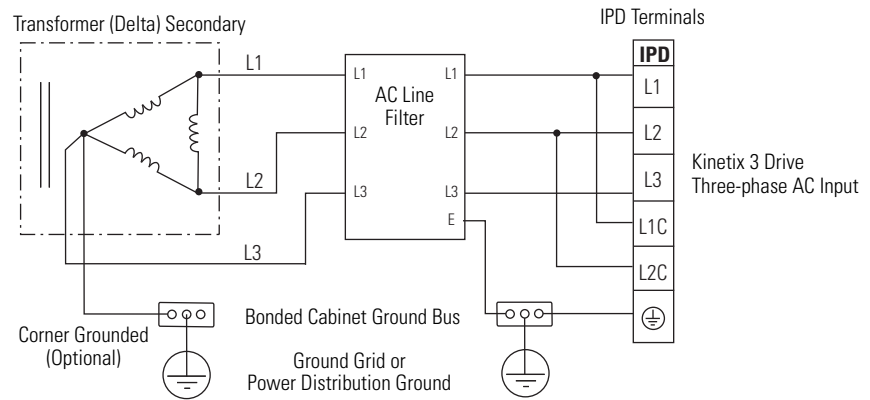


Feeder and branch short circuit protection is not illustrated.

Single-phase Power Wired to Single-phase Drives

These examples illustrate grounded single-phase power wired to single-phase Kinetix 3 drives when phase-to-phase voltage is within drive specifications. The ungrounded power configuration will not include the ground connection labeled as 'optional' in these figures.

Figure 24 - Single-phase Grounded Power Configurations

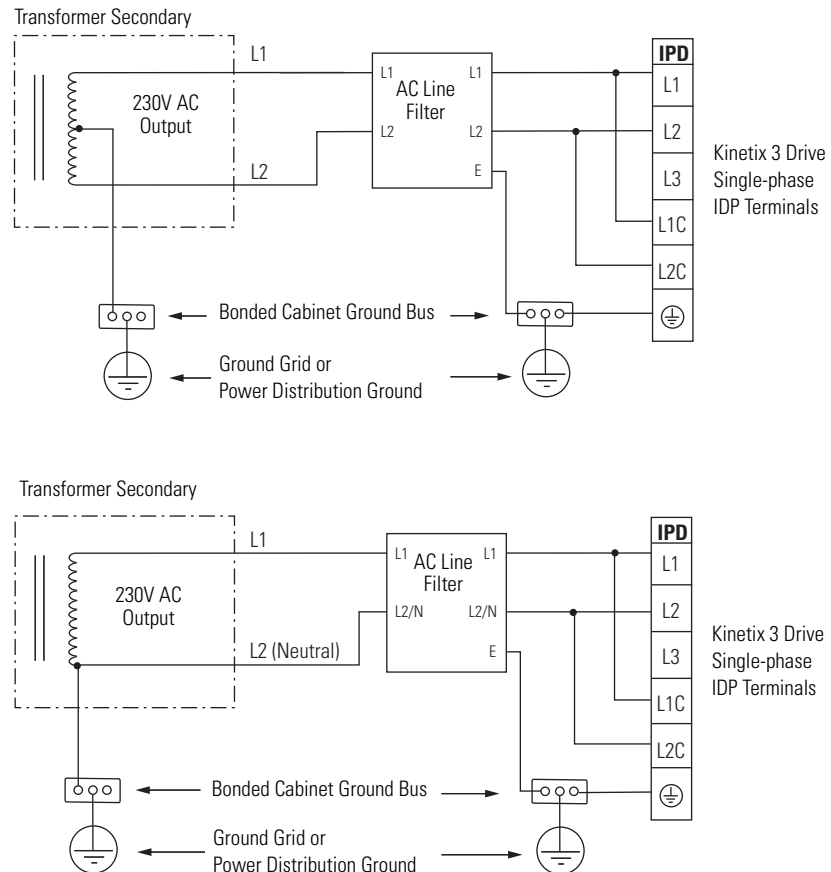

Reducing transformer output reduces motor speed. Feeder and branch short circuit protection is not illustrated.

Isolation Transformer in Grounded Power Configurations

When using an isolation transformer, attach a chassis ground wire to the neutral connection. This accomplishes the following:

- Prevents the system from floating and thereby avoids any high voltages that might otherwise occur, for example due to static electricity.

- Provides a solid earth path for fault conditions.




ATTENTION: If the supply transformer is an auto transformer (not recommended), a chassis earth ground should not be added. A chassis earth ground should already be included elsewhere in the system, and adding another would create a short circuit.

Three-phase Power Wired to Single-phase Drives

This example illustrates grounded three-phase power wired to single-phase Kinetix 3 drives when phase-to-phase voltage is within drive specifications. The optional grounded neutral would be omitted on ungrounded systems.

Figure 25 - Single-phase Amplifiers on Three-phase Power (WYE)

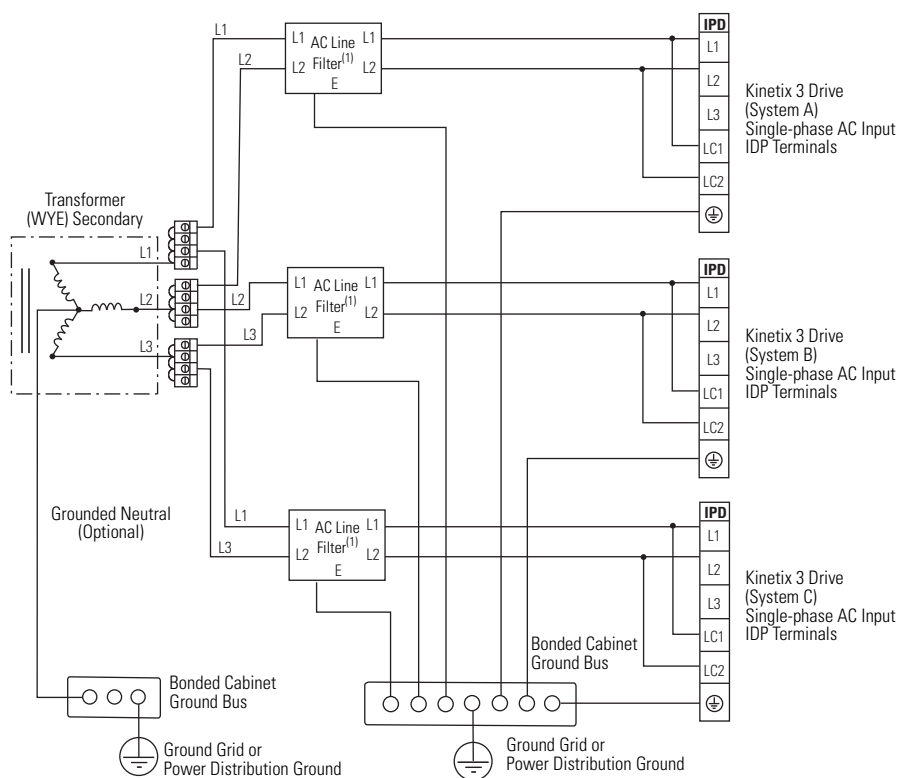

(1) AC line filter is optional, but is required for CE compliance.

Feeder short circuit protection is not illustrated.

If a three-phase line filter is used to feed multiple single-phase drives (not recommended), it is important that the filter include a neutral connection as shown above. This applies if three-phase is brought directly into the filter and no isolating transformer is present.

Grounding Your Kinetix 3 Drive

All equipment and components of a machine or process system should have a common earth ground point connected to their chassis. A grounded system provides a safety ground path for short circuit protection.

IMPORTANT Grounding your drives and panels minimizes shock hazard to personnel and damage to equipment caused by short circuits, transient overvoltages, and accidental connection of energized conductors to the equipment chassis.

For CE grounding requirements, refer to [CE Requirements](#) in [Chapter 1](#).

IMPORTANT To improve the bond between the Kinetix 3 drive and subpanel, construct your subpanel out of zinc plated (paint-free) steel.


Grounding Your System to the Subpanel



ATTENTION: The National Electrical Code contains grounding requirements, conventions, and definitions. Follow all applicable local codes and regulations to safely ground your system. Refer to the illustration below for details on grounding your Kinetix 3 drive. Refer to [Appendix B](#) for the power wiring diagram for your Kinetix 3 drive.

If the Kinetix 3 drive is mounted on a painted subpanel, ground to a bonded cabinet ground bus by using a braided ground strap or 4.0 mm² (12 AWG) solid copper wire 100 mm (3.9 in.) long.


Figure 26 - Connecting the Braided Ground Strap Example

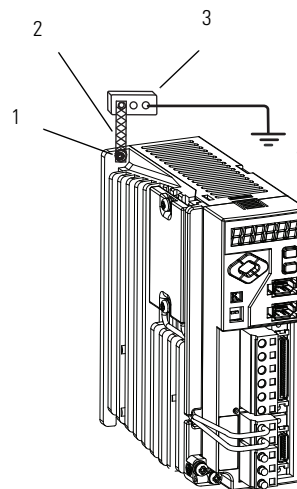

For dimensions, See [Product Dimensions](#) on page 109.

Item	Description
1	Mounting Screw
2	Braided Ground Strap
3	Bonded Cabinet Ground Bus
4	Ground Grid or Power Distribution Ground

Figure 27 - Chassis Ground Configuration (multiple Kinetix 3 drives on one panel)

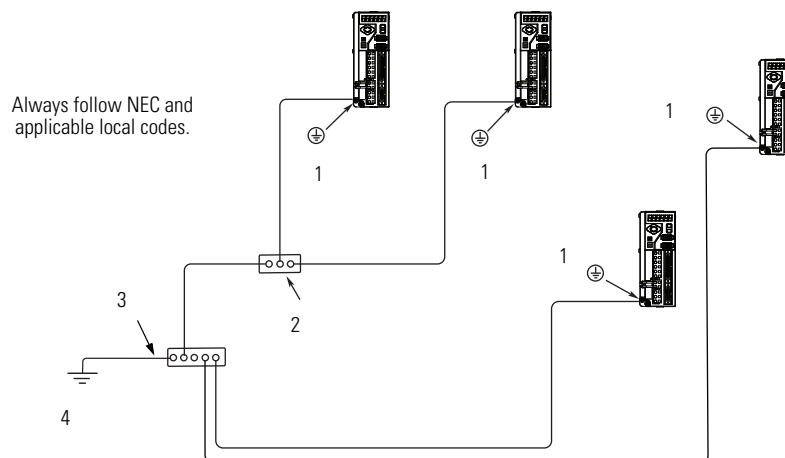


Item	Description
1	Chassis Ground
2	Bonded Ground Bar (optional)
3	Bonded Cabinet Ground Bus
4	Ground Grid or Power Distribution Ground

Grounding Multiple Subpanels

To ground multiple subpanels, refer to the figure below. HF bonding is not illustrated. For information, refer to [Bonding Multiple Subpanels on page 19](#).

Figure 28 - Subpanels Connected to a Single Ground Point

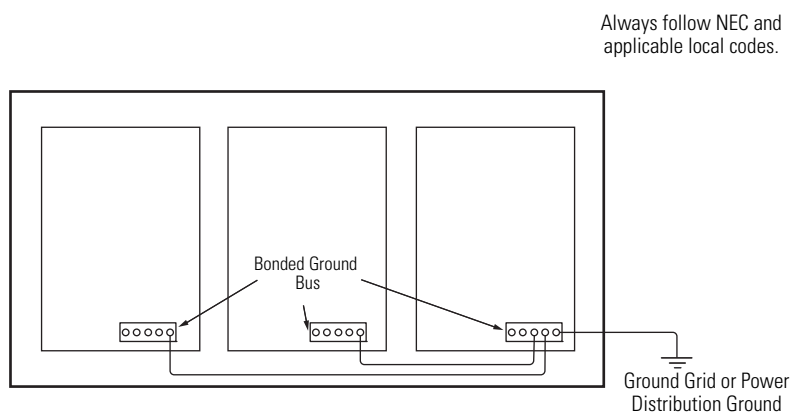

Power Wiring Requirements

Wire should be copper with 75 °C (167 °F) minimum rating. Phasing of main AC power is arbitrary and earth ground connection is required for safe and proper operation.

Refer to [Power Wiring Examples on page 113](#) for interconnect diagrams.

Cat. No.	Description	Terminals		Recommended Wire Size mm ² (AWG)	Strip Length mm (in.)	Torque Value N•m (lb•in)
		Pin	Signal			
2071-AP0 2071-AP1 2071-AP2 2071-AP4	AC Input and control power	IPD-L1 IPD-L2 IPD-L1C IPD-L2C	L1 L2 L1C L2C	2.5 (14)	8 (0.3)	N/A
		Ground screw	Ground			1.25 (11)
2071-AP8		IPD-L1 IPD-L2 (IPD-L3) IPD-L1C IPD-L2C	L1 L2 (L3) L1C L2C			N/A
		Ground screw	Ground			1.25 (11)
2071-A10 2071-A15		IPD-L1 IPD-L2 IPD-L3 IPD-L1C IPD-L2C	L1 L2 L3 L1C L2C			N/A
		Ground screw	Ground			1.25 (11)
2071-xxx	Motor power	MP-U MP-V MP-W	U V W			N/A
		Ground screw	GND			1.25 (11)
2071-xxx	Shunt resistor ⁽¹⁾	BC-B1 BC-B2	B1 B2			N/A

(1) Use for shunt resistor connection only.



ATTENTION: To avoid personal injury and/or equipment damage, make sure installation complies with specifications regarding wire types, conductor sizes, branch circuit protection, and disconnect devices. The National Electrical Code (NEC) and local codes outline provisions for safely installing electrical equipment.

To avoid personal injury and/or equipment damage, make sure motor power connectors are used for connection purposes only. Do not use them to turn the unit on and off.

To avoid personal injury and/or equipment damage, make sure shielded power cables are grounded to prevent potentially high voltages on the shield.

IMPORTANT The National Electrical Code and local electrical codes take precedence over the values and methods provided.

Shunt Resistor Power Wiring Requirement

The B1 and B2 terminals are used to connect a shunt resistor. On the four largest drives, the built-in shunt resistor is connected to B1 and B2. Because 2971-AP0, 2971-AP1 and 2971-AP2 models do not support shunt resistors, do not make terminations to the B1 and B2 terminals.

Wiring Guidelines

Use these guidelines as a reference when wiring the connectors on your Kinetix 3 drive.

IMPORTANT For connector locations of the Kinetix 3 drives, refer to [Kinetix 3 Drive Connectors and Indicators on page 24](#).
When removing insulation from wires, refer to the table on [53](#) for strip lengths.

IMPORTANT To improve system performance, run wires and cables in the wireways as established in [Establishing Noise Zones on page 20](#).


Follow these steps when wiring the connectors on your Kinetix 3 drive.

1. Prepare the wires for attachment to each connector plug by removing insulation equal to the recommended strip length.

IMPORTANT Use caution not to nick, cut, or otherwise damage strands as you remove the insulation.

2. Route the cable or wires to your Kinetix 3 drive.
3. Follow these steps to attach wires to connectors.
 - a. Open terminal locking clamp with connector tool.
 - b. Insert wire.
 - c. Release tool.

Figure 29 - Using the Connector Tool

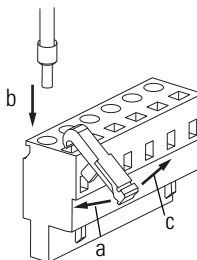

Refer to connector pinout tables in [Chapter 3](#) or the interconnect diagrams in [Appendix B](#).


4. Gently pull on each wire to make sure it does not come out of its terminal; reinsert and tighten any loose wires.
5. Insert the connector plug into the drive connector.

Wiring the Kinetix 3 Drive Connectors

This section provides examples and wiring tables to assist you in making connections to the Kinetix 3 drive.

Wire the Input Power (IPD) and Motor Power (MP) Connectors

Figure 30 - Kinetix 3 Drive (IPD) and (MP) connector

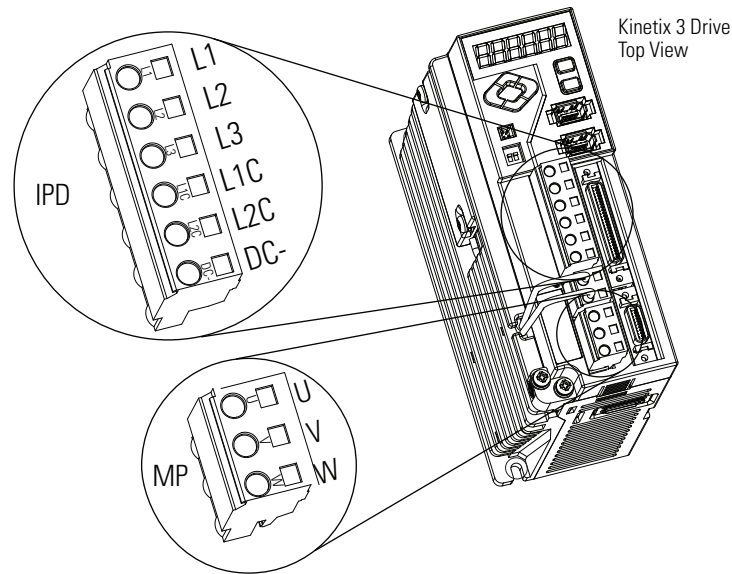

The IPD is used for input power to the drive and the control circuits. The MP connector is used to connect output power to the motor. Use 2.5 mm² (14 AWG) wire for all connections. Connect ground to ground screw and torque to 1.25 N•m (11 lb•in) Follow procedure in [Wiring Guidelines on page 54](#).

Cable Shield Terminations

Factory-supplied motor power cables for MP-Series (Bulletin MPAS), TL-Series (Bulletin TLY and TLAR), LDC-Series, and LDL-Series motors and actuators are shielded. The braided cable shield must terminate near the drive during installation. Remove small portion of the cable jacket to expose the shield braid and clamp the exposed shield to the panel.



ATTENTION: To avoid hazard of electrical shock, ensure shielded power cables are grounded at a minimum of one point for safety.

IMPORTANT


For TL-Series motors, also connect the 152 mm (6.0 in.) termination wire to the closest earth ground.

Refer to [Pigtail Terminations on page 56](#) for more information.

Pigtail Terminations

TL-Series motors have a short pigtail cable that connects to the motor, but is not shielded. The preferred method for grounding the TL-Series power cable on the motor side is to expose a section of the cable shield and clamp it directly to the machine frame. The motor power cable also has a 150 mm (6.0 in.) shield termination wire with a ring lug that connects to the closest earth ground. Use this method in addition to the cable clamp. The termination wire may be extended to the full length of the motor pigtail if necessary, but it is best to connect the supplied wire directly to ground without lengthening.

Figure 31 - Pigtail Terminations

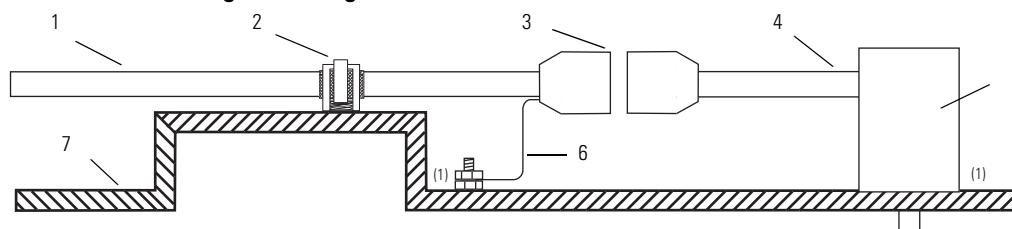

Item	Description
1	Motor power cable
2	Cable braid clamped to machine frame ⁽¹⁾
3	Connectors
4	Pigtail cable
5	TL-Series motor
6	150 mm (6.0 in.) termination
7	Machine frame

- (1) Remove paint from machine frame to be sure of proper HF-bond between machine frame and motor case, shield clamp, and ground stud.


Table 20 - Motor and Actuator Power Cable Compatibility

Motor/Actuator	Connector	Motor/Actuator Cat. No.	Motor Power Cables (with brake wires)	Motor Power Cables (without brake wires)
LDC-Series (Bulletin LDC)	Circular DIN	LDC-Cxxxxxx-xxTx1	Not applicable	2090-CPWM7DF-xxAFxx (continuous-flex)
LDL-Series (Bulletin LDL)		LDL-xxxxxxx-xxTx1		
MP-Series (Bulletin MPAS)		MPAS-Axxxx	2090-XXNPMF-xxSxx (standard) or 2090-CPBM4DF-xxAFxx (continuous-flex)	2090-CPWM4DF-xxAFxx (continuous-flex)
TL-Series (Bulletin TL)	Rectangular plastic	TL-Axxxx-B	2090-DANPT-16Sxx for power 2090-DANBT-18Sxx for brake	2090-DANPT-16Sxx
TL-Series (Bulletin TLY)	Circular plastic	TLY-Axxxx	2090-CPBM6DF-16AAxx (standard)	2090-CPWM6DF-16AAxx (standard)
TL-Series (Bulletin TLAR)		TLAR-Axxxx		

This diagram shows an example of three-phase power wires for TL-Series (Bulletin TL) motors that have no brakes. Thermal switch wires are included in the feedback cable.

Refer to [Kinetix 3 Drive/Rotary Motor Wiring Examples](#) beginning on [page 114](#) for interconnect diagrams.

Figure 32 - Motor Power Terminations (Bulletin TL three-phase wires only)

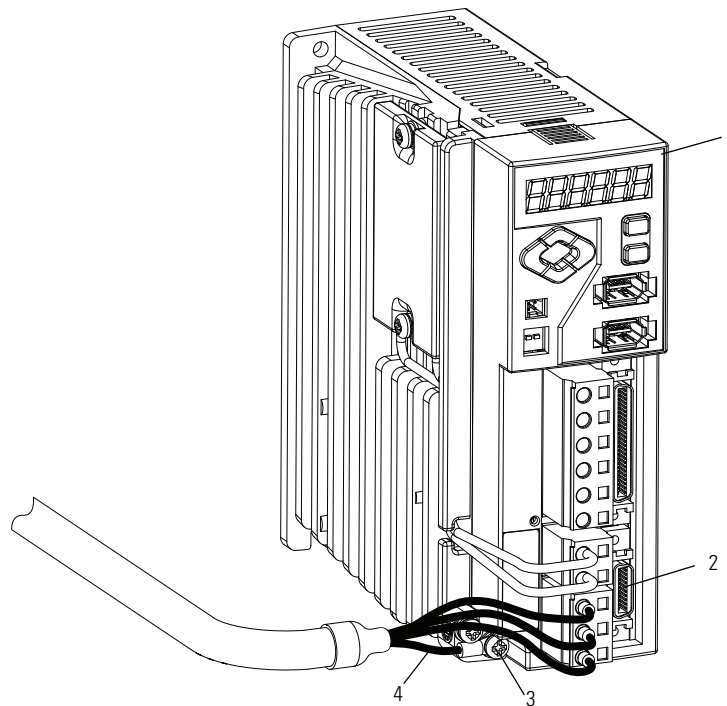


Item	Description
1	2071-AP4 Kinetix 3 drive shown
2	Motor power (MP) connector plug
3	Drive ground screw
4	Motor cable ground wire

Cable shield is tied to the ground wire in the cable. No further grounding is required with motor power cable, catalog number 2090-DANPT-16Sxx.

This diagram shows an example of three-phase power wires for MP-Series (Bulletin MPAS), TL-Series (Bulletin TLY and TLAR), LDC-Series, and LDL-Series motors and actuators that have no brakes. Thermal switch wires are included in the feedback cable.

Figure 33 - Motor Power Terminations (Bulletin TLY, TLAR, MPAS, LDC-Series, and LDL-Series three-phase wires only)

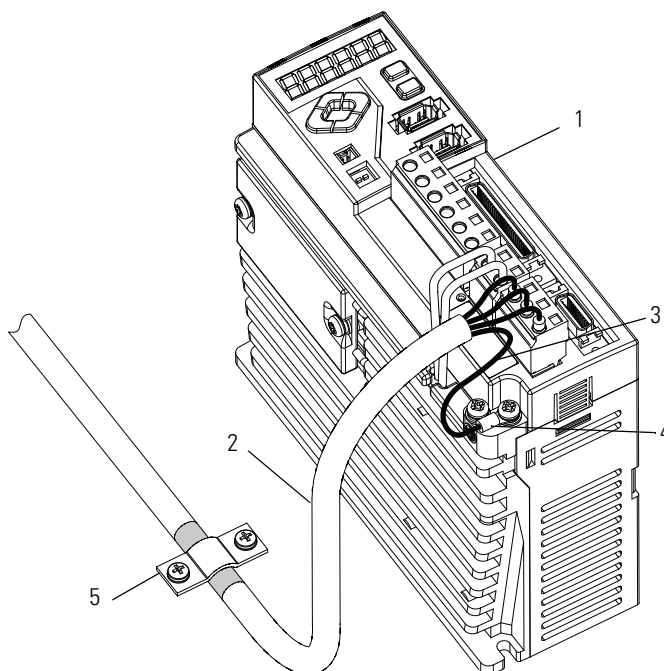


Item	Description
1	2071-AP4 Kinetix 3 drive shown
2	Motor power cable
3	Ground wire
4	Ground lug - user supplied
5	Cable shield clamp

Ground and secure the motor power cable in your system following instructions on [page 62](#).

This diagram shows an example of wiring with three-phase power wires and brake wires by using motor power cable, catalog numbers 2090-XXNPMF-xxSxx, 2090-CPBM4DF-xxAFxx or 2090-CPBM6DF-16AAxx cables. The brake wires have a shield braid (shown below as gray) that folds back under the cable clamp before the conductors are attached to the motor brake circuit. Thermal switch wires are included in the feedback cable.

Refer to [Kinetix 3 Drive/Rotary Motor Wiring Examples](#) beginning on [page 114](#) for interconnect diagrams.

Figure 34 - Motor Power Terminations (Bulletin TLY, TLAR, MPAS, LDC-Series, and LDL-Series three-phase and brake wires)

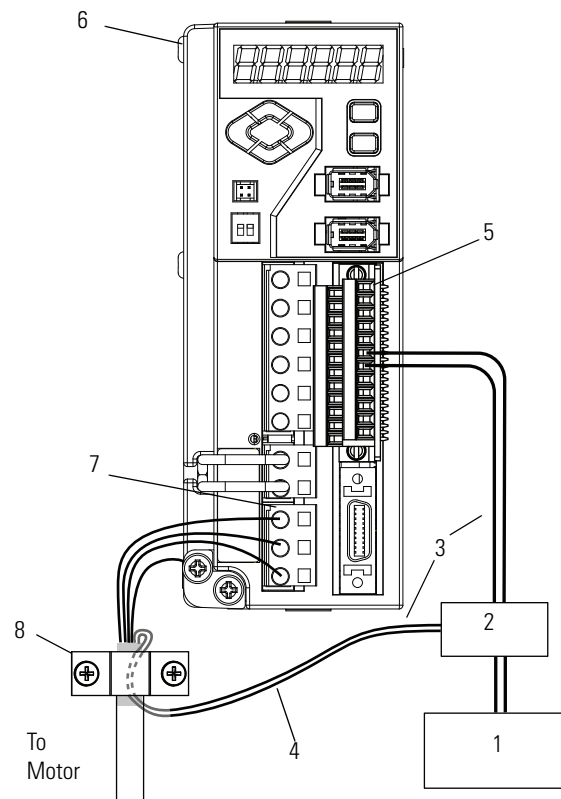

Item	Description
1 ⁽¹⁾	24V power supply
2 ⁽¹⁾	Relay and diode assembly ⁽³⁾
3	Minimize unshielded wires in brake circuit.
4	Brake wires

Item	Description
5	I/O (IOD) connector with Kinetix 3 I/O breakout board installed ⁽²⁾
6	2071-Axx Kinetix 3 drive
7	Motor power (MP) connector
8	Cable clamp ⁽⁴⁾

(1) User supplied. Size as required by motor brake, See [Motor Brake Currents](#) on [page 118](#).

(2) Configure one emitter and collector pair from the Digital Outputs, OUTPUT1... OUTPUT3, pins 41...44 or pins 47 and 48, as Brake+ and Brake - by using Ultraware software. Wire the output as sourcing and set brake engage and disengage times for motor selected. Motor brake is active on enable. For Digital Output specifications, refer to [page 37](#).


(3) Diode 1N4004 rated 1.0A @ 400V DC. See [Power Wiring Examples](#) beginning on [page 114](#).

(4) Exposed shield under clamp and place within 50...75 mm (2...3 in.) of drive, see [page 62](#) for details.

The cable shield clamp shown above is mounted to the subpanel. Ground and secure the power cable in your system following instructions on [page 62](#).

Cable shield and lead preparation is provided with most Allen-Bradley cable assemblies. Follow these guidelines if your motor power cable shield and wires require preparation. The recommended wire size 2.5 mm^2 (14 AWG).

Figure 35 - Cable Shield and Lead Preparation

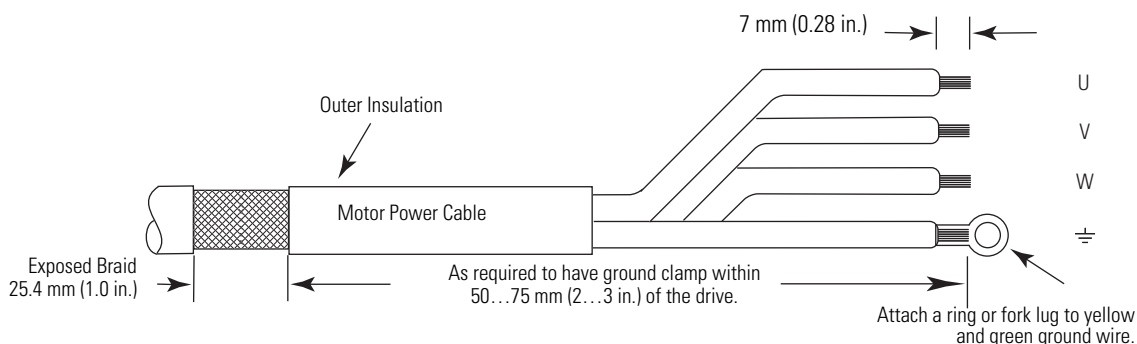

Refer to [Kinetix 3 Drive/Rotary Motor Wiring Examples](#) beginning on [page 114](#) for interconnect diagrams.

Table 21 - Motor Power (MP) Connector

Servo Motor	MP Connector	
MP-Series, TL-Series	MP Pin	Signal
U / Brown	1	U
V / Black	2	V
W / Blue	3	W


Green/yellow ground wire with ring lug is connected to the screw provided on the drive. Shown [Figure on page 62](#).

Shunt Resistor

The B1 and B2 terminals are used to connect the shunt resistor. On the 2071-AP4, 2071-AP8, 2071-A10 and 2071-A15 Kinetix 3 drives, the built-in shunt resistor is pre-wired to B1 and B2 at the factory. On the 2071-AP0, 2071-AP1 and 2071-AP2 Kinetix 3 drives, shunt resistors are not supported; no terminations can be made to the B1 and B2 terminals for these drives.

IMPORTANT The information supplied here is for reference only. There are no adjustments or user serviceable parts associated with the shunt resistor.

Figure 36 - Shunt Resistor (BC) Connector

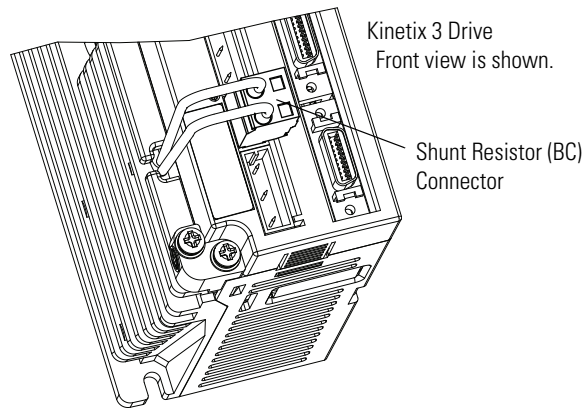


Apply the Motor Cable Shield Clamp

This procedure assumes you have completed wiring your motor power (MP) connector and are ready to apply the cable shield clamp.

Follow these steps to apply the motor cable shield clamp.

1. Locate a suitable position for installing the cable shield clamp within 50...75 mm (2...3 in.) of the drive.

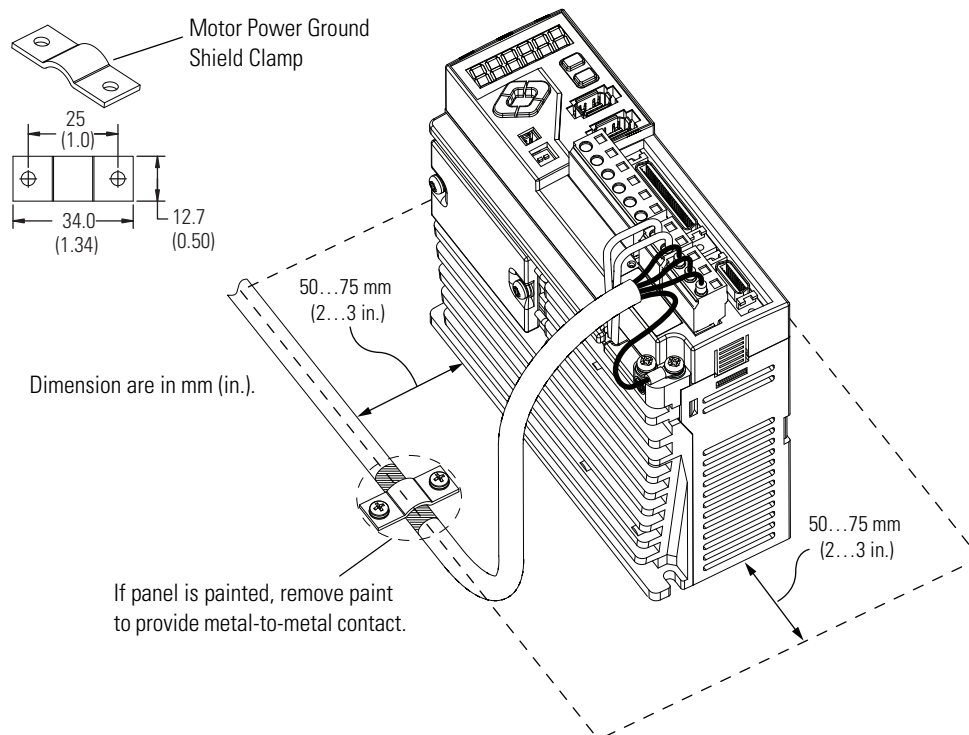

2. Lay out and drill holes for the cable clamp.



ATTENTION: Plan the installation of your system so that you can perform all cutting, drilling, tapping, and welding with the system removed from the enclosure. Because the system is of the open type construction, be careful to keep any metal debris from falling into it. Metal debris or other foreign matter can become lodged in the circuitry, which can result in damage to components.

3. Locate the position on the motor power cable that comes under the clamp and remove about an 25.4 mm (1.0 in.) of the cable jacket to expose the shield braid.
4. Position the exposed portion of the cable braid directly in line with the clamp.
5. Clamp the exposed shield to the panel with the clamp and two #6-32 x 1 screws provided.
6. Repeat steps 1...5 for each Kinetix 3 drive you are installing.

Feedback and I/O Cable Connections

Factory-made cables with premolded connectors are designed to minimize electro-magnetic interference (EMI) and are recommended over hand-built cables to improve system performance. However, options are available for building your own feedback and I/O cables.

Table 22 - Options for Connecting Motor Feedback and I/O

Connection Option	Cat. No.	Cable	Using This Type of Cable
Premolded connectors	N/A	Motor feedback	Refer to the table below for the premolded motor feedback cable available for your motor.
Feedback terminal block	2071-TBMF	Feedback interface	Refer to the table below for the flying-lead motor feedback cable available for your motor.
I/O terminal block	2071-TBIO	I/O interface	User-supplied flying-lead cable.

Table 23 - Motor/Actuator Feedback Cables for Specific Motor/Feedback Combinations

Motor/Actuator Cat. No.	Feedback Type	Feedback Cable		Pinout
		Premolded	Flying-lead	
MPAS-Axxxx-ALMx2C	Incremental encoder	N/A	2090-XXNFMF-Sxx (standard) 2090-CFBM4DF-CDAFxx (continuous-flex)	page 64
LDC-Cxxxxxx			2090-XXNFMF-Sxx (standard) 2090-CFBM7DF-CDAFxx (continuous-flex)	
LDL-xxxxxxx				
TLY-Axxxx-B	High-resolution encoder	N/A	2090-CFBM6DF-CBAAxx (standard)	page 64
TLAR-Axxxxx	Incremental encoder			
TLY-Axxxx-H	High-resolution encoder	2090-DANFCT-Sxx	2090-DANFCT-Sxx ⁽¹⁾	page 65

(1) Remove the premolded connector on the drive end and use Feedback Breakout Board, catalog number 2071-TBMF.

Flying-lead Feedback Cable Pin-outs

Table 24 - 2090-XXNFMF-Sxx or 2090-CFBMxDF-CDAFxx Feedback Cable

Motor/Actuator Connector Pin	Motor/Actuator Signal Name	Drive Signal Name	Drive MF Connector Pin
6	BAT +	BAT +	18
13	DATA +	SD +	10
14	DATA -	SD -	13
22	EPWR 5V	EPWR	20
23	ECOM / BAT - (internally connected)	ECOM BAT -	1 19
24	SHIELD	GND	11

Table 25 - 2090-CFBM6DF-CBAAx Feedback Cable

Motor/Actuator Connector Pin	Motor/Actuator Signal Name	Drive Signal Name	Drive MF Connector Pin
9	AM +	A +	3
10	AM -	A -	4
11	BM +	B +	5
12	BM -	B -	6
13	IM +	I +	7
14	IM -	I -	8
15	S1 +	S1	10
16	S1 -	—	—
17	S2 +	S2	14
18	S2 -	—	—
19	S3 +	S3	15
20	S3 -	—	—
22	EPWR 5V	EPWR	20
23	ECOM	ECOM	1
24	SHIELD	GND	11


Table 26 - 2090-DANFCT-Sxx Feedback Cable

Motor Connector Pin	Motor Signal Name	Drive Signal Name	Drive MF Connector Pin
7	EPWR	EPWR	20
8	ECOM/BAT - (internally connected)	ECOM BAT-	1 19
9	SHIELD	GND	11
12	DATA +	SD +	10
13	DATA -	SD -	13
14	BAT +	BAT +	18

Wiring the I/O Connector


Connect your I/O wires to the IOD connector by using catalog number 2071-TBIO, I/O Breakout Board. Refer to publication [2071-IN002](#).

Figure 37 - Kinetix 3 Drive (IOD connector and I/O Breakout Board)

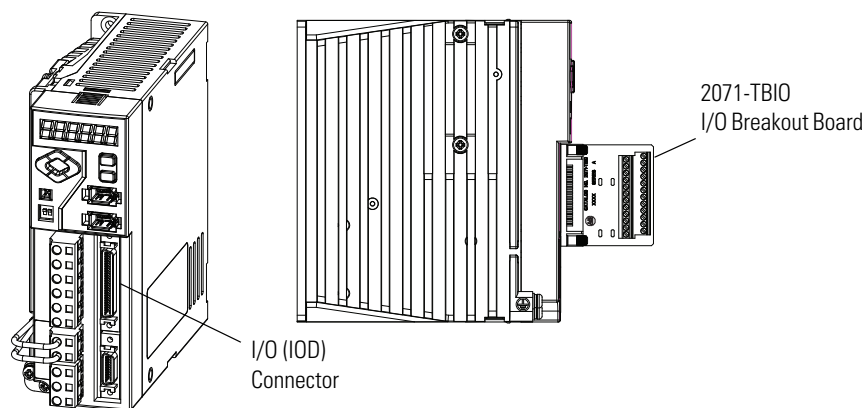

I/O interface cable, catalog number 2090-DAIO-D50xx provides access to all 50 pins of I/O.

Figure 38 - Kinetix 3 Drive (IOD connector and I/O Interface cable)

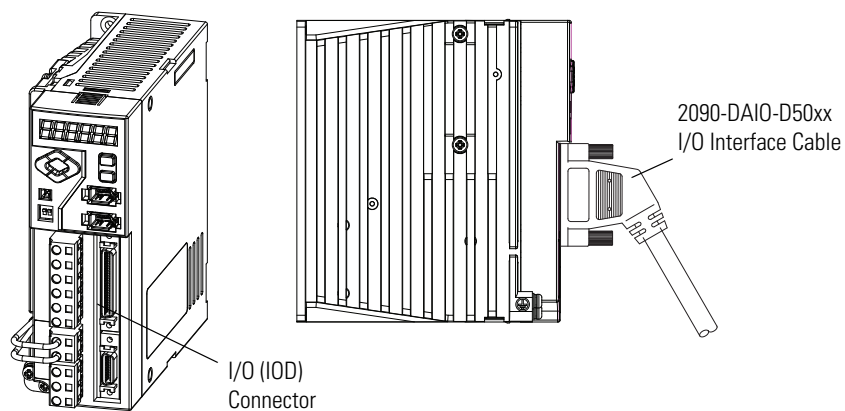

Wiring the Feedback Connector


These procedures assume you have mounted your Kinetix 3 drive, completed all power wiring, and are ready to connect your feedback.

Connecting Premolded Motor Feedback Cables

The motor feedback cables with premolded connectors plug directly into the 20-pin motor feedback (MF) connectors on the Kinetix 3 drive, no wiring is necessary.

IMPORTANT When using Bulletin 2090 cables with premolded connectors, tighten the mounting screws (finger tight) to improve system performance.

Figure 39 - Kinetix 3 Drive (MF connector)

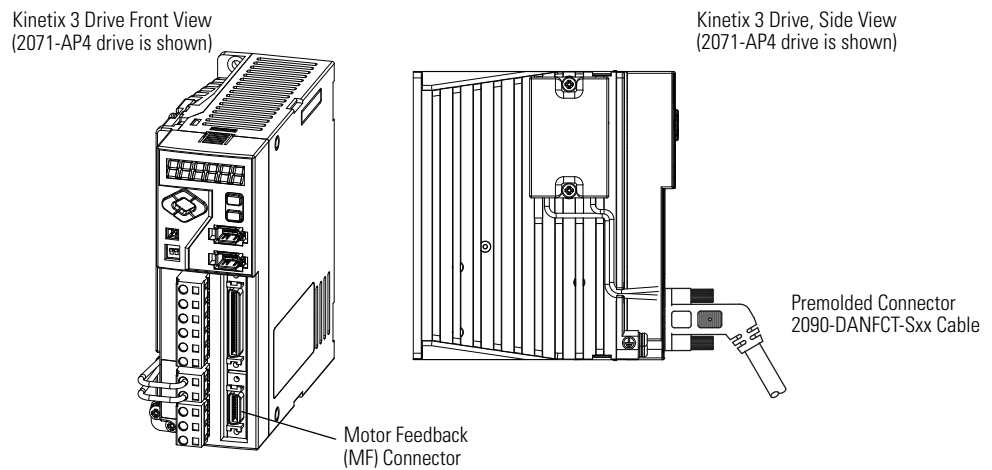

Wiring the Feedback Breakout Board

The 2071-TBMF Feedback breakout board is suitable for terminating flying-lead motor feedback cables. Use it with the Kinetix 3 drive and all motors with incremental or high-resolution feedback. It has a 20-pin, male, mini D-sub connector and is compatible with all Bulletin 2090 feedback cables.

The TLY-Axxxx-B high-resolution motors with 17-bit encoder require a 3.6V battery, purchased separately, see [Replacement Battery Specifications on page 108](#).

Figure 40 - Kinetix 3 Drive (MF connector)

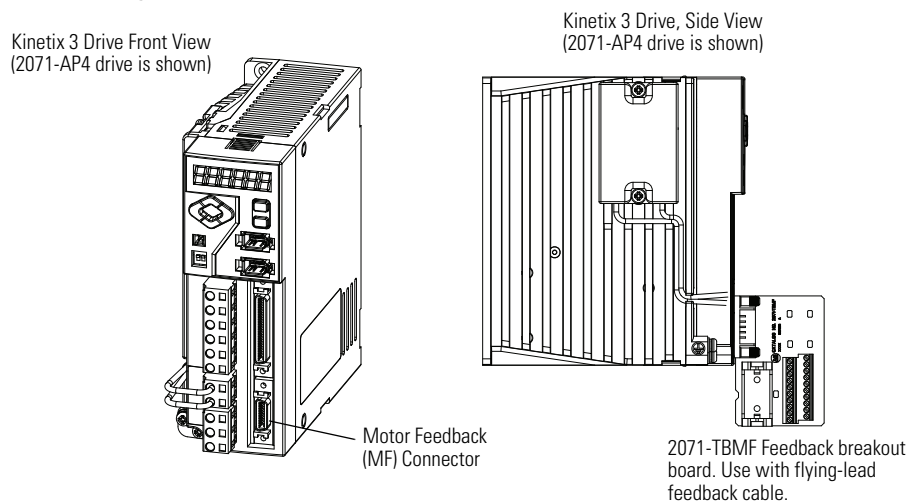
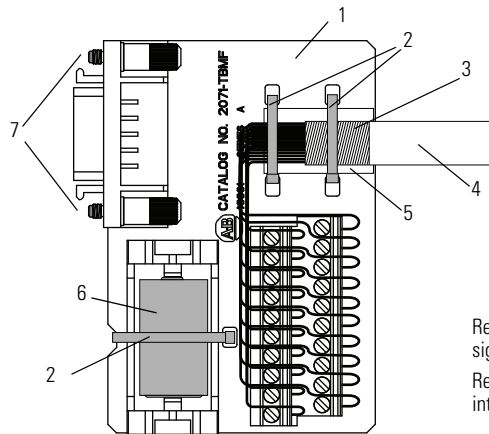


Figure 41 - Wiring 2071-TBMF Feedback Breakout Board

Refer to [Chapter 3](#) for feedback signal descriptions.

Refer to [page 114](#) for the motor feedback interconnect drawing for your application.

Item	Description
1	2071-TBMF Kinetix 3 feedback breakout board
2	Tie wrap
3	13 mm (0.5 in.) exposed cable shield
4	Bulletin 2090 feedback cable, catalog numbers 2090-XXNFMF-Sxx, 2090-CFBMxDF-CDAFxx, 2090-CFBM6DF-CBAAxx or 2090-DANFCT
5	Ground pad
6	3.6V battery ⁽¹⁾
7	Mounting screws

(1) Battery required if absolute position must be stored.

Serial Communication Cable Connections

This procedure assumes you have your Kinetix 3 drive mounted and ready to connect the network cables.

The Modbus-RTU network is connected by using the Comm0A and Comm0B connectors. Refer to [page 24](#) to locate the Modbus-RTU connectors on your Kinetix 3 drive. Refer to the figure below to locate the connector on your MicroLogix controller.

Shielded serial communication cables are available in lengths up to 3 m (9.8 ft). The maximum total cable length is up to 600 m (1968.5 ft) in the same network. A repeater should be used when there are more than 32 nodes.

Terminators are required at both ends of an RS-485 network cable. Kinetix 3 drives have a built-in termination resistor for RS-485. To use a terminator for RS-485 communication, turn on pin 1 and 2 of the termination switch on the display board. The internal terminator is 220 Ω . The 1/4 W or higher 120 Ω resistor can be used if an external termination resistor is needed.

If the entire channel is constructed of stranded cable (no fixed cable), then this is the equation for calculating maximum length:

Maximum Length (in meters) = $(113 - 2N)/y$
 where N = the number of connections in the channel
 and y = the loss factor compared to fixed cable (typically 1.2...1.5).

Figure 42 - Micrologix Serial Communication Port Location



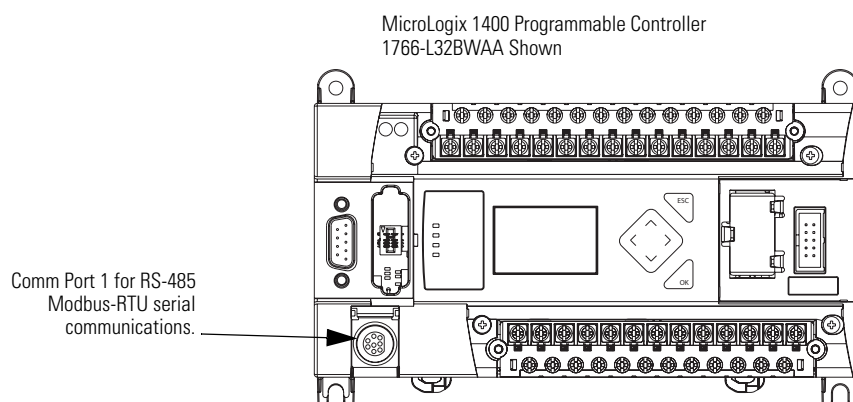


Figure 43 - RS-485 Modbus-RTU Serial Communication Wiring Example

Item	Description
1	Micrologix 1400 controller
2	Controller-to-drive RS-485 Modbus-RTU Serial Communication Cable, catalog number 2090-CCMCNDS-48AA
3	Kinetix 3 drive
4	Drive-to-drive serial communication cable, catalog number 2090-CCMDSDS-48AAxx
5	Termination switch (turn on switch 1 and 2 for termination)
6	Personal computer with Ultraware software
7	Communications cable via RS-232, Ethernet or DF1 ⁽¹⁾

(1) See MicroLogix 1400 Programmable Controllers User Manual, publication [1766-UM001](#) or MicroLogix 1100 Programmable Controllers User Manual, publication [1763-UM001](#) for communication protocol.

Figure 44 - RS-232 Serial Communication Wiring Example

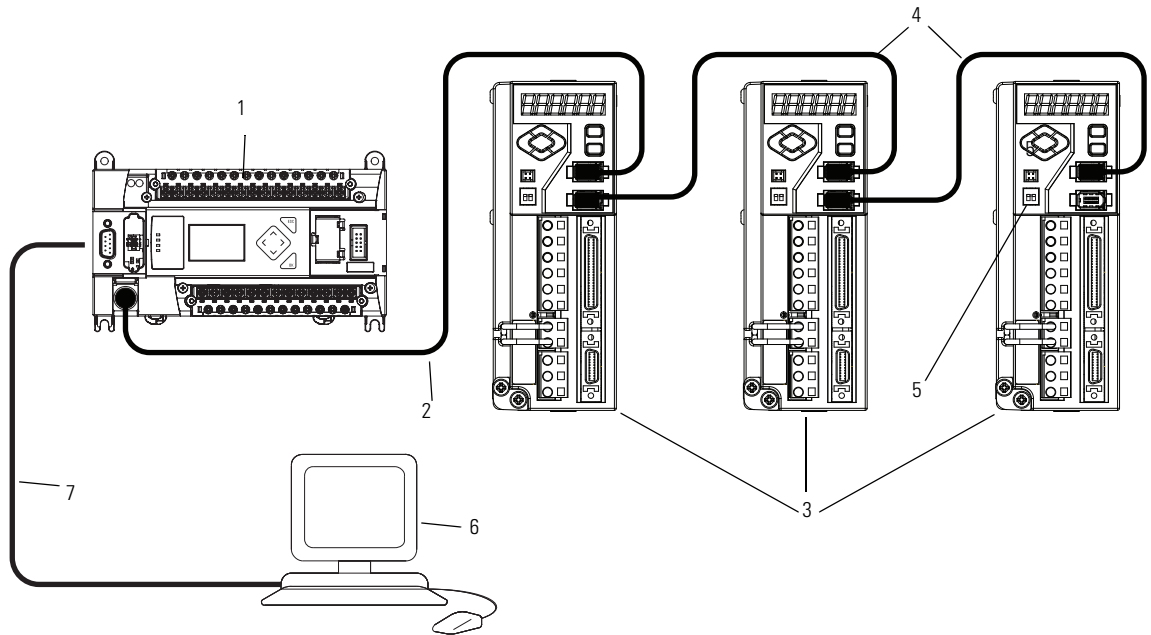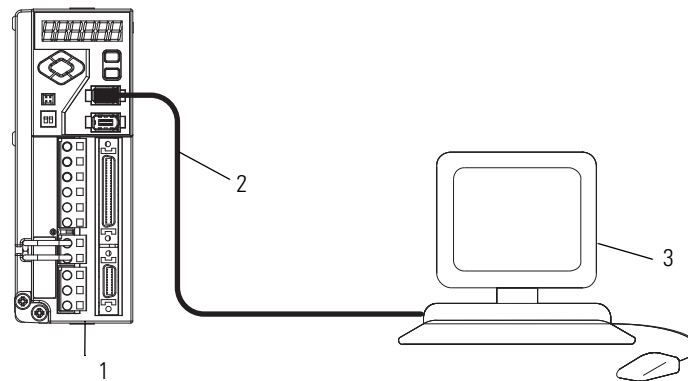

Item	Description
1	Kinetix 3 drive
2	RS-232 serial communication cable, catalog number 2090-CCMPCDS-23AA
3	Personal computer with Ultraware software

Configure and Start Up the Kinetix 3 Drive

Introduction


This chapter provides procedures for configuring your Kinetix 3 drive components.

Topic	Page
Introduction	73
Keypad Input	73
Download Ultraware Software	78
Configuring the Communication Port	78
Configure Your Kinetix 3 Drive for RS-232 Communication with Personal Computer	79
Configure Your Kinetix 3 Drive for RS-485 Communication with MicroLogix Controller	80
Apply Power to Your Kinetix 3 Drive	82

Keypad Input

The operator interface provides immediate access to the Kinetix 3 drive status displays and monitoring, parameter settings, and functional commands. The major features of the Kinetix 3 drive operator interface are identified in Figure 45 and described below.

Figure 45 - Kinetix 3 Operator Interface

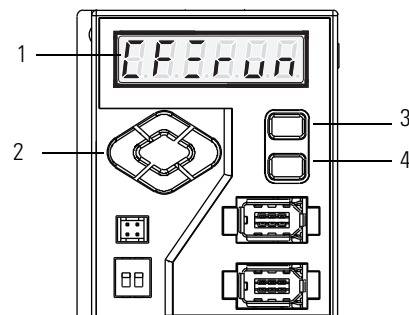

Item	Description
1	7-segment status indicator
2	Up, down, left, and right directional keys
3	Mode/Set key
4	Enter key

- The 7-segment status indicator displays status, parameters, function commands, and allows drive monitoring.


- The Control Power illuminates when the drive's control electronics are powered by application of 200...230V power to the L1C, and L2C Control Power pins.
- The Mode/Set, and Enter keys provide the operator with access to drive functions. The directional keys (Up, Down, Left, and Right) edit drive function settings. These keys allow the operator to monitor and change the drive's program.

The following briefly explains the Mode/Set, Enter, and directional keys and their use.

Key	Name	Function	Example
	Set	Saves the current value of the setting in memory.	To save any change: • Press and hold Set until the display blinks.
	Mode	Toggles the display between the four modes. Important: The Status mode is the default display at powerup.	To advance the display through the various mode displays: 1. Press Mode to advance from the Status mode (default display) to Set Parameter mode, 2. Press Mode again to advance to Monitor mode. 3. Press Mode again to advance to the Function mode. 4. Press Mode once more to return to the Status mode.
	Enter	Enter or exit a display containing the settings for the selected mode. Important: Before exiting the display, Set must be pressed and held until the display blinks to save any modified value to memory.	To access the settings for Pr-0.00 from the Status mode: 1. Press Mode to advance to the initial Parameter display (PR-0.00). 2. Then press Enter to access the parameter's value (01 is the default setting).
	Up	Increments the value to a larger integer. A non-functional key in the Status mode.	In any Parameter Setting, Monitor, or Function mode: • Press and hold the UP key to scroll to the maximum value.
	Down	Decrements the value to a smaller integer. A non-functional key in the Status mode.	In any Parameter Setting, Monitor, or Function mode: • Press and hold the DOWN key to scroll to the minimum value.
	Left	Shifts the active digit to the left. An invalid key for the Status mode.	In the Set Parameter mode: 1. Press Left to move from least to the most significant digit in parameters (PR-x.xX to PR-x.Xx). 2. Press LEFT again to move to the groups digit (PR-X.xx).
	Right	Shifts the active digit to the right. An invalid key for the Status mode.	In the Set Parameter mode: 1. Press RIGHT to move from least significant digit in parameters to the groups digit (PR-x.xX to PR-X.xx). 2. Press RIGHT again to move to the most significant digit in Parameters (Pr-x.Xx).

Status Display/Operation Mode

Operation mode - When the drive is powered up, if there are no faults, this is the default status screen. It shows the Control mode, status indicators, and whether the drive is enabled.

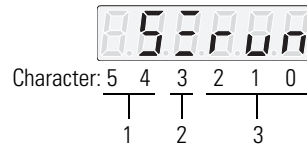

Item	Description	
1	Control Mode: Characters 4 and 5	F = Follower S = Analog Velocity Input C = Analog Current Input SF = Analog Velocity Input/Follower CF = Analog Current Input /Follower CS = Analog Current Input/Analog Velocity Input P = Preset Velocity PF = Preset Velocity/Follower PS = Present Velocity/Analog Velocity Input PC = Present Velocity/Analog Current Input I = Indexing
2	Row Display: Character 3	Top Row = Inactive for any Current mode. Active if Velocity mode and Velocity Error is within velocity window. Active if Follower mode and Position Error is within following error setting. Middle Row = Active if velocity exceeds Up To Speed parameter. Bottom Row = Active for Hall start-up motors once the commutation angle is set.
3	Status: Characters 0...2	rdy = Drive is disabled, but ready to be enabled. run = Drive is enabled and motor is under control.

Error Display

If the drive is faulted, it will not show the Operation Mode screen. Instead it will alternate between the Error Description and the Error Number. For an Emergency Stop error, this is what it would look like.

Figure 46 - Error Descriptor



Figure 47 - Error Number



Parameter Edit

From this screen, scroll through the general parameter groups (before the period) and then pick the parameter you wish to view or edit (after the period).

Figure 48 - Parameter Edit



Index Edit

From this screen, scroll through the indexing parameter groups (before the period) and then pick the parameter you wish to view or edit (after the period).

Figure 49 - Index Edit



Display Mode

The Display mode displays numerical data about drive and motor functions of twenty four parameters. To access the data:

1. Enter the Display mode by pressing the Mode key.

The display indicates the selected function by displaying d15-*nn* where *nn* is a display attribute number shown in [Table 27](#).

2. Using either the Up, Down, Right, or Left keys, select a display attribute number.
3. Press the Enter key.

The the value of the attribute displayed.

Table 27 - Display Mode

Display Attribute Number	Attribute	Unit
00	Velocity Feedback	rpm or mm/s
01	Velocity Command	rpm or mm/s
02	Velocity Error	rpm or mm/s
03	Current Command	0.1% of motor rated continuous torque
04	Follower Position	counts
05	Master Position	counts
06	Position Error	counts

Table 27 - Display Mode (cont.)

Display Attribute Number	Attribute	Unit
07	Position Command Count Frequency	0.1 kcounts/s
08	Commutation Angle	0.1°
09	Mechanical Angle	0.1°
10	Shunt Power Limit Ratio	%
11	Bus Voltage	V
12	Absolute Rotations	revolutions
13	Velocity Command Offset	mV
14	Current Command Offset	mV
15	Input and Output State	
16	Error History	Up to eight alarms stored in numerical order where most recent =1, to oldest =8, with error code number: Most significant digit is alarm number (1–8), Least significant six digits are the error code number referenced in the Error Displays beginning on page 98 . For example; 1-E004 = most recent error is a Motor Overtemp
17	Firmware Revision	For Example; vEr.x.yy where x = version, yy = revision
18	Motor Model	—
19	Analog Velocity Command Voltage	0.01V
20	Analog Current Command Voltage	0.01V
21	Drive Rated Output Power	W
22	Absolute Single-Turn	—
23	Motor Position	—

Run

The Run mode is reserved for future use. There are no user accessible commands or information available from this screen.

Download Ultraware Software


To communicate and configure your Kinetix 3 drive by using serial communication from a personal computer, download and install Ultraware software on your personal computer. To get the latest Ultraware software follow these steps.

1. Run internet browser.
2. Navigate to <http://www.rockwellautomation.com/rockwellsoftware/downloads/>.
3. Set Category = Downloads
Sub-Category = Utilities (Downloads)
Product = Misc.
4. Click Search.
5. Click Ultraware.
6. Click Download Ultraware.

Configuring the Communication Port


The Kinetix 3 drive communication port can be configured for RS-232 communication with your personal computer or RS-485 Modbus-RTU communication to a MicroLogix controller. These figures are cable pin-outs for RS-232 or RS-485 Modbus-RTU. Note that the configuration of the serial port includes both Comm0A and Comm0B. Changing between RS-232 and RS-485 Modbus-RTU requires different cabling and serial port configurations. If you are not using the pre-made RS-232 Serial Communication Cable, catalog number 2090-CCMPCDS-23AAxx, use this schematic to make your own cable.

Figure 50 - RS-232 Connection with Personal Computer

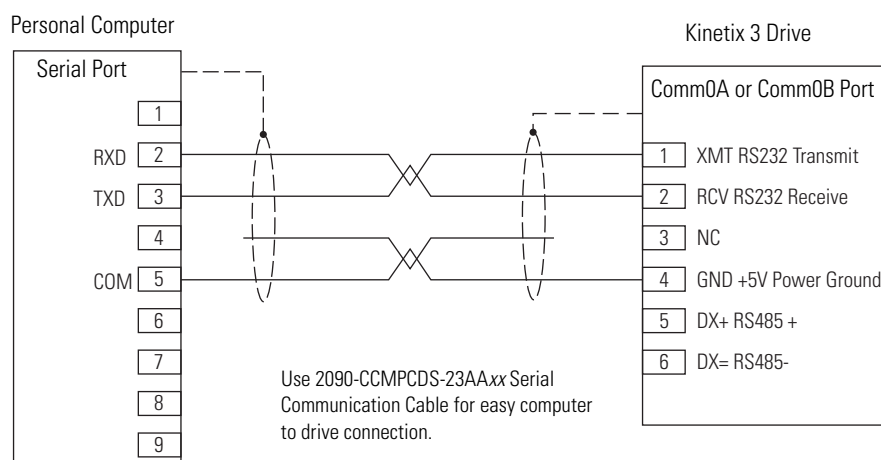

The following shows connection to a MicroLogix 1100 or 1400. This requires a 1763-NC01 8-pin mini DIN to 6-pin RS-485 connector. If the Kinetix 3 is the last device on the network, the RS-485 termination switches on the front of the drive need to be set to “ON”. If you are not using the pre-made RS-485 Serial Communication Cable, catalog number 2090-CCMCNDS-48AAxx, use this schematic to make your own cable.

Figure 51 - RS-485 Connection with MicroLogix Controller.

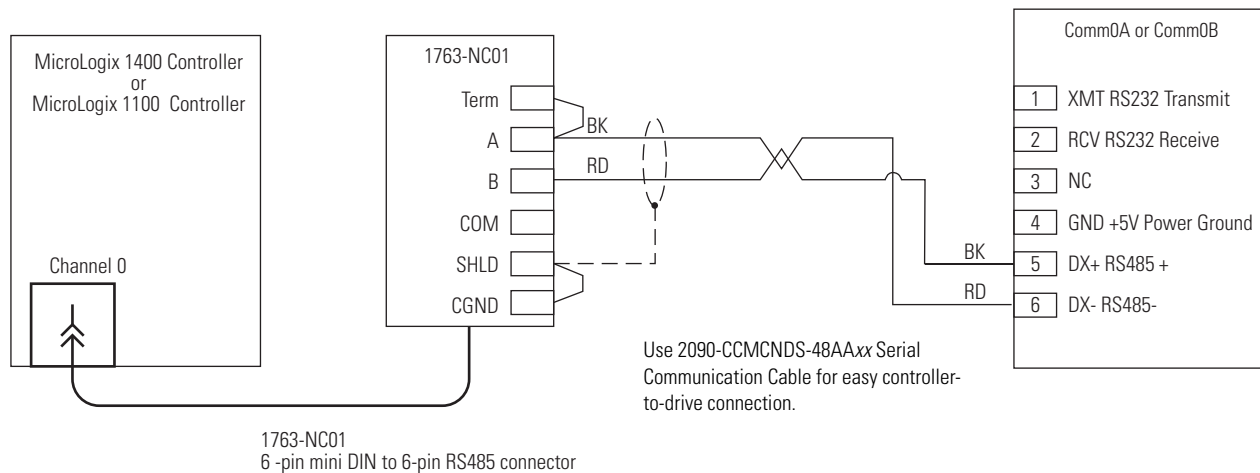

Configure Your Kinetix 3 Drive for RS-232 Communication with Personal Computer

To configure Kinetix 3 drive communication port for RS-232/ASCII communication follow these steps.

- Using the keypad on the front of the drive, set the following parameters.

See [Status Display/Operation Mode](#) for keypad operation.

Parameter Name	Parameter	Setting
Drive Address	Pr0.07	required address. (1 - Default)
Serial Port Configuration	Pr0.09	0005 - Default where, 5 - 57600bps Baud Rate 0 - 8 Data Bits, No Parity, 1 Stop Bit 0 - ASCII protocol 0 - RS-232

- Connect to your personal computer with the RS-232 serial communication cable, catalog number 2090-CCMPCDS-23AAxx.

For information on the serial communication cables refer to Serial Communication Cables Installation Instructions, publication [2090-IN019](#)

- Run Ultraware software, version 1.80 or greater on your personal computer and proceed with [Detect Your Kinetix 3 Drive](#).

Configure Your Kinetix 3 Drive for RS-485 Communication with MicroLogix Controller


To configure Kinetix 3 drive communication port for RS-485 Modbus-RTU communication follow these steps.

1. Using the keypad on the front of the drive, set the following parameters.

See [Status Display/Operation Mode](#) for keypad operation

Parameter Name	Parameter	Setting
Drive address	Pr0.07	Required address (1 - Default)
Serial port configuration	Pr0.09	1102 where, 2 - 19200bps Baud Rate 0 - 8 Data Bits, No Parity, 1 Stop Bit 1 - Modbus-RTU protocol 1 - RS-485

2. Using RSLogix 500 software, configure MicroLogix 1100 or 1400 controller channel 0 for Modbus-RTU.

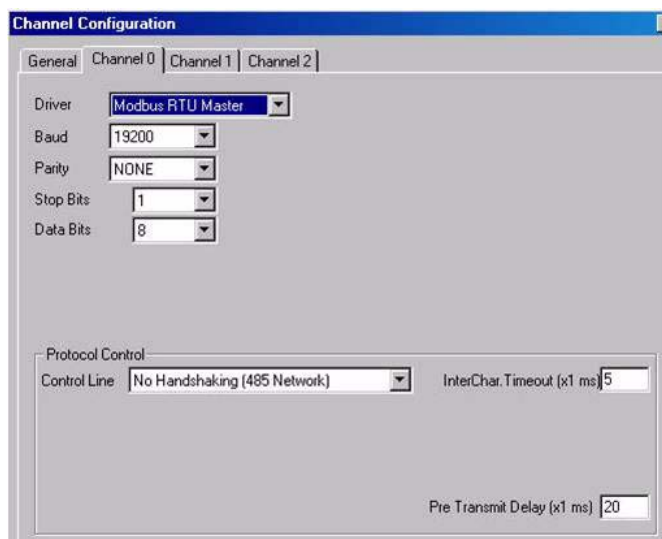

For details on MicroLogix controllers refer to their installation instructions.

If using	Refer to
MicroLogix 1100 controller	MicroLogix 1100 Programmable Controllers Installation Instructions, publication 1763-IN001
MicroLogix 1400 controller	MicroLogix 1400 Programmable Controllers Installation Instructions, publication 1766-IN001

3. Connect to the MicroLogix controller with the RS-485 serial communication cable, catalog number 2090-CCMCNDS-48AAxx.

For information on the serial communication cables refer to Serial Communication Cables Installation Instructions, publication [2090-IN019](#).

Apply Power to Your Kinetix 3 Drive

This procedure assumes that you have:

- wired your Kinetix 3 system,
- verified the wiring, and
- are ready to begin using the Ultraware software.

To apply power to your Kinetix 3 drive:

1. Disconnect any load to the motor.


IMPORTANT

Be sure that the motor is free of all linkages when initially applying power to the system.

2. Apply main and control input power to the Kinetix 3, and observe the operator interface on the front of the drive. The drive should enter a normal startup, as outlined below and shown in [Figure 52](#).

If the Main Power Status Indicator is	Then
ON	Go to step 3 .
OFF	Check your input power connections and repeat step 2 .

Figure 52 - Kinetix 3 Drive Operator Interface at Startup

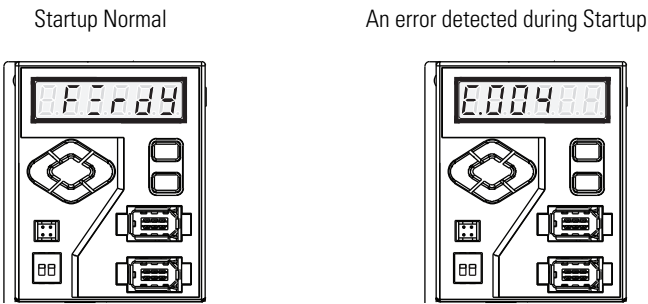

3. Verify the status of the drive startup, as outlined below and shown in [Figure 52](#).

If the six characters on the 7-segment display indicator	Then
rdY in the three least significant characters	The drive is ready. Go to Detect Your Kinetix 3 Drive on page 83 .
E. in the most significant character followed by a text string or error code number.	Refer to Error Displays on page 98 to troubleshoot the fault condition. Important: If a 17-bit serial motor is not connected or a 17-bit serial motor is installed without a battery backup, a fault condition will occur. Go to Detect Your Kinetix 3 Drive on page 83 .

Detect Your Kinetix 3 Drive

This procedure assumes you have successfully applied power to your drive. These steps are designed to make sure that your Kinetix 3 drive is communicating with your Ultraware software.

Follow these steps to detect your Kinetix 3 drive.

1. Start your Ultraware software.


Refer to the Ultraware User Manual, publication [2098-UM001](#), for more information on starting the Ultraware software.

2. Create a new file.

The software will scan for online drives.

3. Click Stop Scanning when your drive is detected or wait for the scanning to time out.
4. Look for the Kinetix 3 icon under the On-Line Drives tree.

The Kinetix 3 icon indicates that your drive is detected.

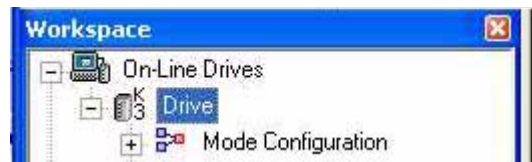


5. Click the [+] next to the Kinetix 3 icon to expand the branch menu.


If Your Kinetix 3 Drive	Then
Is detected and listed under the On-Line Drives tree.	1. The software and hardware are communicating and the system is ready. 2. Go to Select a Motor on page 87.
Is not detected.	1. Check your serial cable connections. 2. Use Recover Communications (in Ultraware) to establish a connection. 3. Go to main step 1 of this section. 4. Verify no other program such as RSLinx is using the serial port.

Understanding the Workspace and Drive Branches

This section provides a description of the Ultraware workspace and various drive branches.

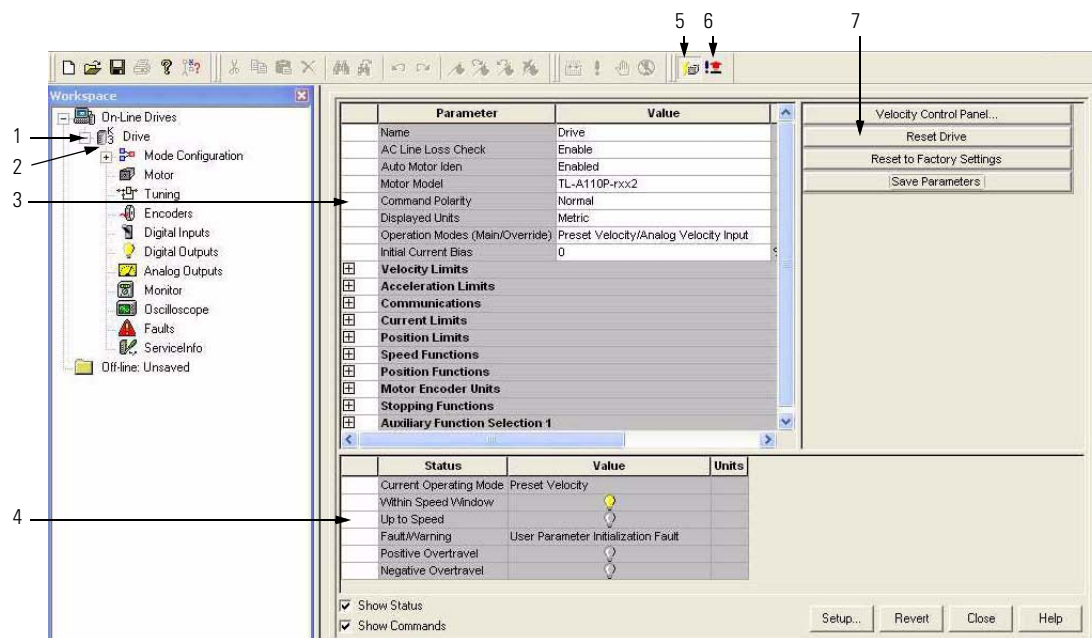

Item	Description
1	Click the [+] next to K3 Drive to expand the parameter group.
2	Double-click the K3 Drive icon in the Ultraware workspace to display the various drive branches.
3	Configure drive parameters for an on-line drive.
4	Monitor the status of an online drive.
5	Software Enable icon.
6	Disable All Drives icon.
7	Execute commands to clear faults, reset the drive, or reset the EEPROM.

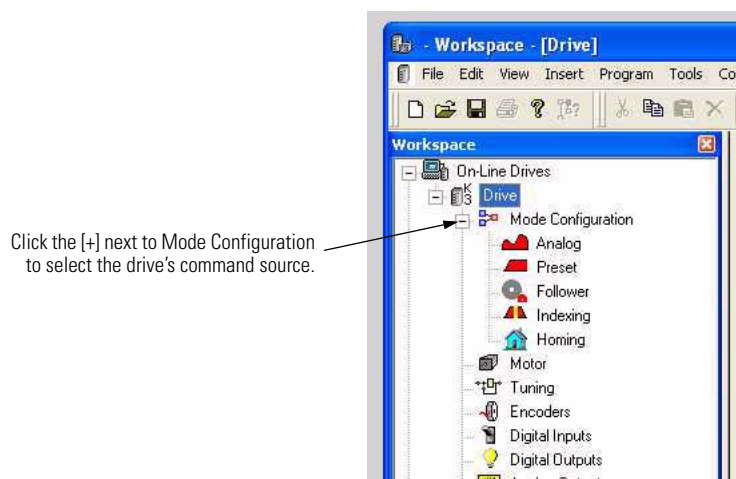Mode Configuration Branch*Motor Branch*

Use the Motor Branch to:

- select a motor for the associated online or offline Kinetix 3 drive. Once you select a motor, the status values associated with the selected motor appear in the Status pane of this dialog box.
- monitor the status as related to the selected motor.
- perform diagnostics on the motor.

Tuning Branch

Use the Tuning Branch to:

- configure Velocity and Position Regulator Gains that are used in tuning.
- monitor Velocity, Position, and Current loop status.
- open dialog boxes where you can execute commands for autotuning, manual position tuning, and manual velocity tuning.

Encoders Branch

Use the Encoders Branch to configure the motor encoder.

Digital Inputs Branch

Use the Digital Inputs Branch to:

- assign functionality to digital inputs.
- monitor the status of digital inputs.

Digital Outputs Branch

Use the Digital Outputs Branch to:

- assign functionality to digital outputs.
- set both active and inactive brake delays.
- monitor the status of digital outputs and the digital relay.

Analog Outputs Branch

Use the Analog Outputs Branch to:

- assign drive signals to analog outputs.
- monitor the status of analog outputs.

Monitor Branch

Use the Monitor Branch to:

- view a collection of statuses.
- open the Monitor Setup dialog box where you can select the collection of statuses to display in this dialog box.
- load a monitor previously saved.
- save a monitor for later use.

Oscilloscope Branch

Use the Oscilloscope Branch to trace one of four drive signals by:

- configuring the oscilloscope by selecting the drive signal to trace.
- executing commands that run the oscilloscope's tracing function continuously or in response to the configured trigger.
- monitoring the oscilloscope as it traces the selected drive signal.

Faults Branch

Use the Faults Branch to:

- set fault limits.
- monitor fault status.
- execute the Clear Faults command.
- open a dialog box where you can review the drive's fault history.

Service Information Branch

Use the Service Information Branch to:

- display and monitor service information about the drive.
- display the firmware revision of the drive.

Select a Motor


This procedure assumes you have power applied to your drive and the drive is detected by the Ultraware software.

Refer to the Ultraware User Manual, publication [2098-UM001](#), for more information on selecting a motor.

Follow these steps to select a motor.

1. Double-click the Kinetix 3 icon under the On-Line Drives tree.

The Kinetix 3 Drive properties dialog box opens.

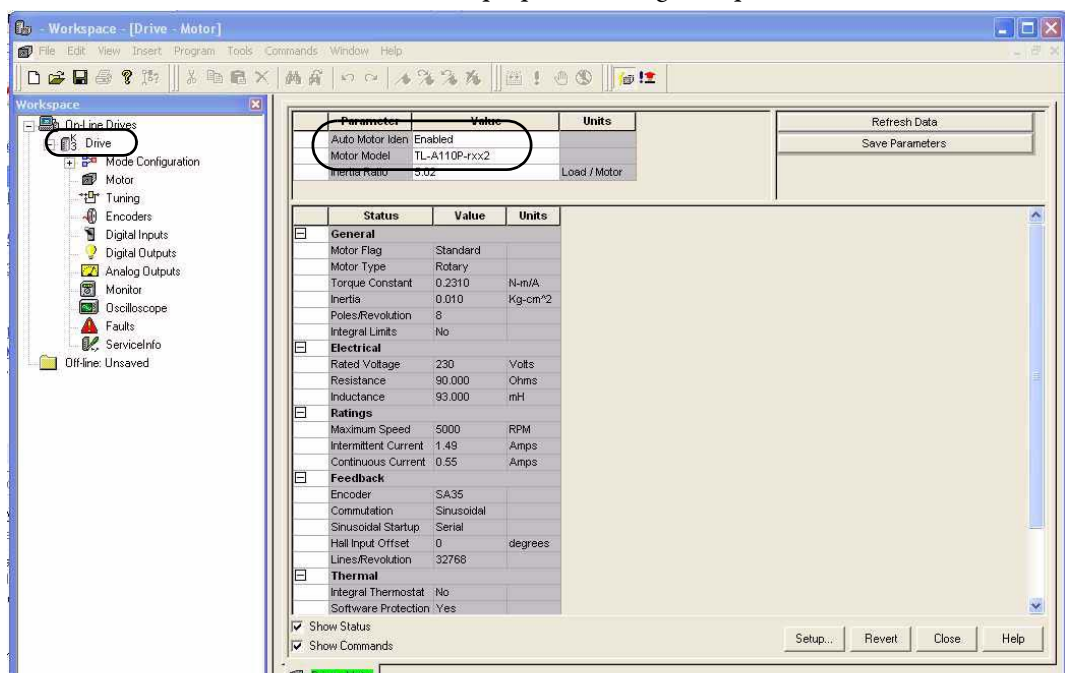

Actual values depend on your application. Auto Motor Iden default value is Enabled and remains Enabled if a motor with intelligent encoder is detected or selected. Value changes to Disabled if a motor without intelligent encoder is selected.

2. Check the Motor Model parameter value.

If motor is	Value (motor cat. no.)	Go To
An Allen-Bradley motor with intelligent encoder	Is recognized by the Ultraware software	Assign Digital Inputs on page 88 .
	Is not recognized by the Ultraware software	Go to Fault Codes in Chapter 6 and refer to troubleshooting for E30.
Not an Allen-Bradley motor with intelligent encoder		Step 3 .


3. From the Motor Model pull-down menu, choose your motor.

Assign Digital Inputs

Follow these steps to assign Digital Inputs.

1. Double-click the Digital Inputs branch.

The Digital Inputs properties dialog box opens.

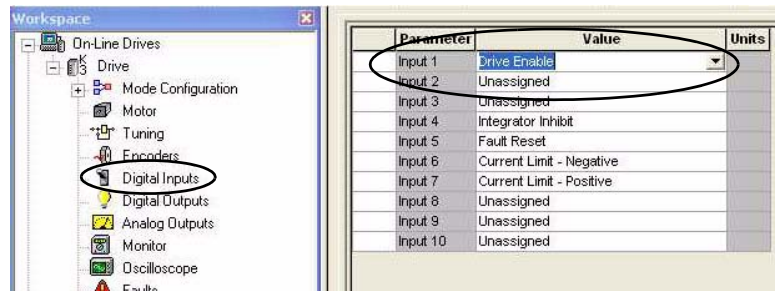

2. Verify that Input 1 value is set to Drive Enable (this is default).

The Drive Enable switch can be removed from the digital inputs, but can lead to immediate motion upon drive powerup.



ATTENTION: To avoid fault action or damage to the drive due to improper sequencing of input power and the Drive Enable signal, assign one of the ten inputs as Drive Enable (Input 1 is the default setting).

3. Configure remaining digital inputs as required by your application.
4. Close the Digital Inputs properties dialog box.


Tune Your Motor

This procedure assumes your drive is detected and you have selected a motor. In this procedure you will autotune your motor.

Follow these steps to autotune your motor.

1. Double-click the Tuning branch.

The Tuning properties dialog box opens.

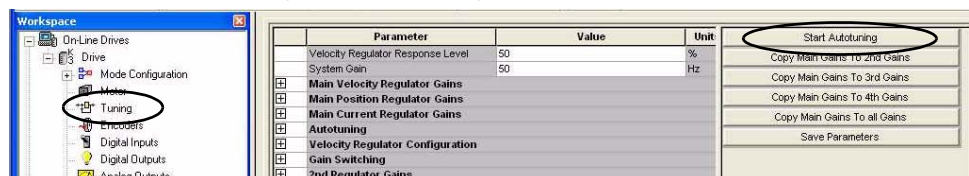

2. Click Start Autotuning.


The Autotuning warning dialog box opens.




ATTENTION: Autotuning will begin even if the drive is disabled.

3. If you are ready to Autotune, Click Ok.

The default Autotune dialog box opens.

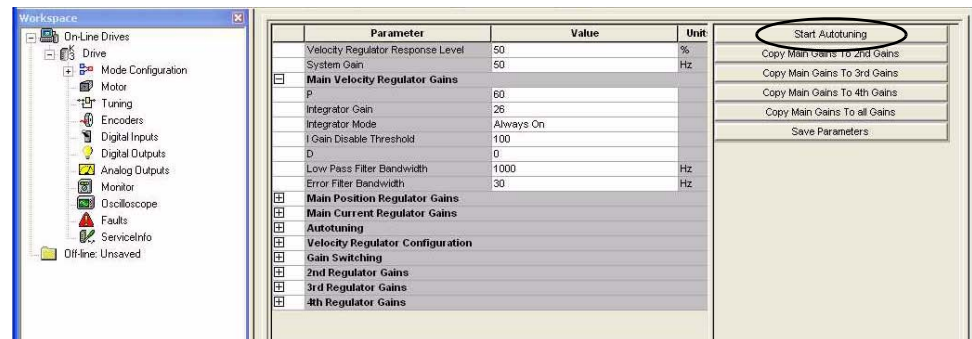**4. Click Start Autotune.**

The motor responds and the tuning process is complete. Actual values depend on your application.

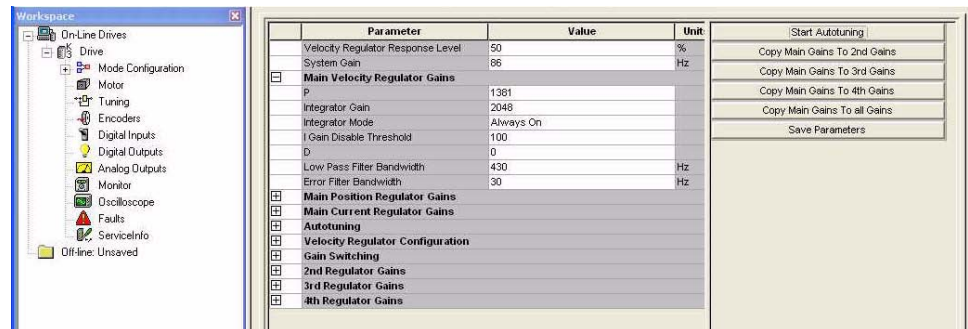
**5. Copy the Main Gains to alternate gains as needed, repeat, and then close the Tuning properties dialog box.**

Configure Displayed Units

The default value setting for Displayed Units is metric. English units are also an option. For values of your own choosing, select User. User units is similar to setting up an application conversion constant. This is useful when the application requires the use of a transmission or other equipment. For example, if motor encoder activity is being measured in counts and the number of revolutions (rpm) is more meaningful, you can change counts to rpm.


1. Double-click the Kinetix 3 icon under the On-Line Drives tree.

The Kinetix 3 Drive properties dialog box opens.

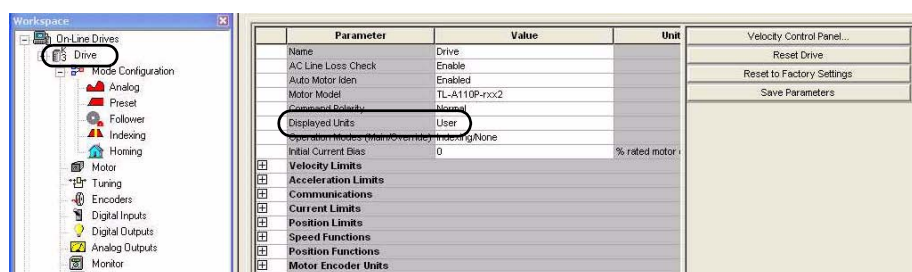


2. Click the Value field next to Display Units and choose User.
3. Click the [+] next to Motor Encoder Units.

Use these parameter settings for an incremental encoder.

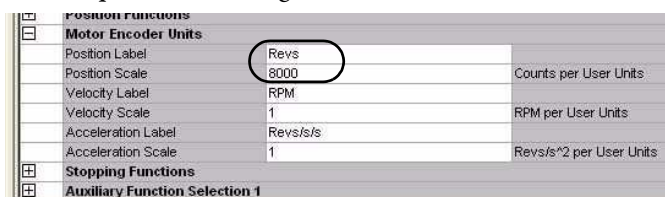

Use these parameter settings for a 17-bit serial encoder.

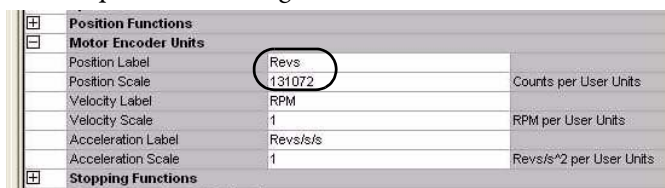

The Indexing parameters now list the position as revs and acceleration/deceleration as revs/sec/sec as defined above. These examples are for rotary motors directly coupled to the machine.

Test Your Motor (non-indexing move)


This procedure assumes you have applied power to your drive, the Ultraware software is running, the drive is detected, and you have selected a motor. In this procedure you will enable the drive and set the motor velocity to test the motor.

Refer to the Ultraware User Manual, publication [2098-UM001](#), for more information on using the velocity control panel.

Follow these steps to jog the motor at a constant speed.

1. Double-click the Kinetix 3 icon.


The drive properties dialog box opens.

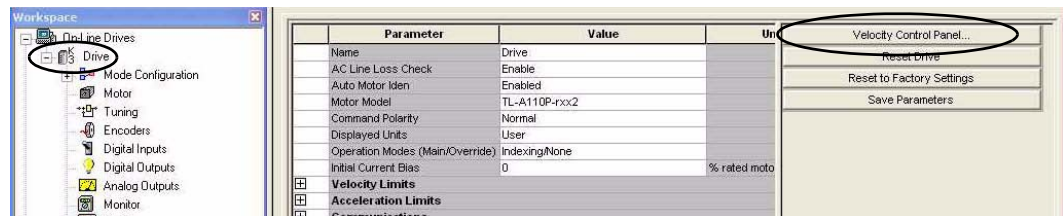

2. Click Velocity Control Panel.

The velocity control panel dialog box opens.

3. Click Jog Enable.

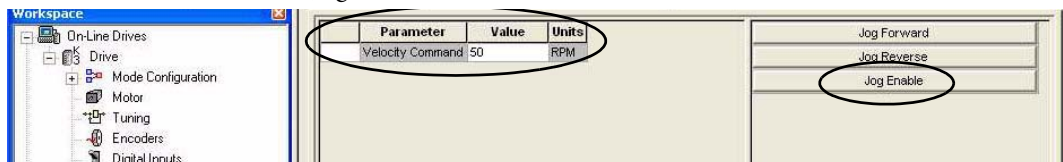

4. In the Velocity Command box, enter an appropriate low speed.
5. Press Jog Forward.

The motor should be turning at the velocity you entered in [step 4](#).

6. Click Disable All.

The motor stops.

7. Close the velocity control panel.

The drive is software disabled and the enable icon in the tool bar is no longer illuminated.

Test Your Motor (indexing move)

This procedure assumes you have applied power to your drive, the Ultraware software is running, the drive is detected, the drive is set to user defined units of Revs, and you have selected a motor. In this procedure you will enable the drive and make an incremental move to test the motor. The drive needs to be in indexing mode for testing an indexing move.

Refer to the Ultraware User Manual, publication [2098-UM001](#), for more information on using the indexing control panel.


Follow these steps to test your motor.

1. Double-click the Kinetix 3 icon.

The drive properties dialog box opens.

2. Expand the Mode Configuration branch and double-click Indexing.


The Indexing Setup dialog box opens.

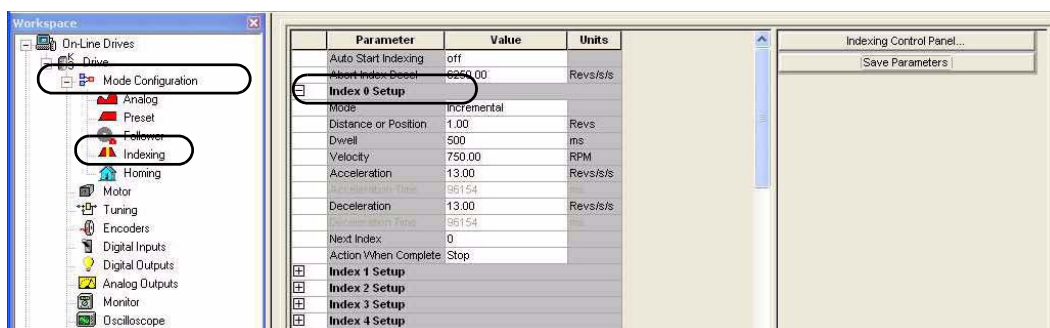

3. Expand Index 0 Setup.
4. Configure your incremental move with these values for Index 0:
 - Mode = Incremental
 - Distance = 1.0 Revs
 - Dwell = 500 ms
 - Velocity = 750 rpm
 - Acceleration = 13 Rev/s^2
 - Deceleration = 13 Rev/s^2
 - Next Index = 0
 - Action When Complete = Stop

In this example, the Bulletin TL motor uses a 17-bit serial encoder, with 131,072 counts per revolution. Because the user units were already defined as 131,072 units per revolution, the distance here can be entered as 1.0 Revs. If using a Bulletin TLY motor with an incremental encoder, it would be 8,000 counts per revolution.

5. Click Indexing Control Panel in the drive properties dialog box.

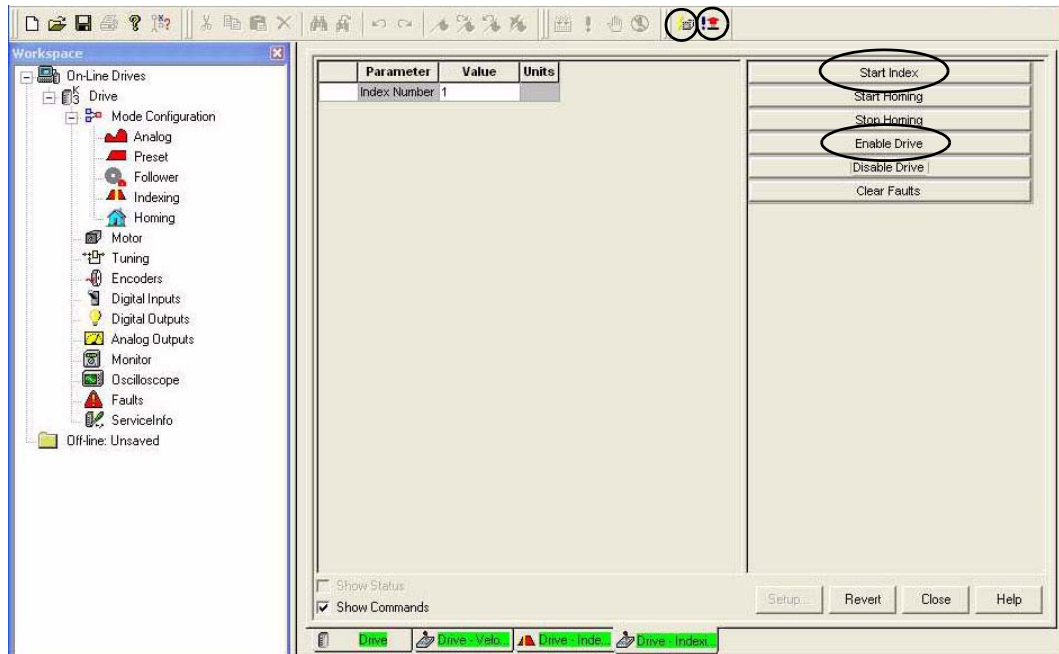

6. Click Enable Drive.
7. Click Software Enable to the depressed position.
8. Click Start Index.
9. Close the indexing control panel dialog box.

The drive is software disabled and the tool bar Enable icon is no longer on.

10. Close the Indexing mode dialog box.

Notes:

Maintaining and Troubleshooting Your Kinetix 3 Servo Drive

Introduction

This chapter provides a description of maintenance and troubleshooting activities for the Kinetix 3 Servo Drive.

Safety Precautions

Observe the following safety precautions when troubleshooting your Kinetix 3 drive



SHOCK HAZARD: DC bus capacitors may retain hazardous voltages after input power has been removed. Before working on the drive, measure the DC bus voltage to verify it has reached a safe level or wait the full time interval listed on the drive warning label. Failure to observe this precaution could result in severe bodily injury or loss of life.



ATTENTION: Do not attempt to defeat or override the drive fault circuits. You must determine the cause of a fault and correct it before you attempt to operate the system. If you do not correct a drive or system malfunction, it could result in personal injury and/or damage to the equipment as a result of uncontrolled machine system operation.



SHOCK HAZARD: Test equipment (such as an oscilloscope or chart recorder) must be properly grounded. Failure to include an earth ground connection could result in a potentially fatal voltage on the oscilloscope chassis.

Maintaining Your Kinetix 3 Drive

The Kinetix 3 is designed to function with a minimum of maintenance.

To maintain your Kinetix 3 drive:

- Clean the drive periodically, by using an OSHA approved nozzle that provides compressed air under low pressure, less than 20 kPa (30 psi), to blow the exterior surface and the vents clean.
- Visually inspect all cables for abrasion.
- Cable connectors should be inspected for proper seating and signal continuity end-to-end.

General Troubleshooting

Refer to the [Fault Codes](#) section below to identify anomalies, potential causes, and appropriate actions to resolve the anomalies. If anomalies persist after attempting to troubleshoot the system, please contact your Allen-Bradley representative for further assistance. To determine if your Kinetix 3 drive has an error, refer to the table immediately below.

If the Main Power and Control Power Status Indicators are ON and the Status Display on the Drive is	Then
Displays 'rdy' in the three right-most characters	The Kinetix 3 drive is ready.
Displays 'Pot' or 'not'	The Kinetix 3 drive encountered an Overtravel Condition and motion restrictions are in effect.
Displays a three-digit warning message	The Kinetix 3 drive is functional, but a drive warning is displayed. Proceed to the section Warning Messages .
Alternates between a three-digit error code and a six-digit text message	An Kinetix 3 drive error has occurred. Proceed to the section Error Displays .

Overtravel Condition

Overtravel displays (see the following table) occur if the drive detects an overtravel condition.

Overtravel Display	Possible Cause	Action/Solution
 Positive Overtravel	A Positive Overtravel condition is detected.	Apply motion in a negative direction to move off of overtravel limit switch.
 Negative Overtravel	A Negative Overtravel condition is detected.	Apply motion in a positive direction to move off of overtravel limit switch.

Fault Codes

The following list of assigned error codes is designed to help you resolve anomalies.

Warning Messages

Warnings are drive abnormalities that allow motor control to continue. Warnings are displayed on the drive's Status display using the last three segments of the display to display an abbreviated title.

Warning Display	Possible Cause	Action/Solution
 Absolute Encoder Counter Overflow	The Absolute Encoder has exceeded its rotational limit.	Reset the absolute encoder.
 Absolute Encoder Battery	Low battery warning, less than 3.2V is being supplied.	Replace battery or verify external power supply. ⁽¹⁾
 Power Up Overspeed	Control power is applied to the drive while the motor is in motion.	After verifying motor has stopped, recycle control power.
 Over Current Command	Improper setting of analog current scale.	Verify scaling parameter corresponds to analog signal range.
	System cannot meet motion profile.	• Verify velocity loop tuning. • Verify system sizing.
	Incorrect current limit settings.	Verify current limits do not restrict current to less than system capabilities.
 Over Speed Command	Improper setting of analog velocity scale.	Verify scaling parameter corresponds to analog signal range.
	System cannot meet motion profile.	• Verify position loop tuning. • Verify system sizing.
 Digital I/O Assignment	Inappropriate assignment of digital inputs or outputs.	• If operated in preset mode, verify presets are assigned. • If operated in a normal/override mode, verify the override function is assigned.
 Motor Over Rated Output Power	Motor rating larger than drive rating.	Match motor and drive sizing.

(1) Battery replacement causes loss of absolute position. Homing may be necessary.

Error Displays

Errors are serious abnormalities that cause loss of motor control. The Error display alternates between a three-digit error code and a six-digit text message. The error displays repeat until the anomaly is cleared.

Table 28 - Error Displays

Error Code	Text Message	Possible Cause	Action/Solution
E00400 E00400 Motor Overtemperature		Motor thermal switch trips due to: • High motor ambient temperature, and/or • Excessive current	• Operate within (not above) the continuous torque rating for the ambient temperature. • Lower ambient temperature, or increase motor cooling.
		Motor wiring error	Check motor wiring.
		Incorrect motor selection	Verify the proper motor has been selected.
E00500 E00500 IPM Error		Motor power cables shorted	Verify continuity of motor power cable and connector.
		Motor winding shorted internally	Disconnect motor power cables from the motor. If the motor is difficult to turn by hand, it may need to be replaced.
		Operation above continuous power rating	• Verify ambient temperature is not too high. • Operate within the continuous power rating. • Reduce acceleration rates.
		Drive has a bad IPM output, short circuit, or overcurrent	Remove all power and motors connections, then perform a continuity check from the DC bus to the U, V, and W motor terminals. If continuity exists, check for wire strands between terminals, or replace the drive.
E00900 E00900 Bus Undervoltage		Low AC line/AC power input	• Verify voltage level of the incoming AC power. • Check AC power sources for glitches or line drop. • Install uninterruptible power supply (UPS) on the AC input.
		Attempted to enable drive without main power active.	Apply main power before enabling drive.
E01000 E01000 Bus Overvoltage		Excessive regeneration of power (that is when the motor is driven by an external mechanical force, it may regenerate too much peak energy through the drive's power supply and the drive faults to save itself from an overload.)	• Verify shunt circuit. • Adjust motion profile to stay within the range of the regenerative resistor. • Replace regenerative transistor. • Replace the drive.
		Excessive AC input voltage	Verify input is within specification.
E01200 E01200 Home Search Failed		Homing is not complete within the time defined in Homing time limit (IN-01.11) is elapsed.	• Increase the time defined in Homing time limit (IN-01.11). • Set a value other than '0' in Homing Velocity (IN-01.02) and Creep Velocity (IN-01.03). • Check if there is any obstacle that disturbs Homing. • Check mechanical parts and parameter settings for Homing.

Table 28 - Error Displays (cont.)

Error Code	Text Message	Possible Cause	Action/Solution
 E018 Motor Overspeed		Motor speed exceeds maximum	• Confirm encoder wiring. • Retune drive system. • Verify input gain of external speed or torque command.
 E019 Excess Position Error		Position error exceeds permitted value	• Increase following error limit. • Check position loop tuning.
 E022 Motor Continuous Current Overload		The internal filter protecting the motor from overheating has tripped	• Reduce acceleration rates. • Reduce duty cycle (ON/OFF) of commanded motion. • Increase time permitted for motion. • Use larger drive and motor. • Check tuning.
 E023 Drive Overload		The motion application requires average drive current in excess of rated capability	• Reduce acceleration rates. • Reduce duty cycle (ON/OFF) of commanded motion. • Increase time permitted for motion. • Use larger drive and motor. • Check tuning.
 E028 Encoder Data Range Error		Encoder not programmed correctly	Replace motor.
		Encoder memory corrupted	
 E030 Encoder Cable Open		Communication not established with an intelligent encoder.	• Verify motor selection if it does not support automatic identification. • Verify the motor supports automatic identification. • Verify encoder wiring.
		Hall error	
 E031 Encoder Data Parameter Error		Encoder not programmed correctly	Replace motor.
		Encoder memory corrupted	
 E036 Drive Overtemperature		Excessive heat exists in the drive	• Verify cooling fan operation (2071-AP8, 2071-A10, and 2071-A15 only). • Check tuning. • Reduce acceleration rate. • Reduce duty cycle (ON/OFF) of commanded motion. • Increase time permitted for motion. • Use larger drive and motor.
 E037 AC Line Loss		Poor quality power	• Increase Ride Through time.
		Attempted to enable drive without main power active	• Apply main power before enabling drive.
		Phase connection missing	• Remove power and verify all physical connections.
		Fault Delay parameter is set too short	• Increase the Fault Delay parameter setting.
 E053 User Parameter Initialization Error		Error in parameter memory storage	• Reinitialize parameter. • Reset drive to factory defaults.
 E054 Current Feedback Offset		Defective hardware	Replace the drive.

Table 28 - Error Displays (cont.)

Error Code	Text Message	Possible Cause	Action/Solution
E05500 ECHSUM	User Parameter Checksum Error	Checksum error	- Confirm and reset parameter. - Reset drive to factory defaults.
E05600 ECPUFE	Watchdog Timeout	Excessive electrical noise	Verify wiring, grounding and bonding.
		Defective hardware	Replace the drive.
E05700 EHWAPF	PWM Hardware Error	Defective hardware	Replace the drive.
E05800 EPRNGE	User Parameter Range Error	Range of parameter is invalid	- Enter parameter with a value or values within range. - Reset drive to factory defaults.
E06000 EDINIT	Drive Initialization Error	Hardware error	Replace the drive.
E07500 ESHLOL	Shunt Overload Protection	Power at regenerative resistor exceeds the permitted value	Adjust motion profile to stay within the range of the regenerative resistor.
		Shunt resistor is disconnected or damaged	- Verify resistor connection. - Verify resistance of shunt resistor.
E07900 ESHLOC	Shunt Overcurrent Protection	Shunt current exceeded allowable instantaneous value	- Verify shunt is not shorted or damaged. - Verify load energy is not excessive during deceleration.
E08300 EAB5BE	Absolute Encoder Battery Error	Encoder Backup Battery parameter is set to installed, but a battery is not installed.	Set Encoder Backup Battery parameter to Not Installed.
		Battery voltage is sensed below 2.7V DC.	- Confirm battery voltage and connection. - Replace battery.
E08400 EAB5OS	Absolute Encoder Overspeed	Battery powered encoder is mechanically rotated at high speed while drive is powered down	- Mechanically disengage motor from system. - Cycle power to drive and reset alarm.
E08500 EAB5CE	Absolute Encoder Multi-turn Count Error	Electrical noise in the encoder	Cycle power to drive and reset alarm.
		Defective encoder	Replace motor.
E10000 ESETUP	Drive Set Up	The drive operating mode and motor selection are incompatible.	Change the operating mode and/or the motor selection, and reset the drive.
E10100 ECABLE	Motor Power Cable Open	Motor cable open	Verify power connection between motor and drive.
E10200 E1ASOL	Motor Instantaneous Current Overload	Motion profile requires a peak current for an excessive time interval	- Verify motor wiring. - Adjust accel/decel time. - Confirm motor selection.
		Defective current feedback sensing	Verify phase currents.
E10300 ENATCH	Motor Mismatch	Dynamic braking current of the selected motor exceeds twice the drive peak current rating	Install a different motor.

Table 28 - Error Displays (cont.)

Error Code	Text Message	Possible Cause	Action/Solution
E10500 EEncLP	Encoder Type Mismatch	Motor encoder signals do not match drive configuration	Verify motor selection.
		Defective encoder	Replace motor.
E10600 EEncCE	Encoder Communication Error	Wiring between drive and encoder is faulty or disconnected, or EMI (noise) disrupts encoder signals.	Verify encoder wiring.
E10700 ESErCE	Special Communication Error	Communication error between host and drive (noise)	- Verify serial cable. - Check for noise on serial communication interface.
E10800 EEdFrE	Position Command Frequency Error	Input frequency limit exceeded	- Verify hardware type selected in the drive matches the physical hardware. - Change from open collector to line drive. - Reduce the speed command. - Apply gearing.
E11200 EEStoP	Emergency Stop	Emergency stop (E-STOP) signal detected	- Remove Emergency stop conditions - Clear E-STOP
E11300 EIPrAnO	Index Position Range Overflow	The value of a Position Parameter for indexing is out of the range	Use a value within the range of $-2^{31} \dots +2^{31}$
E11400 EoOCUP	Motor Phase Over Current	- Anomaly with control or main power circuitry if this error occurs when power is turned on - Excessive current to the motor if this error occurs during operation (current more than 300% of the rated current to the motor more than 10 ms)	- Check wiring and power - Check power and set/adjust acceleration/deceleration time
E02700 EnoEHn	Axis Not Homed	A user tries any indexing without Homing operation completed	Complete homing before indexing

Notes:

Specifications and Dimensions

Introduction

This appendix provides product specifications and mounting dimensions for your Kinetix 3 drive system components.

Topic	Page
Introduction	103
Kinetix 3 Drive Power Specifications	104
Fuse/Contactor Specifications	105
Power Dissipation Specifications	106
General Specifications	106
AC Line Filter Specifications	108
Product Dimensions	109

Kinetix 3 Drive Power Specifications

This section contains power specifications for your Kinetix 3 drive system components.

Table 29 - Kinetix 3 Drive Power Specifications

Attribute	2071-AP0	2071-AP1	2071-AP2	2071-AP4	2071-AP8	2071-A10	2071-A15
AC input voltage	170...264V rms						
AC input phase	Single-phase				Single-phase/ Three-phase	Three-phase	
AC input frequency	47...63 Hz						
Mains AC input current ⁽¹⁾ Nom (rms) Max inrush (0-pk)	1.30 A	2.38 A	3.68 A	7.14 A	6.25 A (three-phase) 10.52 A (single-phase)	8.75 A	12.37 A
	21.9 A				22.6 A		
Mains AC line loss ride through	20 ms						
Nominal bus output voltage	311V DC						
Bandwidth ⁽²⁾ Velocity loop Current loop	550 Hz 2000 Hz						
PWM frequency	10 kHz						
Control power AC input voltage	170...264V rms						
Control power input current Nom (rms) Max inrush (0-pk)	0.1 A rms 31 A						
Continuous output current (rms)	0.61 A	1.11 A	1.72 A	3.33 A	5.05 A	7.07 A	9.9 A
Continuous output current (0-pk)	0.85 A	1.56 A	2.40 A	4.67 A	7.07 A	9.90 A	13.99 A
Peak output current (rms)	1.22 A	2.22 A	3.44 A	6.66 A	10.10 A	14.14 A	20.0 A
Peak output current (0-pk)	2.55 A	4.67 A	7.21 A	14.0 A	21.21 A	26.70 A	41.99 A
Continuous power output	50 W	100 W	200 W	400 W	800 W	1.0 kW	1.5 kW
Bus Overvoltage	405V DC						
Bus Undervoltage	190V DC						
Internal shunt resistor	N/A			50 Ω	30 Ω		
Internal shunt Continuous power Peak power	N/A N/A			30 W 300 W	70 W 700 W		
Shunt On	390V DC						
Shunt Off	380V DC						
Efficiency	90%						
Bus Capacitance	390 μF	780 μF			1170 μF		
Capacitive energy absorption	13 J	26 J			39 J		
Short circuit current rating	100,000 A (rms) symmetrical						

(1) Kinetix 3 drive modules are limited to 1 AC mains power cycling every 2 minutes.

(2) Bandwidth values vary based on tuning parameters and mechanical components.

Fuse/Contactor Specifications

Make sure the selected components are properly coordinated and meet acceptable codes including any requirements for branch circuit protection.

The following fuse examples are recommended for use with Kinetix 3 drives.

Table 30 - Fuse and Contactor Specifications

Drive Cat. No.	AC Input Power ^{(1) (2) (3)} Recommended Fuse	Control Power ^{(2) (4)} Recommended Fuse	Contactor ⁽⁵⁾
2071-AP0	FNQ-R-7	FRS-R-2-1/2 FNQ-R-7-1/2 LPJ-6	100-M05N _{xy}
2071-AP1			
2071-AP2			100-M09N _{xy}
2071-AP2	FNQ -R-10		100-M12N _{xy}
2071-AP8	FNQ-R-20 LPJ-20		100-C16 _{xy}
2071-A10			
2071- A15	FNQ-R-30 LPJ-30		100-C23 _{xy}

(1) Fuses specified are Bussmann fuses.

(2) FNQ-R fuses are described as time-delay fuses, Class CC.

(3) LPJ fuses are described as dual-element time-delay fuses, Class J.

(4) FRS-R fuses are described as dual-element time-delay fuses, Class RK5.

(5) For contactors: x represents coil voltage, y represents the number of contacts.

Power Dissipation Specifications

Use this table to size an enclosure and calculate required ventilation for your Kinetix 3 drive system

Drive Cat. No.	Usage as% of Rated Power Output (watts)				
	20%	40%	60%	80%	100%
2071-AP0	19.29	20.0	20.6	21.3	22.0
2071-AP1	20.14	21.6	23.1	24.6	26.2
2071-AP2	21.70	24.6	27.6	30.6	33.7
2071-AP4	25.59	31.9	38.4	45.2	52.2
2071-AP8	26.36	32.3	38.6	45.1	52.0
2071-A10	30.87	40.2	50.1	60.6	71.5
2071-A15	37.37	50.1	63.8	78.4	94.0

General Specifications

This section contains general specifications for your Kinetix 3 drive system components.

Maximum Feedback Cable Lengths

Although motor power and feedback cables are available in standard lengths up to 90 m (295.3 ft), Kinetix 3 drive maximum feedback cable length is 30 m (98.4 ft). These tables assume the use of recommended cables as shown in the Kinetix Motion Control Selection Guide, Publication [GMC-SG001](#).

Table 31 - Maximum Cable Lengths for Compatible Motors and Actuators

Rotary Motor Cat. No.	Incremental/TTL (5V) Encoder m (ft)	Absolute High-resolution (5V) 17-bit Encoder m (ft)
TL-Axxxx-B		30 (98.4)
TLY-Axxxx-B		
TLY-Axxxx-H	30 (98.4)	
Actuator Cat. No.	Incremental/TTL (5V) Encoder m (ft)	Absolute High-resolution (5V) 17-bit Encoder m (ft)
MPAS-Axxxx (direct drive)	30 (98.4)	
TLAR-Axxxx-B		30 (98.4)
Linear Motor Cat. No.	Incremental/TTL (5V) Encoder m (ft)	—
LDC-Series or LDL-Series	30 (98.4)	—

Weight Specifications

Drive Cat. No.	Weight, approx. kg (lb)
2071-AP0	0.70 (1.5)
2071-AP1	0.75 (1.6)
2071-AP2	
2071-AP4	1.0 (2.2)
2071-AP8	1.75 (3.9)
2071-A10	
2071-A15	

Certifications

Agency Certification ⁽¹⁾	Standards
c-UL-us	UL Listed to U.S. and Canadian safety standards (UL 508C File E59272). This drive provides integral solid state short circuit protection, but does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes. This drive provides solid state motor overload protection that is adjustable. Refer to the Kinetix 3 Component Servo Drives User Manual, publication 2071-UM001, for more information.
CE	European Union 2004/108/EC EMC Directive compliant with EN 61800-3:2004: Adjustable Speed Electrical Power Drive Systems - Part 3; EMC Product Standard including specific test methods. European Union 2006/95/EC Low Voltage Directive compliant with EN 61800-5-1:2007 - Safety of Machinery - Electrical Equipment of Machines.
C-Tick	• Radio Communications Act: 1992 • Radio Communications (Electromagnetic Compatibility) Standard: 1988 • Radio Communications (Compliance Labeling - Incidental Emissions) Notice: 1998 • AS/NZS CISPR 11: 2003 (Group 2, Class A)

(1) When product is marked, refer to <http://www.ab.com> for Declarations of Conformity Certificates.

Environmental Specifications

Attribute	Operational Range	Storage Range (nonoperating)
Ambient temperature	0...50 °C (32...122 °F)	-25...85 °C (-13...185 °F)
Relative humidity	5...95% noncondensing	5...95% noncondensing
Altitude	1000 m (3281 ft) 3000 m (9843) with derating	3000 m (9843 ft) during transport
Vibration	5...55 Hz @ 0.35 mm (0.014 in.) double amplitude, continuous displacement; 55...500 Hz @ 2.0 g peak constant acceleration (10 sweeps in each of 3 mutually perpendicular directions).	
Shock	15 g, 11 ms half-sine pulse (3 pulses in each direction of 3 mutually perpendicular directions)	

AC Line Filter Specifications

The Kinetix 3 servo drives were tested by using recommended line filters. Use of these filters is also needed to meet CE requirements.

Table 32 - AC Line Filter Specifications

AC Line Filter Cat. No.	Voltage	Phase	Current A @ 50 °C (122 °F)	Leakage Current mA	Weight, approx. kg (lb)	Humidity	Vibration	Operating Temperature
2090-XXLF-TC116	250V AC 50/60 Hz	Single	16	87	0.80 (1.7)	90%	10...200 Hz @ 1.8 g	-25...100 °C (-13...212 °F)
2090-XXLF-TC316	520V AC 50/60 Hz	Three		38				

Table 33 - AC Line Filter Selection

Drive Cat. No.	AC Line Filter Cat. No.
2071-AP0	2090-XXLF-TC116 (single-phase)
2071-AP1	
2071-AP2	
2071-AP4	
2071-AP8	2090-XXLF-TC316 (three-phase) 2090-XXLF-TC116 (single-phase)
2071-A10	2090-XXLF-TC316 (three-phase)
2071-A15	

Replacement Battery Specifications

The 3.6V lithium battery, when installed in a Kinetix 3 drive, provides multi-turn encoder operation to TL-Series (Bulletin TL, TLY, and TLAR) motors and actuators.


Lithium batteries have special storage, shipping, and disposal requirements. Review and comply with all relevant local, state, and country regulations dealing with the handling and disposal of these materials.

Table 34 - Replacement Battery Specifications

Attribute	Value
International size reference	1/2AA, ER14252
Nominal capacity @ 0.5 mA, to 2V	1.2 Ah
Rated Voltage	3.6V
Max Recommended continuous current	50 mA

Product Dimensions

This section contains product dimensions for your Kinetix 3 drives.

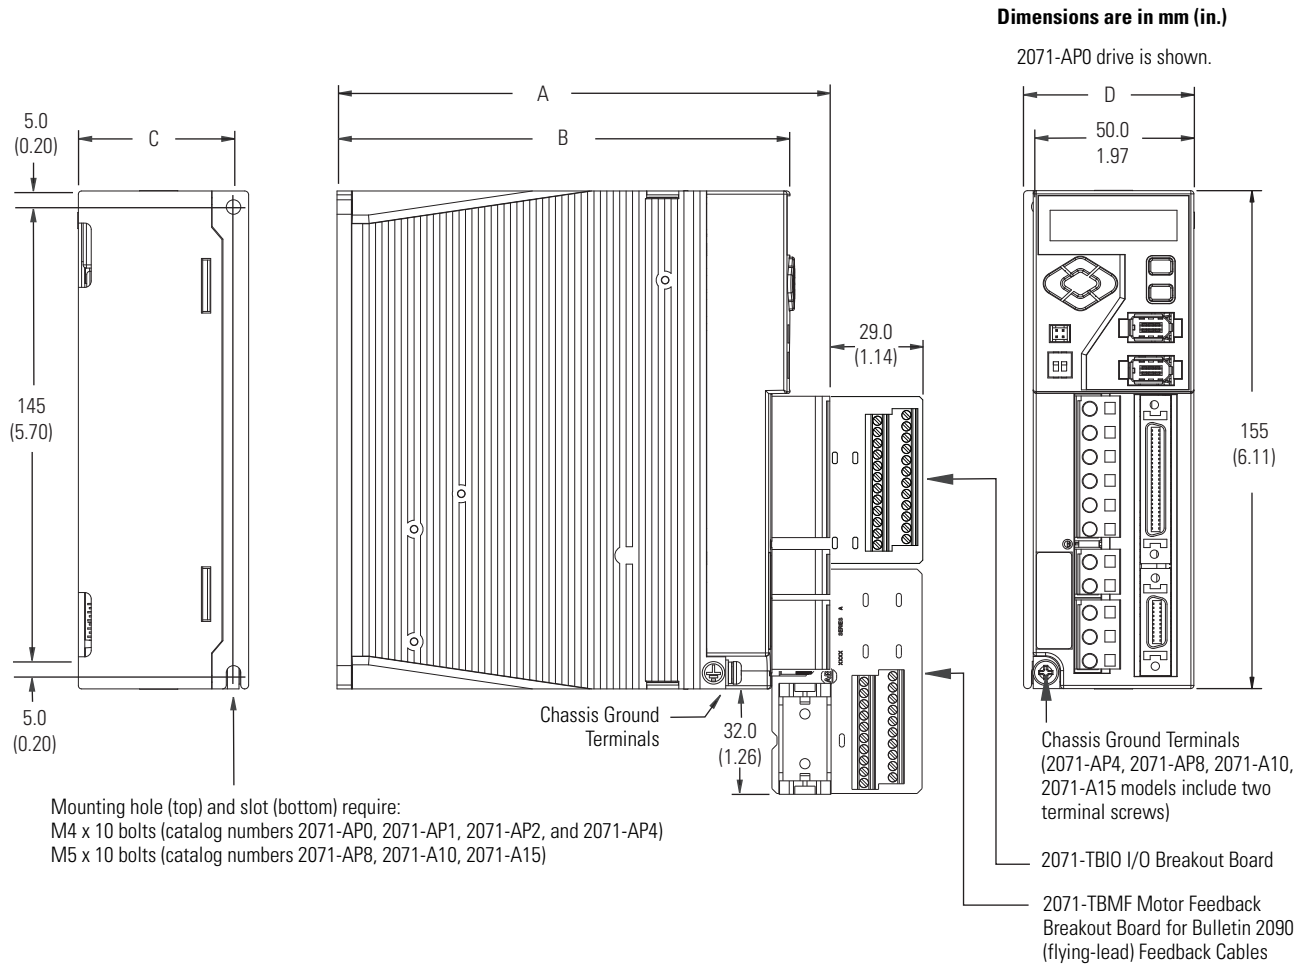

Drive Cat. No.	A mm (in.)	B mm (in.)	C mm (in.)	D mm (in.)
2071-AP0	153 (6.04)	141 (5.55)	48.3 (1.90)	53.0 (2.09)
2071-AP1				58.0 (2.29)
2071-AP2				
2071-AP4	198 (7.82)	186 (7.33)	59.0 (2.32)	81.0 (3.19)
2071-AP8				81.0 (3.19)
2071-A10				
2071-A15				

Notes:

Interconnect Diagrams

Introduction

This appendix provides wiring examples and system block diagrams for your Kinetix 3 drive system components.

Topic	Page
Introduction	111
Interconnect Diagram Notes	112

Interconnect Diagram Notes


This appendix provides wiring examples to assist you in wiring the Kinetix 3 system. The notes below apply to the wiring examples on the pages that follow.

Note	Information
1	For power wiring specifications, refer to Power Wiring Requirements on page 53 .
2	For input fuse sizes, refer to Fuse/Contactor Specifications on page 105 .
3	Place the AC (EMC) line filters as close to the drive as possible and do not route very dirty wires in the wireway. If routing in wireway is unavoidable, use shielded cable with shields grounded to the drive chassis and filter case. For AC line filter specifications, refer to AC Line Filter Specifications on page 108 .
4	Terminal block is required to make connections. Configure one pair from the Digital OUTPUT1... OUTPUT3, pins 41...44 or pins 47 and 48, as Brake in Ultraware software. For Digital Output specifications, refer to page 37 .
5	Contactor coil (M1) needs integrated surge suppressors for AC coil operation. Refer to Fuse/Contactor Specifications on page 105 .
6	Drive Enable input must be opened when main power is removed, or a drive fault occurs. A delay of at least 1.0 second must be observed before attempting to enable the drive after main power is restored.
7	Cable shield clamp must be used to meet CE requirements. No external connection to ground is required.
8	 ATTENTION: Implementation of safety circuits and risk assessment is the responsibility of the machine builder. Please reference international standards EN 1050 and EN 954 estimation and safety performance categories. For more information refer to Understanding the Machinery Directive, publication SHB-900 .
9	For motor cable specifications, refer to the Kinetix Motion Control Selection Guide, publication GMC-SG001 .
10	Motor power cables (2090-XXNPMF-xxSxx and 2090-CPBM6DF-16AAxx) have a drain wire that must be folded back under the cable shield clamp.
11	Digital Input 1 configured as SV-ON (Enable), Digital Output 1 configured as RDY (Ready)

Power Wiring Examples

You must supply input power components. The single-phase and three-phase line filters are wired downstream of fusing and the M1 contactor.


Figure 53 - Kinetix 3 Drive Wiring Example (230V single-phase input power)

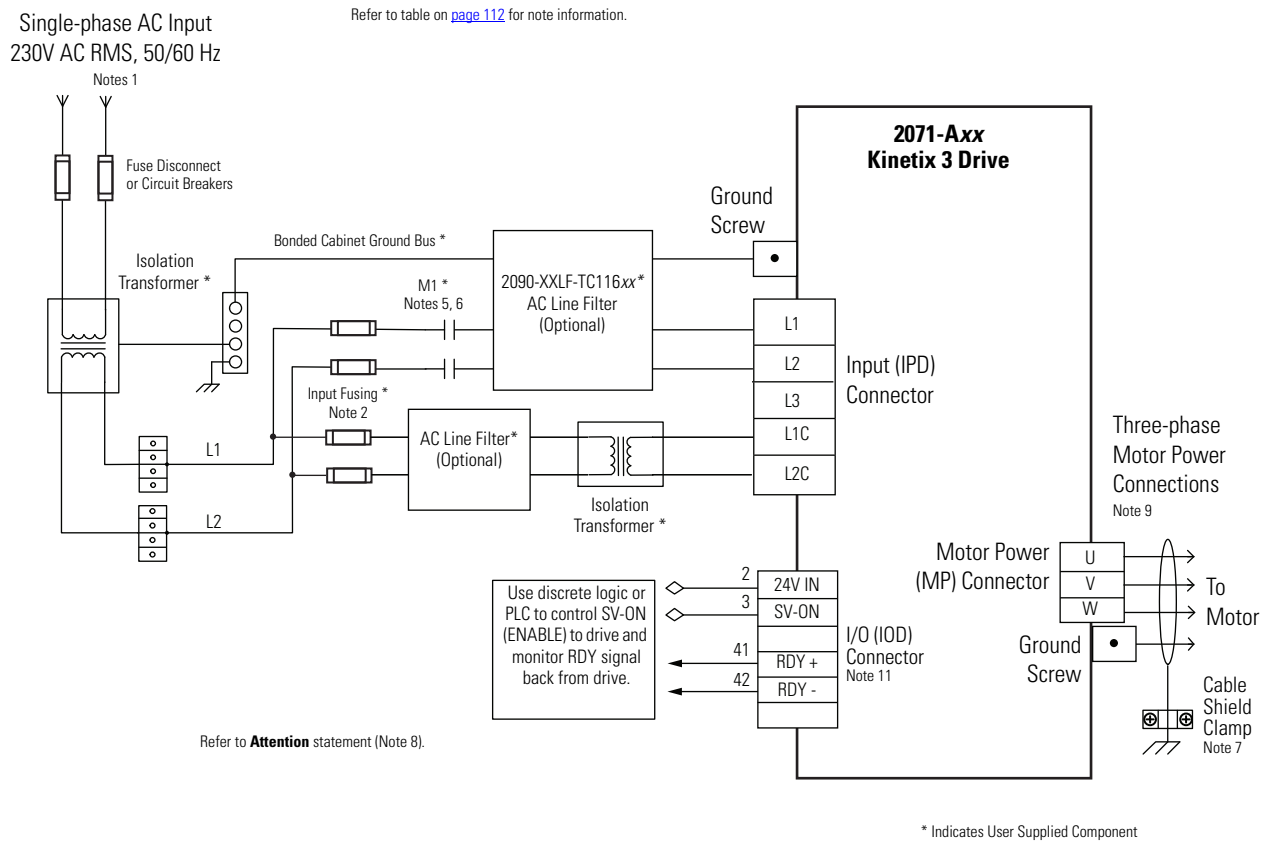

Kinetix 3 Drive/Rotary Motor Wiring Examples

These wiring diagrams apply to Kinetix 3 drives with compatible rotary motors.

Figure 54 - Kinetix 3 Drive (230V) Wiring Example with TL-Series (TLY-A) Motors

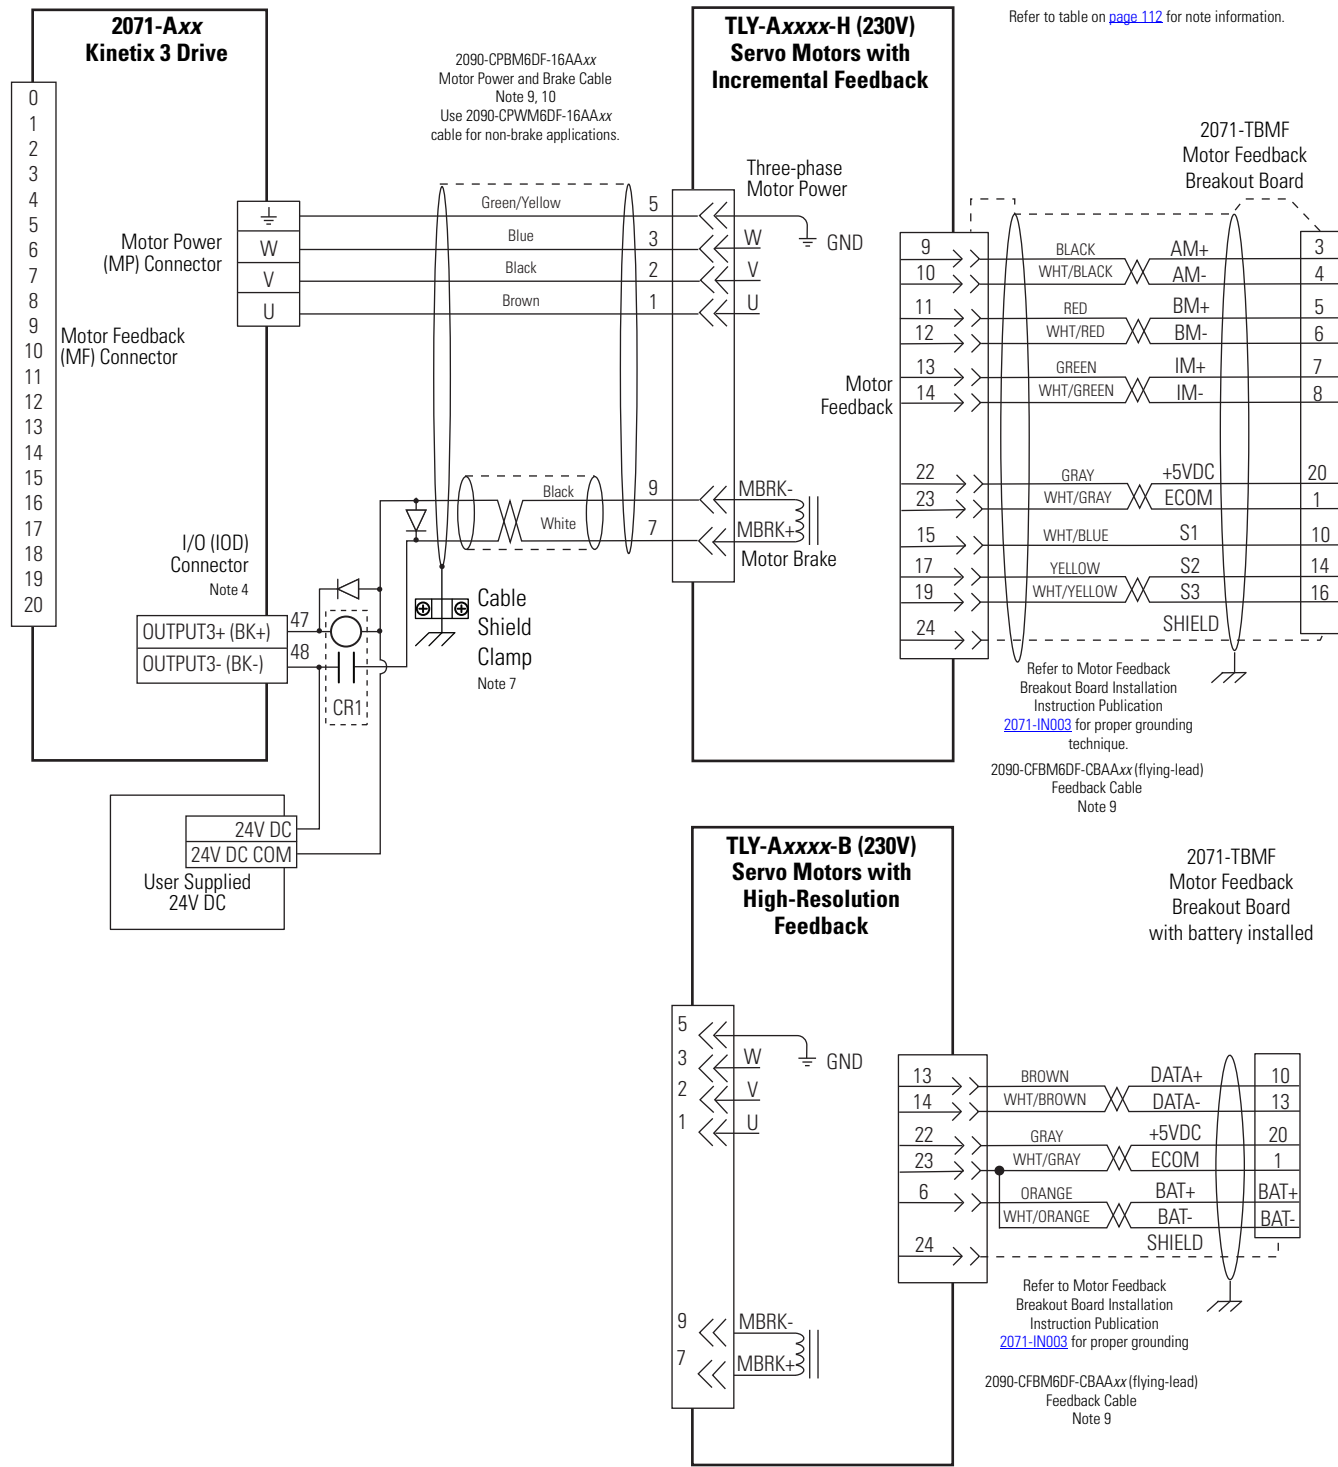

Kinetix 3 Drive/Linear Motor and Actuator Wiring Examples

These wiring diagrams apply to Kinetix 3 drives with compatible actuators and linear motors.

Figure 55 - Kinetix 3 Drive (230V) Wiring Example with MP-Series (Bulletin MPAS-A) Linear Stages and LDC-Series, LDL-Series Linear Motors


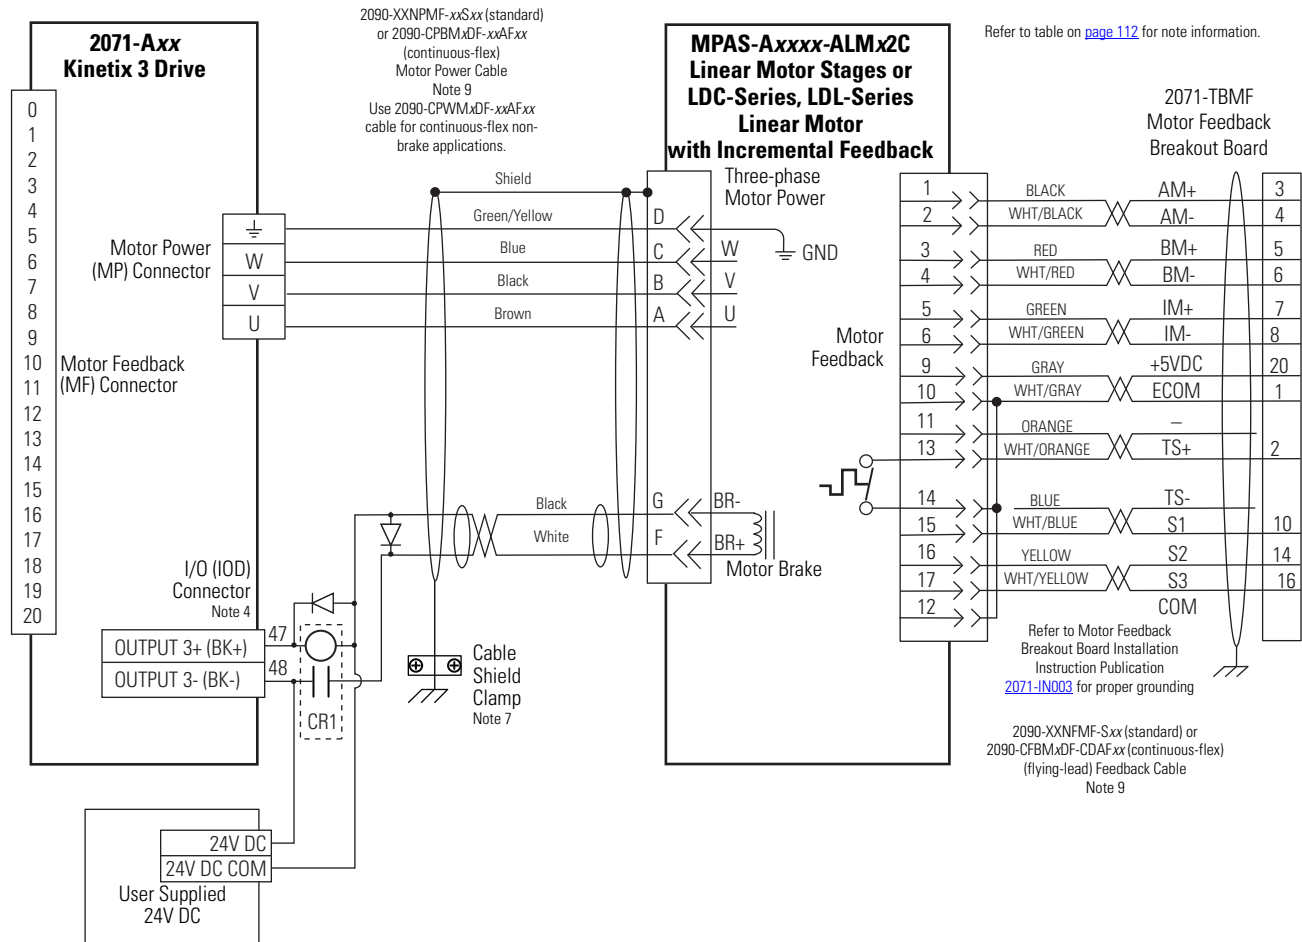



Figure 56 - Kinetix 3 (230V) Wiring Example with TL-Series (TLAR) Electric Cylinders

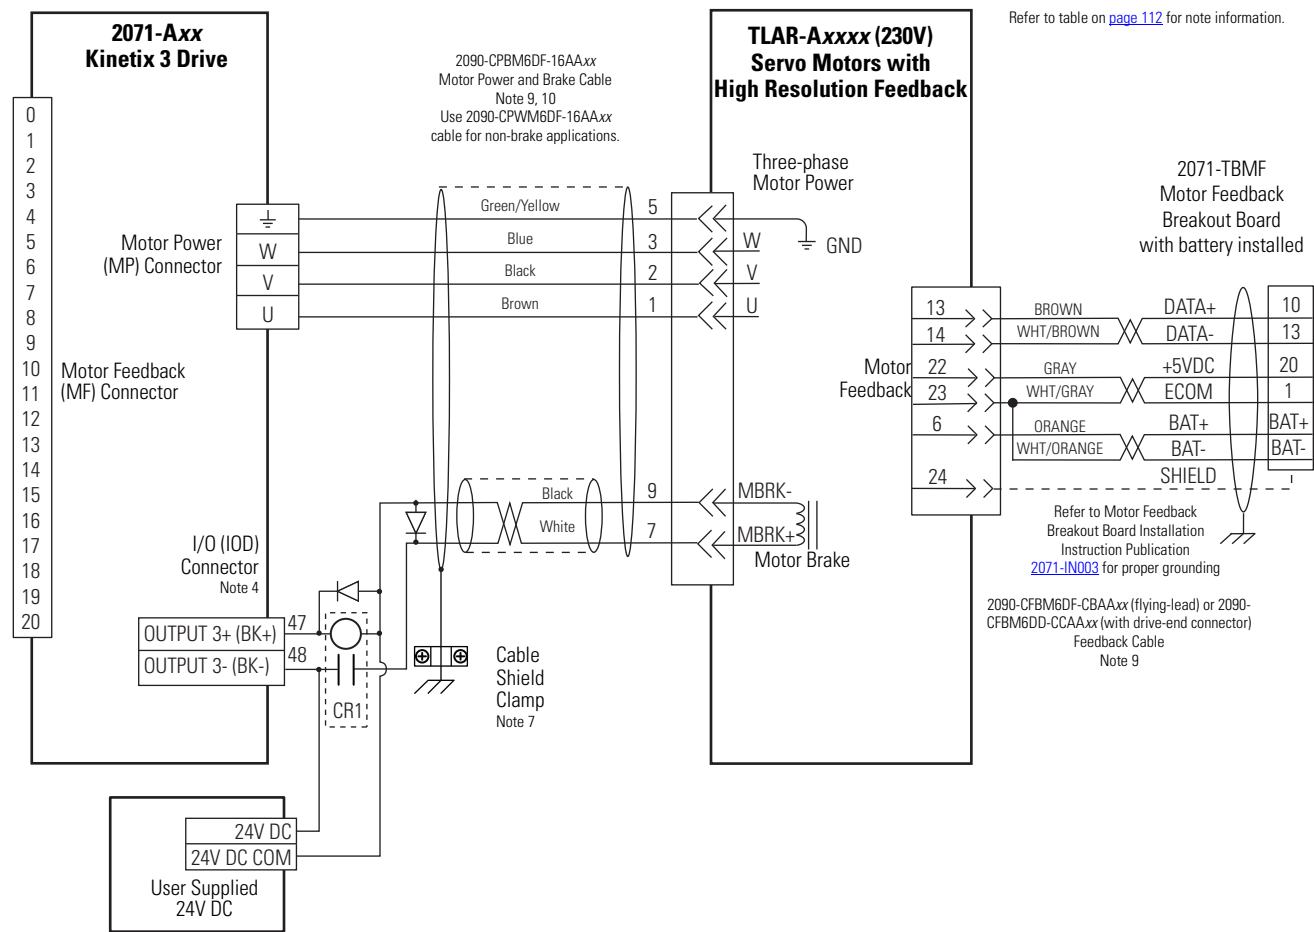

Kinetix 3 Drive/Micrologix Controller Wiring Examples


The Kinetix 3 drive accepts unipolar or bipolar inputs.

Table 35 - Kinetix 3 Drive Wiring Example to Analog Voltage Device

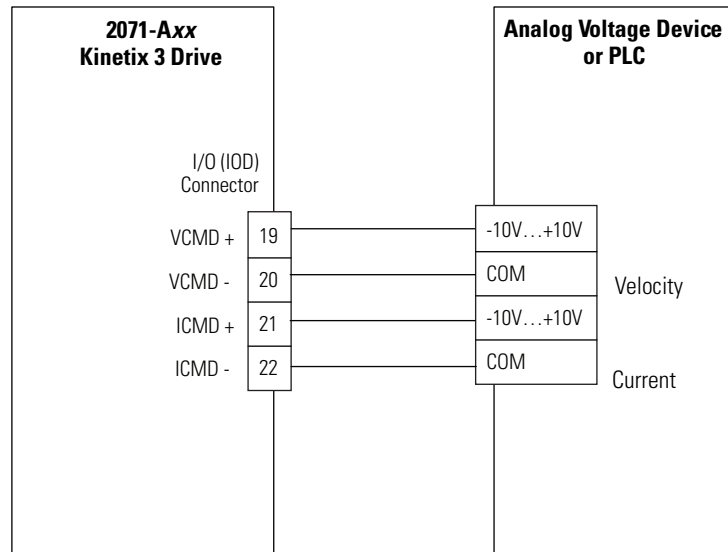

Commons should not be tied together. Use one control at a time. Choose either velocity or current control.

Table 36 - Kinetix 3 Drive Wiring Example to Pulse Train Output Device (PTO) or PLC

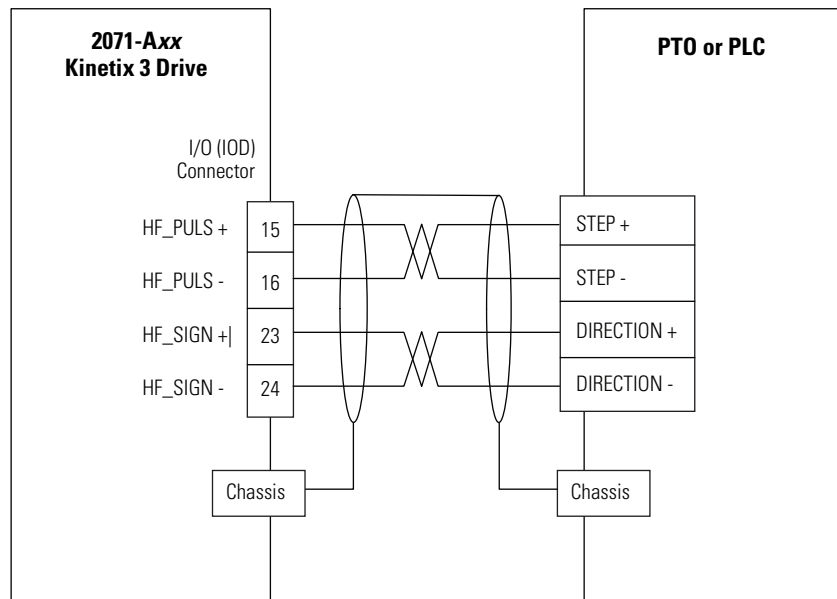

STEP +/- and DIRECTION +/- should be twisted pairs. Use shield cable and ground and bond it to the chassis.

Motor Brake Currents

Use these values to size the interposing relay required for your application.

Table 37 - Motor Brake Coil Currents Rated at < 1.0 A

Compatible Brake Motors/Actuators	Coil Current
TL/TLY-A110, TL/TLY-A120, and TL/TLY-A130	0.18...0.22 A
TL/TLY-A220 and TL/TLY-A230	0.33...0.41 A
TL/TLY-A2530, TL/TLY-A2540, and TL/TLY-A310	0.35...0.43 A

Numerics

17-bit serial encoder 29
230V single-phase input power 113

A

about this publication 7
additional resources 8
analog input 40
analog output 41
analog outputs branch 86
analog reference 40

B

bonding 18
 EMI (ElectroMagnetic Interference) 17
 high frequency energy 19
 subpanels 19
brake currents 118
building your own cables 46

C

cable
 length
 CE 14
 length, max 106
cables
 building your own cables 46
 maintenance 96
 maximum feedback cable length 106
 Modbus-RTU, cable length, RS-232 70
 shield clamp 62
 shield, EMC 57, 58, 59
CE compliance 12
certification
 specifications 107
clamp 62
clearance requirements 16
configuring
 drive detection 83
 Ultraware software 83
connecting
 feedback 63
 motor brake 61
 motor shield clamp 62
 premolded feedback cables 67
connector designators 25
contactor specifications
 105
control power status indicator 96
conventions used in this manual 7

D

digital inputs 34
digital inputs branch 85, 88

digital outputs 37
digital outputs branch 86
drive

 maintenance 96
 wiring IPD connector 55
 wiring MP connector 55

E

EMC
 cable shield 57, 58, 59
 motor ground termination 55
 motor ground termination at motor 55
EMI (ElectroMagnetic Interference)
 bonding 17
enclosure
 requirements 13
 sizing 15
encoders branch 85
environmental specifications 107
error displays 98

F

faults branch 86
feedback
 cables and pinouts 63
 specifications 29
feedback power supply 33
fuse 113
 selection 14
 specifications 105

G

general troubleshooting 96
grounded power configuration 47
grounding 51
 multiple subpanels 52
 system to subpanel 51

H

HF bonding 17
high frequency energy 19

I

I/O
 specifications 34, 37, 40
input power wiring
 3-phase Delta 47, 48
 3-phase WYE 47
 determining input power 47
 grounded power configuration 47
 single-phase 49
 single-phase amplifiers on 3-phase power 50
installing your drive

- bonding subpanels 19
- fuse 14
- fuse selection 14
- HF bonding 17
- system mounting requirements 13
- interconnect diagram**
 - 230V single-phase input power 113
- interconnect diagrams**
 - notes 112

K

- Kinetix 3**
 - I/O breakout board 108
 - maintenance 95
 - monitor mode 76
 - specifications
 - contactor ratings 105
 - troubleshooting
 - status indicators 95

L

- linear motor** 115
- linear stage** 115

M

- main power status indicator** 96
- maintenance**
 - cleaning the drive 96
 - inspecting cables 96
 - troubleshooting 96
- maximum feedback cable length** 106
 - specifications 106
- Modbus-RTU, RS-232, RS-485, serial communications** 70
- mode configuration** 85
- mode displays**
 - monitor 76
- monitor branch** 86
- motor brake** 21
- motor branch** 85
- motors**
 - brake wiring 61
 - feedback pin-outs 64
 - ground termination 55
 - power wiring
 - 3-phase and brake 59
 - 3-phase only 57
 - TL-Series 56
 - selecting 87
 - shield clamp wiring 62
 - testing 91, 92
 - thermal specifications 31
 - tuning 88
- mounting**
 - hardware 22
 - Kinetix 3 drive 22
 - torque 22

N

- noise** 20

O

- oscilloscope**
 - branch 86

P

- panel**
 - requirements 13
- pin-outs**
 - motor feedback connector 64
- power supply, feedback** 33
- premolded feedback cables** 67
- publications, related** 8

R

- related publications** 8
- requirements**
 - clearance 16
- routing power and signal wiring** 46

S

- selecting a motor** 87
- service information branch** 86
- shield clamp** 62
- shunt resistor**
 - wiring requirements 54
- specification fuse** 105
- specifications**
 - analog reference inputs 40
 - certifications 107
 - digital inputs 34
 - digital outputs 37
 - environmental 107
 - feedback
 - motor , general 29
 - power supply 33
 - fuse 105
 - Kinetix 3
 - contactor ratings 105
 - I/O breakout board 108
 - maximum feedback cable length 106
 - motor feedback
 - 17-bit serial encoder 33
 - generic TTL 32
 - motor thermal 31
 - weight 107
- status display panel** 96
- status indicator display**
 - fault codes 97
 - operational 96
 - warning messages 97
- system mounting requirements** 13

system overview 10

T

testing your axis 91, 92

TLY motor 114

training 7

troubleshooting

error displays 97

fault codes 97

status indicator display 96

status indicators 95

warning messages 97

tuning branch 85

tuning your axis 88

U

Ultraware software 83

analog outputs branch 86

digital inputs branch 85

digital outputs branch 86

encoders branch 85

faults branch 86

mode configuration 85

monitor branch 86

motor branch 85

oscilloscope branch 86

service information branch 86

tuning branch 85

workspace 84

W

warning messages 97

weight specifications 107

who should use this manual 7

wiring

analog device 117

building your own cables 46

drive

IPD connector 55

MP connector 55

grounded power configuration 47

grounding 51

input power

determining type 47

linear actuator 115

linear motor 115

linear stage 115

Micrologix 117

motor brake 61

motor cable shield clamp 62

motor power 56, 57, 59

PTO device 117

requirements 45

shunt resistor 54

routing power and signal wiring 46

TLY motor 114

wiring guidelines 54

Rockwell Automation Support

Rockwell Automation provides technical information on the Web to assist you in using its products.

At <http://www.rockwellautomation.com/support/>, you can find technical manuals, a knowledge base of FAQs, technical and application notes, sample code and links to software service packs, and a MySupport feature that you can customize to make the best use of these tools.

For an additional level of technical phone support for installation, configuration, and troubleshooting, we offer TechConnect support programs. For more information, contact your local distributor or Rockwell Automation representative, or visit <http://www.rockwellautomation.com/support/>.

Installation Assistance

If you experience a problem within the first 24 hours of installation, review the information that is contained in this manual. You can contact Customer Support for initial help in getting your product up and running.

United States or Canada	1.440.646.3434
Outside United States or Canada	Use the Worldwide Locator at http://www.rockwellautomation.com/support/americas/phone_en.html , or contact your local Rockwell Automation representative.

New Product Satisfaction Return

Rockwell Automation tests all of its products to ensure that they are fully operational when shipped from the manufacturing facility. However, if your product is not functioning and needs to be returned, follow these procedures.

United States	Contact your distributor. You must provide a Customer Support case number (call the phone number above to obtain one) to your distributor to complete the return process.
Outside United States	Please contact your local Rockwell Automation representative for the return procedure.

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete this form, publication [RA-DU002](#), available at <http://www.rockwellautomation.com/literature/>.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 2071-UM001A-EN-P - September 2010

Copyright © 2010 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.



Allen-Bradley

Kinetix 3 Component Servo Drives

User Manual

